aiwa
SERVICE

NSX-SZ40 EZ
NSX-SZ42 EZ

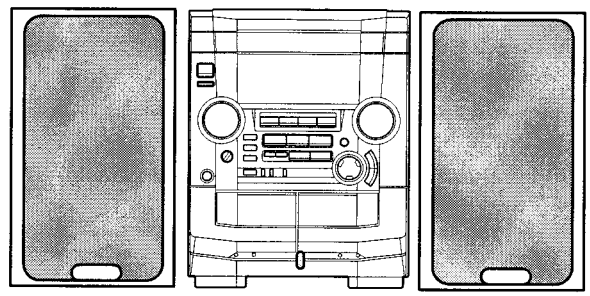

SERVICE MANUAL

COMPACT DISC
STEREO SYSTEM

BASIC TAPE MECHANISM : 6ZM-3 PR2NM
BASIC CD MECHANISM : AZG-1 ZA3RDM

SYSTEM	CD CASSEIVER	SPEAKER	REMOTE CONTROLLER
NSX–SZ40	CX–NSZ40	SX–NSZ51	RC–ZAS01
NSX–SZ42	CX–NSZ42	SX–NSZ53	

• If requiring information about the CD mechanism, see Service Manual of AZG-1, (S/M Code No. 09-001-335-3NC).

aiwa

SPECIFICATIONS

Main unit CX-NSZ40, CX-NSZ42

FM tuner section

Tuning range	87.5 MHz to 108 MHz
Usable sensitivity (IHF)	16.8 dBf
Antenna terminal	75 ohms (unbalanced)

AM (MW) tuner section

Tuning range	531 kHz to 1602 kHz (9 kHz step) 530 kHz to 1710 kHz (10 kHz step)
Usable sensitivity	350 µV/m
Antenna	Loop antenna

LW tuner section

Tuning range	144 kHz to 290 kHz
Usable sensitivity	1400 µV/m
Antenna	Loop antenna

Amplifier section

Power output	Rated: 80 W + 80 W (6 ohms, T.H.D. 1 %, 1 kHz/DIN 45500) Reference: 100 W +100 W (6 ohms, T.H.D. 10 %, 1 kHz/DIN 45324) DIN MUSIC POWER: 200 W + 200 W
Total harmonic distortion	0.1 % (45 W, 1 kHz, 6 ohms, DIN AUDIO)
Inputs	VIDEO/AUX: 500 mV
Outputs	SPEAKERS: accept speakers of 6 ohms or more SURROUND SPEAKERS: accept speakers of 8 ohms to 16 ohms PHONES (stereo jack): accepts headphones of 32 ohms or more

Cassette deck section

Track format	4 tracks, 2 channels stereo
Frequency response	50 Hz – 15000 Hz
Recording system	AC bias
Heads	Deck 1: Playback head x 1 Deck 2: Recording/playback head x 1, erase head x 1

Compact disc player section

Laser	Semiconductor laser (λ = 780 nm)
D-A converter	1 bit dual
Signal-to-noise ratio	85 dB (1 kHz, 0 dB)
Harmonic distortion	0.05 % (1 kHz, 0 dB)
Wow and flutter	Unmeasurable

General

Power requirements	230 V AC, 50 Hz
Power consumption	150 W
Power consumption in standby mode	If the power-economizing mode is ECO OFF: 20 W If the power-economizing mode is ECO ON or ECO AUTO: 0.9 W
Dimensions of main unit (W x H x D)	260 x 326 x 345 mm
Weight of main unit	8.3 kg

Speaker system SX-NSZ51, SX-NSZ53

Speaker system	3 way, Bass reflex (magnetic shielded type)
Speaker units	Woofer: 140 mm cone type Tweeter: 60 mm cone type Super tweeter: 20 mm ceramic type
Impedance	6 ohms
Sensitvity	87 dB/W/m
Dimensions (W x H x D)	240 x 324 x 270 mm
Weight	4.0 kg

- Design and specifications are subject to change without notice.
- The word "BBE" and the "BBE symbol" are trademarks of BBE Sound, Inc.
- Under license from BBE Sound, Inc.

ACCESSORIES LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NF8-927-010		IB,EZ(9L)M 42(RDS)<42>
1	8A-NF8-928-010		IB,EZ(9L)M 40<40>
2	8Z-NF8-702-010		RC UNIT,RC-ZAS01
3	87-006-225-010		ANT,LOOP ANT NC2
4	87-A90-118-010		ANT,WIRE FM(Z)

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

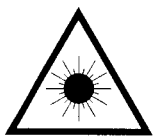

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynling laserst ling ved bning, n r sikkerhedsafbrydere er ude af funktion. Undg uds ttelse for str ling.

VAROITUS!

Laiteen K ytt minen muulla kuin t ss k ytt ohjeessa mainitulla tavalla saattaa altistaa k yt-t j n turvallisuusluokan 1 ylitt v lle n kym tt m lle lasers teilylle.

VARNING!

Om apparaten anv nds p annat s tt n vad som specificeras i denna bruksanvisning, kan anv ndaren uts ttas f r osynling laserstr lning, som verskrider gr nsen f r laserklass 1.

Precaution to replace Optical block

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

1) After the connection, remove solder shown in the figure below.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION

L'utilisation de commandes, r glages ou proc dures autres que ceux sp cifi s peut entra ner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserst ling ved bning, n r sikkerhedsafbrydereer ude af funktion. Undg uds ttelse for str ling.

This Compact Disc player is classified as a CLASS 1 LASER product.
The CLASS 1 LASER PRODUCT label is located on the rear exterior.

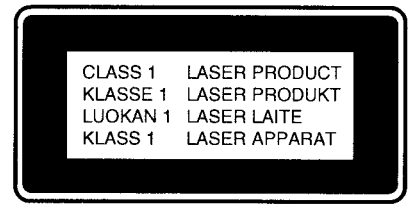

ZA3/ZA4 (KSS-213F) MODEL

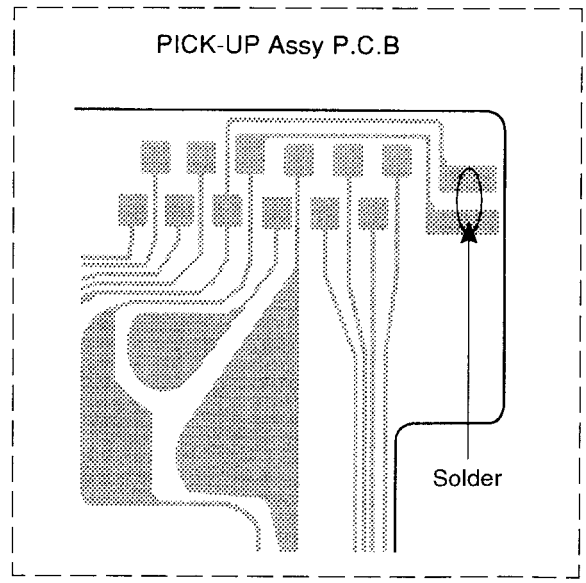

ZA8/ZD8 MODEL

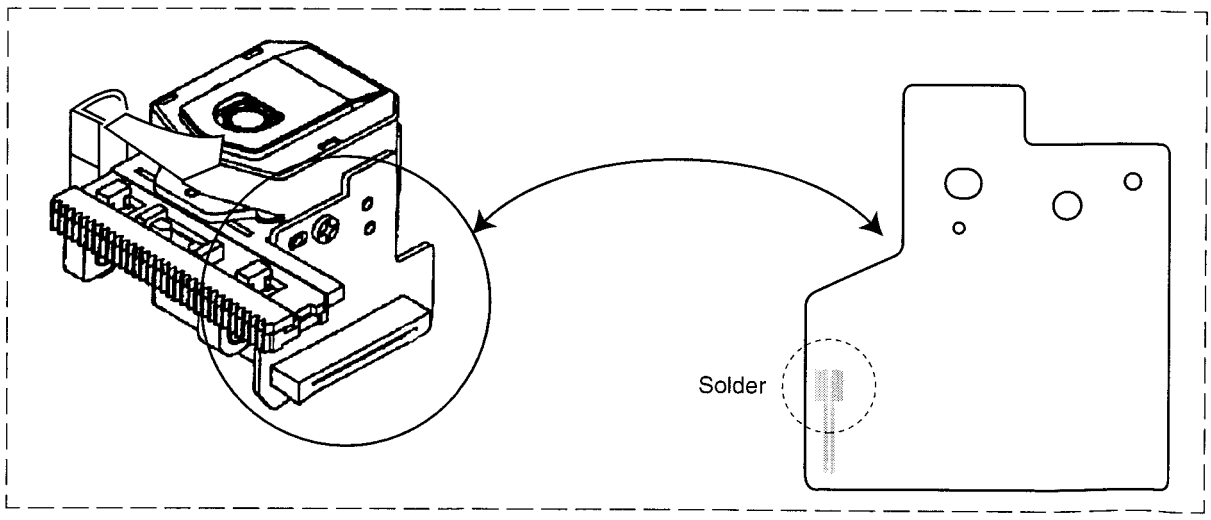

NOTE ON BEFORE STARTING REPAIR

1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, secondary defect can occur.
In order to prevent the secondary trouble, perform the following measures before starting repair work.

Discharge procedure

① Remove the AC power cord.
② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connect the other end of the lead wire to metal chassis.
③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
④ Contact the same end of the discharging resistor as step **3** to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
⑤ Check that voltage across C101 and C102 has decreased to 1 V or less using a multimeter or an oscilloscope.

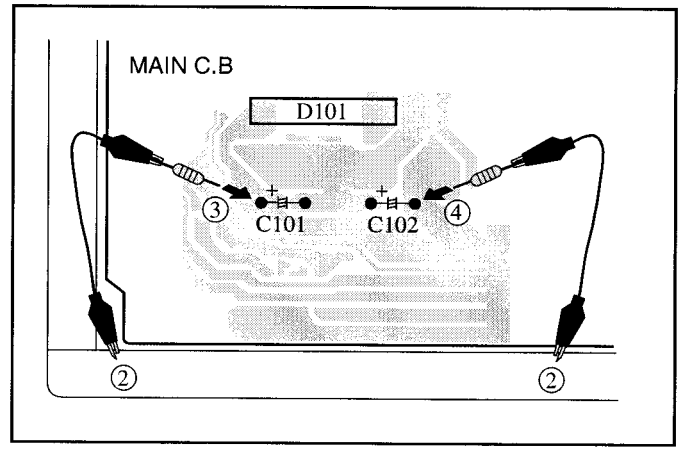

Select a discharging resistor referring to the following table.

Charging voltage (V) (C101, 102)	Discharging resistor (Ω)	Rated power (W)	Parts number
25-48	100	3	87-A00-247-090
49-140	220	5	87-A00-232-090

Note: The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitors on schematic diagram before starting the discharging work.

2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is "H", the MICROCOMPUTER is judged to be operating correctly. When this terminal is "L", the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.
When the MICROCOMPUTER is not defective, the HOLD terminal can also go "L" when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to "L".

- Good or no good judgement of the MICROCOMPUTER

① Turn on the AC main power.
② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the "H" level or not.
③ When the HOLD terminal is "L" level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

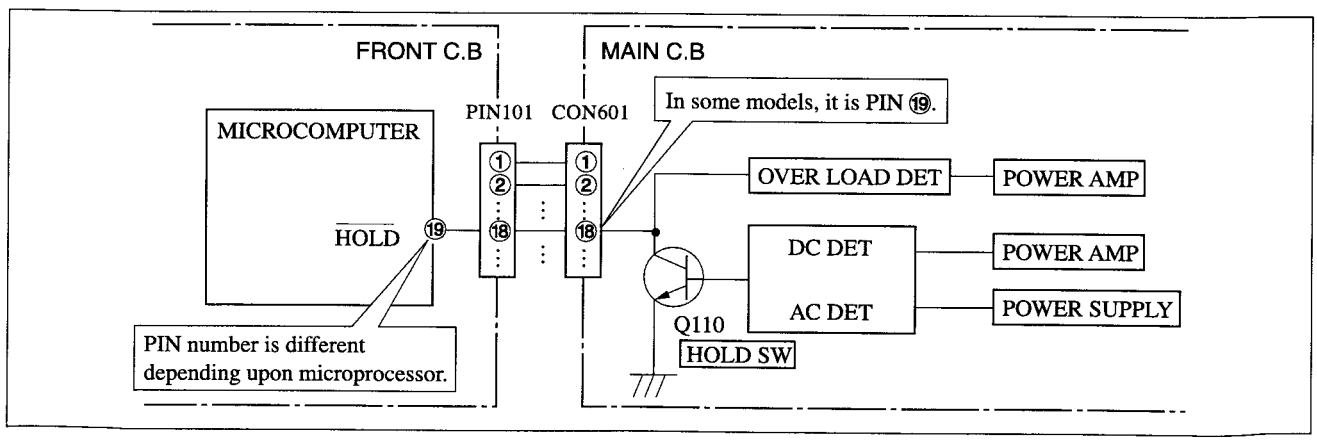

Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.
When the above described phenomenon occurs, it can lead to wrong judgement as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.
① Remove the AC power cord.

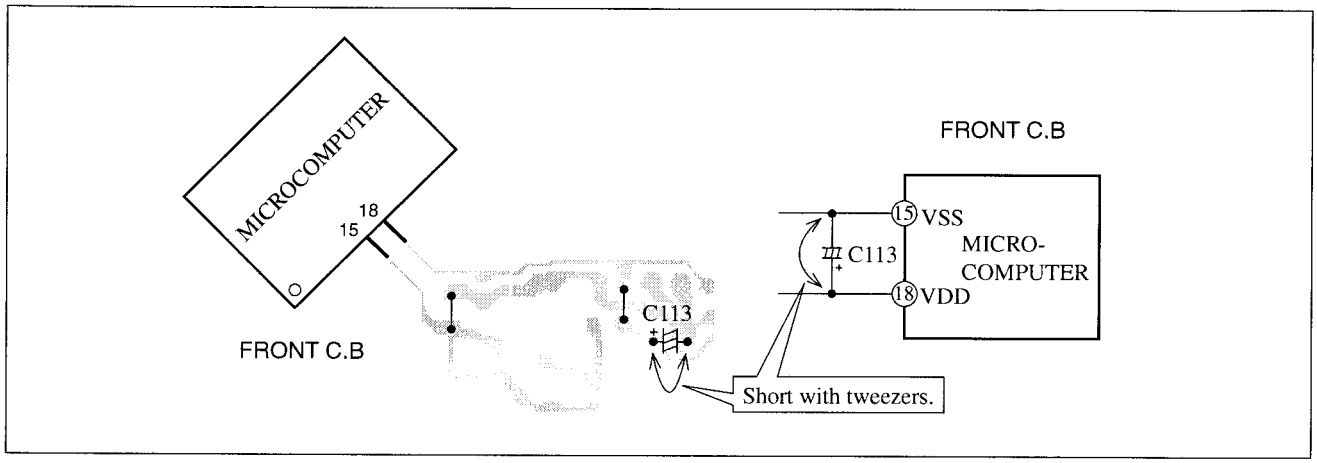

Fig-2-2

② Short both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

Note: The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
IC			
	87-020-454-010		IC,DN6851
	87-A21-355-010		IC,STK490-140
	8A-NF8-620-010		C-IC,LC866548V-5R49<40>
	8A-NF8-621-010		C-IC,LC866560W-5R50<42>
	87-A21-629-010		IC,SPS-442-1-N
	87-A21-419-040		C-IC,NJM14558MD-TE2
	87-A21-577-040		C-IC,M61506FP
	87-070-289-040		C-IC,BU2092F
	87-A21-401-040		C-IC,M61503FP
	87-A21-560-010		IC,LA1844L-A
	87-A20-440-040		C-IC,BU1920FS<42>
	87-070-127-110		IC,LC72131D
TRANSISTOR			
	87-026-609-080		TR,KTA1266GR
	89-213-702-010		TR,2SB1370E
	87-026-610-080		TR,KTC3198GR
	87-A30-076-080		C-TR,2SC3052F
	87-A30-075-080		C-TR,2SA1235F
	87-026-245-080		TR,DTC114ES
	87-A30-198-080		TR,KTC3199GR
	87-A30-107-070		C-TR,CMBT5401
	87-A30-106-040		C-TR,CMBT5551
	87-A30-087-080		C-FET,2SK2158
	87-A30-074-080		C-TR,RT1P 141C
	87-A30-318-080		TR,CSA952K
	87-A30-091-080		FET,2SJ460
	87-A30-329-080		TR,CD1585BC
	87-A30-090-080		FET,2SK2541
	87-A30-104-080		C-TR,RT1N 441C
	87-A30-468-080		C-TR,KRC102S-RTK
	87-A30-484-080		C-TR,KRA102S
	89-333-317-880		TR,2SC3331(T/U)
	89-327-143-080		C-TR,2SC2714O
	87-A30-489-080		C-TR,KRA107S
	87-A30-086-070		C-TR,CSD1306E
	89-503-602-080		C-FET,2SK360E
	87-A30-234-080		TR,CSC4115BC
DIODE			
	87-A40-393-090		DIODE,1N5402GW(F20)
	87-020-465-080		DIODE,1SS133
	87-A40-547-090		DIODE,D5SBA20
	87-A40-553-080		DIODE,1N4003 LES
	87-A40-776-080		ZENER,UZ27BSD
	87-A40-764-080		ZENER,UZ10BSC
	87-A40-270-080		C-DIODE,MC2838
	87-A40-313-080		C-DIODE,MC2840
	87-A40-269-080		C-DIODE,MC2836
	87-A40-768-080		ZENER,UZ16BSA
	87-A40-752-080		ZENER,UZ6.2BSC
	87-A40-802-080		ZENER,UZ5.1BSC
	87-A40-739-080		ZENER,UZ2.7BSA
	87-017-149-080		ZENER,HZS6A2L
MAIN C.B			
C0003	87-012-368-080		C-CAP,S 0.1-50 Z F
C0004	87-012-368-080		C-CAP,S 0.1-50 Z F
C0005	87-012-368-080		C-CAP,S 0.1-50 Z F
C0006	87-012-368-080		C-CAP,S 0.1-50 Z F
C0015	87-012-368-080		C-CAP,S 0.1-50 Z F
C0016	87-012-368-080		C-CAP,S 0.1-50 Z F
C0017	87-012-368-080		C-CAP,S 0.1-50 Z F
C0018	87-012-368-080		C-CAP,S 0.1-50 Z F
C0019	87-016-520-000		CAP,E 3300-65 M SMG
C0020	87-016-520-000		CAP,E 3300-65 M SMG
C0023	87-016-658-000		CAP,E 4700-35 M SMG
C0024	87-016-658-000		CAP,E 4700-35 M SMG
C0025	87-010-408-080		CAP,E 47-50 M 11L SME
C0026	87-010-247-080		CAP,E 100-50 M SME
C0030	87-010-430-080		CAP,E 100-63
C0031	87-010-263-080		CAP,E 100-10 M 11L SME
C0032	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0034	87-010-260-080		CAP,E 47-25 M 11L SME
C0035	87-010-380-080		CAP,E 47-16 M 11L SME
C0036	87-010-381-080		CAP,E 330-16 M SME
C0038	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0060	87-010-403-080		CAP,E 3.3-50 M 11L SME
C0061	87-010-260-080		CAP,E 47-25 M 11L SME
C0101	87-010-183-080		C-CAP,S 2700P-50 K B GRM
C0102	87-010-183-080		C-CAP,S 2700P-50 K B GRM
C0103	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0104	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0107	87-010-405-080		CAP,E 10-50 M 11L SME
C0108	87-010-405-080		CAP,E 10-50 M 11L SME
C0109	87-010-179-080		C-CAP,S 1200P-50 K B GRM
C0110	87-010-179-080		C-CAP,S 1200P-50 K B GRM
C0111	87-010-405-080		CAP,E 10-50 M 11L SME
C0112	87-010-405-080		CAP,E 10-50 M 11L SME
C0113	87-A12-180-080		CAP,E 10-63 M 105 KME
C0114	87-A12-180-080		CAP,E 10-63 M 105 KME
C0119	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0120	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0123	87-010-176-080		C-CAP,S 680P-50 J SL
C0124	87-010-176-080		C-CAP,S 680P-50 J SL
C0125	87-012-368-080		C-CAP,S 0.1-50 Z F
C0126	87-012-368-080		C-CAP,S 0.1-50 Z F
C0127	87-012-368-080		C-CAP,S 0.1-50 Z F
C0128	87-012-368-080		C-CAP,S 0.1-50 Z F
C0129	87-010-191-080		C-CAP,S 0.015-50 Z F GRM
C0130	87-010-191-080		C-CAP,S 0.015-50 Z F GRM
C0131	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0132	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0133	87-010-186-080		C-CAP,S 4700P-50 K B C2012
C0134	87-010-379-080		CAP,E 22-16 M 11L SME
C0140	87-010-182-080		C-CAP,S 2200P-50 K B C2012
C0141	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0237	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0238	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0301	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0302	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0303	87-010-179-080		C-CAP,S 1200P-50 K B GRM
C0304	87-010-179-080		C-CAP,S 1200P-50 K B GRM
C0307	87-010-263-080		CAP,E 100-10 M 11L SME
C0308	87-010-263-080		CAP,E 100-10 M 11L SME
C0309	87-010-318-080		C-CAP,S 47P-50 J CH GRM
C0310	87-010-318-080		C-CAP,S 47P-50 J CH GRM
C0313	87-010-188-080		C-CAP,S 6800P-50 K B C2012
C0314	87-010-188-080		C-CAP,S 6800P-50 K B C2012
C0315	87-010-263-080		CAP,E 100-10 M 11L SME
C0317	87-010-546-080		CAP,E 0.33-50 M 11L SME
C0318	87-010-546-080		CAP,E 0.33-50 M 11L SME
C0326	87-010-198-080		C-CAP,S 0.022-25 K B C2012
C0327	87-012-368-080		C-CAP,S 0.1-50 Z F
C0360	87-010-401-080		CAP,E 1-50 M 11L SME
C0365	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0399	87-012-140-080		C-CAP,S 470P-50 J CH
C0401	87-010-544-080		CAP,E 0.1-50 M 11L SME
C0402	87-010-544-080		CAP,E 0.1-50 M 11L SME
C0403	87-010-321-080		C-CAP,S 82P-50 J CH
C0404	87-010-321-080		C-CAP,S 82P-50 J CH
C0405	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0406	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0407	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0408	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0409	87-010-182-080		C-CAP,S 2200P-50 K B C2012

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
C0410	87-010-182-080		C-CAP,S 2200P-50 K B C2012
C0411	87-010-405-080		CAP,E 10-50 M 11L SME
C0412	87-010-405-080		CAP,E 10-50 M 11L SME
C0452	87-010-382-080		CAP,E 22-25 M 11L SME
C0453	87-010-183-080		C-CAP,S 2700P-50 K B GRM
C0454	87-010-183-080		C-CAP,S 2700P-50 K B GRM
C0455	87-010-183-080		C-CAP,S 2700P-50 K B GRM
C0456	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0458	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0459	87-010-175-080		C-CAP,S 560P-50 J SL
C0460	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0461	87-012-158-080		C-CAP,S 390P-50 J CH GRM
C0462	87-012-158-080		C-CAP,S 390P-50 J CH GRM
C0521	87-010-546-080		CAP,E 0.33-50 M 11L SME
C0522	87-010-546-080		CAP,E 0.33-50 M 11L SME
C0605	87-010-184-080		C-CAP,S 3300P-50 K B C2012
C0606	87-010-184-080		C-CAP,S 3300P-50 K B C2012
C0609	87-010-213-080		C-CAP,S 0.015-25 K B GRM
C0610	87-010-213-080		C-CAP,S 0.015-25 K B GRM
C0611	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0612	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0613	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0614	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0615	87-010-154-080		C-CAP,S 10P-50 D CH GRM
C0616	87-010-385-080		CAP,E 220-25 M SME
C0617	87-010-385-080		CAP,E 220-25 M SME
C0618	87-010-405-080		CAP,E 10-50 M 11L SME
C0620	87-010-263-080		CAP,E 100-10 M 11L SME
C0630	87-016-669-080		C-CAP,S 0.1-25 K B
C0631	87-010-185-080		C-CAP,S 3900P-50 K B
C0632	87-010-185-080		C-CAP,S 3900P-50 K B
C0633	87-016-369-080		C-CAP,S 0.033-25 K B GRM
C0634	87-016-369-080		C-CAP,S 0.033-25 K B GRM
C0661	87-012-157-080		C-CAP,S 330P-50 J CH GRM
C0662	87-012-157-080		C-CAP,S 330P-50 J CH GRM
C0669	87-010-180-080		C-CAP,S 1500P-50 K B C2012
C0670	87-010-180-080		C-CAP,S 1500P-50 K B C2012
C0677	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0771	87-010-263-080		CAP,E 100-10 M 11L SME
C0772	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0779	87-010-186-080		C-CAP,S 4700P-50 K B C2012
C0780	87-010-186-080		C-CAP,S 4700P-50 K B C2012
C0782	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0783	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0784	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0785	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0786	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0788	87-010-149-080		C-CAP,S 5P-50 C CH GRM
C0789	87-A10-801-080		C-CAP,S 0.022-16 J B CM
C0790	87-A10-801-080		C-CAP,S 0.022-16 J B CM
C0791	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0792	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0793	87-010-404-080		CAP,E 4.7-50 M 11L SME
C0794	87-012-140-080		C-CAP,S 470P-50 J CH<40>
C0794	87-012-155-080		C-CAP,S 180P-50 J CH GRM<42>
C0795	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0796	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0797	87-010-405-080		CAP,E 10-50 M 11L SME
C0798	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0799	87-010-407-080		CAP,E 33-50 M 11L SME
C0800	87-012-369-080		C-CAP,S 0.047-50 Z F
C0801	87-010-403-080		CAP,E 3.3-50 M 11L SME
C0802	87-010-194-080		C-CAP,S 0.047-25 Z F
C0803	87-010-198-080		C-CAP,S 0.022-25 K B C2012
C0804	87-010-263-080		CAP,E 100-10 M 11L SME
C0807	87-010-400-080		CAP,E 0.47-50 M 11L SME
C0808	87-010-401-080		CAP,E 1-50 M 11L SME
C0809	87-010-401-080		CAP,E 1-50 M 11L SME
C0810	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0814	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0815	87-010-400-080		CAP,E 0.47-50 M 11L SME
C0816	87-010-400-080		CAP,E 0.47-50 M 11L SME
C0818	87-010-180-080		C-CAP,S 1500P-50 K B C2012
C0821	87-010-405-080		CAP,E 10-50 M 11L SME
C0823	87-012-349-080		C-CAP,S 1000P-50 J CH GRM
C0824	87-010-404-080		CAP,E 4.7-50 M 11L SME
C0825	87-010-596-080		C-CAP,S 0.047-16 K R C2012
C0831	87-010-406-080		CAP,E 22-50 M 11L SME
C0842	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0844	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0850	87-010-260-080		CAP,E 47-25 M 11L SME
C0851	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0852	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0853	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0858	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0859	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0860	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0869	87-010-197-080		C-CAP,S 0.01-25 K B C2012<42>
C0870	87-018-131-080		CAP,TC U 1000P-50 K B UP050<42>
C0871	87-012-156-080		C-CAP,S 220P-50 J CH GRM<42>
C0872	87-012-156-080		C-CAP,S 220P-50 J CH GRM<42>
C0873	87-012-140-080		C-CAP,S 470P-50 J CH<42>
C0874	87-010-405-080		CAP,E 10-50 M 11L SME<42>
C0875	87-010-196-080		C-CAP,S 0.1-25 Z F C2012<42>
C0876	87-010-405-080		CAP,E 10-50 M 11L SME<42>
C0877	87-010-197-080		C-CAP,S 0.01-25 K B C2012<42>
C0878	87-010-316-080		C-CAP,S 33P-50 J CH GRM<42>
C0879	87-010-314-080		C-CAP,S 22P-50 J CH GRM<42>
C0940	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0942	87-010-149-080		C-CAP,S 5P-50 C CH GRM
C0947	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0948	87-012-140-080		C-CAP,S 470P-50 J CH
C0952	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0957	87-010-311-080		C-CAP,S 12P-50 J CH GRM
C0958	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0959	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0960	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0962	87-010-401-080		CAP,E 1-50 M 11L SME
C0963	87-015-785-080		C-CAP, 0.1-25 Z F C3216
C0971	87-010-381-080		CAP,E 330-16 M SME
C0972	87-010-404-080		CAP,E 4.7-50 M 11L SME
C0973	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0974	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0979	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0981	87-010-260-080		CAP,E 47-25 M 11L SME
C0982	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0983	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0984	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0985	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0987	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0989	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0991	87-010-312-080		C-CAP,S 15P-50 J CH GRM
C0992	87-010-312-080		C-CAP,S 15P-50 J CH GRM
C0993	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0995	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0997	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0998	87-010-260-080		CAP,E 47-25 M 11L SME
C0999	87-A11-132-080		CAP,TC U 0.01-50 K B
CF0831	87-008-423-010		FLTR,CF SFE10.7MS3G-A
CF0832	82-785-747-010		CF,MS2 GHY,R
CN0301	87-A60-620-010		CONN,3P V 2MM JMT
CN0351	87-A60-625-010		CONN,8P V 2MM JMT
CN0601	87-099-719-010		CONN,30P H BLK TYK-B(X)
CN0602	87-A60-131-010		CONN,6P V FE
CNA0001	8A-NF8-654-010		CONN ASSY,11P TID-A(480)
FB0602	87-008-372-080		FLTR,EMI BL01 RN1
FFC602	88-906-251-110		FF-CABLE,6P 1.25
FFE0831	A8-6ZA-191-130		6ZA-1 FEENM
J0202	87-A60-488-010		JACK,DIA6.3 BLK ST W/SW KM16AT
J0203	87-A60-238-010		TERMINAL,SP 4P (MSC)

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
J0204	87-A60-881-010		JACK,PIN 2P MSP 242V05 PBSN
J0602	87-A60-881-010		JACK,PIN 2P MSP 242V05 PBSN
J0832	87-A60-403-010		TERMINAL,ANT PAL 2P HSP-312V05
JW0105	87-A00-764-010		RES,M/F 0.22-3W J
JW0106	87-A00-764-010		RES,M/F 0.22-3W J
L0101	87-A50-610-010		COIL,1UH K(MDEC)
L0102	87-A50-610-010		COIL,1UH K(MDEC)
L0451	87-007-342-010		COIL,OSC 85KHZ BIAS
L0801	87-A50-608-010		COIL,FM DET-N(TOK)
L0802	87-A91-551-010		FLTR,PCFJZH-450 L(TOK)
L0811	87-005-847-080		COIL,2.2UH K CECS
L0832	87-005-847-080		COIL,2.2UH K CECS
L0861	87-005-847-080		COIL,2.2UH K CECS<42>
L0941	87-A50-020-010		COIL,ANT LW (COI) 252KHZ
L0942	87-A50-019-010		COIL,OSC LW (COI) 856KHZ
L0951	8A-NF8-668-010		COIL,AM PACK 2(TOK)
R0129	87-A00-764-010		RES,M/F 0.22-3W J
R0130	87-A00-764-010		RES,M/F 0.22-3W J
R0143	87-A00-439-050		RES,180-1/2W J RP
R0144	87-A00-439-050		RES,180-1/2W J RP
R0145	87-A00-439-050		RES,180-1/2W J RP
R0146	87-A00-439-050		RES,180-1/2W J RP
R0790	87-010-197-080		C-CAP,S 0.01-25 K B C2012
R0991	87-010-322-080		C-CAP,S 100P-50 J CH GRM
R0993	87-010-322-080		C-CAP,S 100P-50 J CH GRM
R0995	87-010-322-080		C-CAP,S 100P-50 J CH GRM
SFR0451	87-A90-432-080		SFR,30K H NVZ6TLTA
SFR0452	87-A90-432-080		SFR,30K H NVZ6TLTA
TC0942	87-011-253-080		TRIMMER,CER 30P 4.0X4.5 ECRLA
WH0001	87-A91-179-010		HLDR,WIRE 2.5-11P
X0861	87-A70-091-010		VIB,XTAL 4.332MHZ CSA-309<42>
X0991	87-A70-061-010		VIB,XTAL 4.500MHZ CSA-309

FRONT C.B

C0201	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0202	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0203	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0204	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0205	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0206	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0207	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0208	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0209	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0210	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0211	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0251	87-010-405-040		CAP,E 10-50 M 11L SME
C0253	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0254	87-012-369-080		C-CAP,S 0.047-50 Z F
C0255	87-010-560-040		CAP,E 10-50 M 5L MA
C0256	87-010-405-040		CAP,E 10-50 M 11L SME
C0259	87-010-405-040		CAP,E 10-50 M 11L SME
C0264	87-A11-148-080		CAP,TC U 0.1-50 Z F
C0273	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0274	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0301	87-010-182-080		C-CAP,S 2200P-50 K B C2012
C0302	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0303	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0312	87-010-498-040		CAP,E 10-16 M 5L SRE
C0314	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0315	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0316	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0321	87-012-393-080		C-CAP,S 0.22-16 K W5R CM/CB
C0322	87-010-400-040		CAP,E 0.47-50 M 11L SME
C0325	87-A10-189-040		CAP,E 220-10 M 5L
C0326	87-A10-189-040		CAP,E 220-10 M 5L
C0332	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0334	87-010-312-080		C-CAP,S 15P-50 J CH GRM
C0335	87-012-140-080		C-CAP,S 470P-50 J CH
C0336	87-012-155-080		C-CAP,S 180P-50 J CH GRM
C0339	87-012-156-080		C-CAP,S 220P-50 J CH GRM
C0340	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0341	87-010-194-080		C-CAP,S 0.047-25 Z F
C0351	87-010-382-040		CAP,E 22-25 M 11L SME
C0401	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0451	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0452	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0453	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0454	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0455	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0458	87-010-320-080		C-CAP,S 68P-50 J CH GRM
C0459	87-010-320-080		C-CAP,S 68P-50 J CH GRM
C0602	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0603	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0604	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0650	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0699	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
CN0101	87-099-720-010		CONN,30P BLK TYK-B(P)
CN0102	87-099-015-010		CONN,13P V BLK 6216
CN0302	87-A60-136-010		CONN,11P V FE
FB0301	87-008-372-080		FLTR,EMI BL01 RN1
FFC102	88-913-301-110		FF-CABLE,13P-1.25
FFC105	88-911-101-110		FF-CABLE,11P 1.25
FL0401	8A-NF8-601-010		FL,HNA-11MM30(ANF-8)
L0331	87-A50-408-010		COIL,OSC 5.76MHZ
LED0311	87-A40-589-040		LED,SLR-56VCT31 RED
LED0601	87-A40-803-010		LED,SELU1E10CXM-S LF38 BLUE
LED0602	87-A40-619-080		LED,SLR-56PT-TE7-W GRN
LED0603	87-A40-619-080		LED,SLR-56PT-TE7-W GRN
LED0604	87-A40-619-080		LED,SLR-56PT-TE7-W GRN
LED0606	87-A40-619-080		LED,SLR-56PT-TE7-W GRN
LED0607	87-A40-619-080		LED,SLR-56PT-TE7-W GRN
LED0608	87-A40-619-080		LED,SLR-56PT-TE7-W GRN
S0401	87-A91-024-180		SW,TACT KSHG611BT
S0402	87-A91-024-180		SW,TACT KSHG611BT
S0403	87-A91-024-180		SW,TACT KSHG611BT
S0404	87-A91-024-180		SW,TACT KSHG611BT
S0405	87-A91-024-180		SW,TACT KSHG611BT
S0406	87-A91-024-180		SW,TACT KSHG611BT
S0407	87-A91-024-180		SW,TACT KSHG611BT
S0408	87-A91-024-180		SW,TACT KSHG611BT
S0409	87-A91-024-180		SW,TACT KSHG611BT
S0410	87-A91-024-180		SW,TACT KSHG611BT
S0411	87-A91-024-180		SW,TACT KSHG611BT
S0412	87-A91-024-180		SW,TACT KSHG611BT<42>
S0413	87-A91-024-180		SW,TACT KSHG611BT
S0414	87-A91-024-180		SW,TACT KSHG611BT
S0415	87-A91-024-180		SW,TACT KSHG611BT
S0416	87-A91-024-180		SW,TACT KSHG611BT
S0417	87-A91-024-180		SW,TACT KSHG611BT
S0418	87-A91-024-180		SW,TACT KSHG611BT
S0419	87-A91-024-180		SW,TACT KSHG611BT
S0420	87-A91-024-180		SW,TACT KSHG611BT<42>
S0421	87-A91-024-180		SW,TACT KSHG611BT<42>
S0425	87-A91-024-180		SW,TACT KSHG611BT
S0426	87-A91-024-180		SW,TACT KSHG611BT
S0430	87-A91-024-180		SW,TACT KSHG611BT
S0431	87-A91-024-180		SW,TACT KSHG611BT
S0432	87-A91-024-180		SW,TACT KSHG611BT
S0433	87-A91-024-180		SW,TACT KSHG611BT
S0434	87-A91-024-180		SW,TACT KSHG611BT
S0435	87-A91-024-180		SW,TACT KSHG611BT
SW0252	87-A91-555-010		SW,RTRY EC12E24504
SW0253	87-A91-542-010		SW,RTRY EC12E12504

DECK C.B

CON105	87-099-753-010		CONN,11P 9604 S F
SFR1	87-024-581-010		SFR,3.3K DIA 6H
SOL1	82-ZM1-618-410		SOL ASSY,27

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
SOL2	82-ZM1-618-410		SOL ASSY,27
SW1	87-A90-248-010		SW,MICRO ESE11SH2CXQ
SW2	87-A90-248-010		SW,MICRO ESE11SH2CXQ
SW3	87-A90-248-010		SW,MICRO ESE11SH2CXQ
SW4	87-036-110-010		SW,MICRO SPPB62
SW5	87-036-110-010		SW,MICRO SPPB62
W1	82-ZM3-601-010		RBN,CORD,4P-75
HEAD-1 C.B			
	85-ZM3-602-010		PWB,FLEX A
CON301	87-NF6-615-010		CONN ASSY,3P PB
PT C.B			
C0001	87-010-387-080		CAP,E 470-25 M SME
C0002	87-A11-148-080		CAP,TC U 0.1-50 Z F
C0031	87-010-403-040		CAP,E 3.3-50 M 11L SME
CN0001	87-A61-122-010		CONN,11P V TID-A
⚠PT0001	8A-NFJ-608-010		PT,ANF-8 EZ(2)
⚠PT0002	8A-NF8-662-010		PT,SUB ANF-8 (E)
⚠RY0002	87-A91-418-010		RELAY,AC12V G5PA-1-M
⚠T0001	87-A60-317-010		TERMINAL, 1P MSC
⚠T0002	87-A60-317-010		TERMINAL, 1P MSC

Oチップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

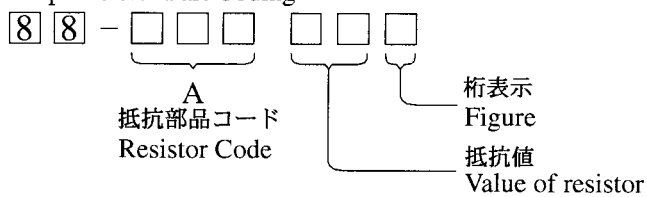

チップ抵抗
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm) 外形／Form	L	W	t	抵抗コード : A Resistor Code : A
1/16W	1005	±5%	CJ	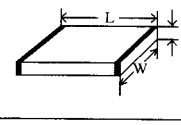	1.0	0.5	0.35	104
1/16W	1608	±5%	CJ		1.6	0.8	0.45	108
1/10W	2125	±5%	CJ		2	1.25	0.45	118
1/8W	3216	±5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION

2SC3331
CD1585
CSA952
CSC4115
KTA1266
KTC3198



DTC114ES
KTC3199



2SB1370

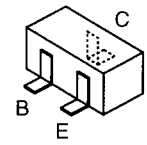

2SA1235
2SC2714
2SC3052
CMBT5401
CMBT5551
CSD1306
KRA102S
KRA107S
KRC102S
KTC102S
RT1N441C
RT1P141C



2SJ460
2SK2541

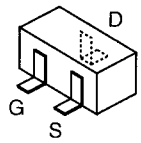

2SK2158

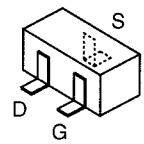

2SK360

FL (HNA-11MM30) GRID ASSIGNMENT/ANODE CONNECTION

GRID ASSIGNMENT

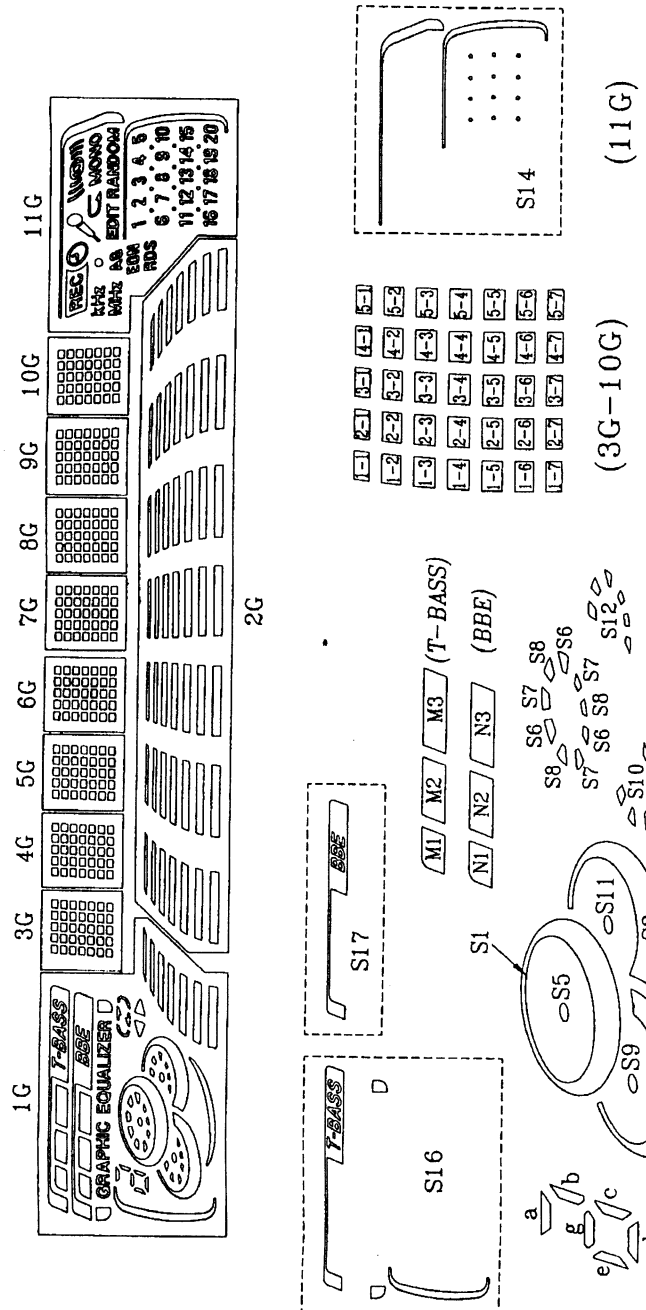

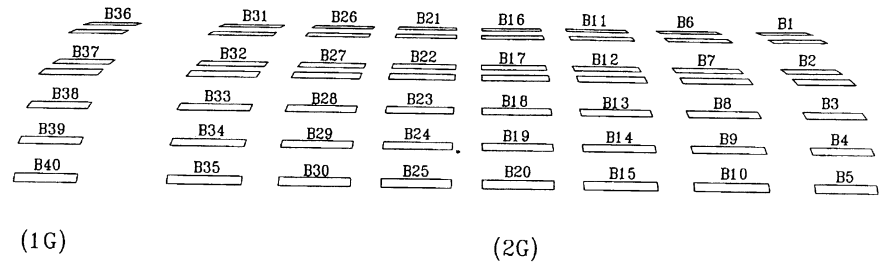

ANODE CONNECTION

	1G	2G	3G-10G	11G
P1	S17	B35	1-1	
P2	N1	B30	2-1	MONO
P3	N2	B25	3-1	RANDOM
P4	N3	B20	4-1	WOW
P5	GRAPHIC EQUALIZER	B15	5-1	EDIT
P6		B10	1-2	
P7		B5	2-2	REC
P8		B34	3-2	kHz
P9		B29	4-2	MHz
P10		B24	5-2	○
P11	S4	B19	1-3	AG
P12	S2	B14	2-3	EON
P13	S10	B9	3-3	RDS
P14	S9	B4	4-3	S14
P15	S3	B33	5-3	20
P16	S12	B28	1-4	19
P17	S11	B23	2-4	18
P18	S1	B18	3-4	17

	1G	2G	3G-10G	11G
P19	S6	B13	4-4	16
P20	S7	B8	5-4	15
P21	S8	B3	1-5	14
P22	S5	B32	2-5	13
P23	S16	B27	3-5	12
P24	M1	B22	4-5	11
P25	M2	B17	5-5	10
P26	M3	B12	1-6	9
P27	e	B7	2-6	8
P28	a,g,d	B2	3-6	7
P29	b	B31	4-6	6
P30	c	B26	5-6	5
P31	B40	B21	1-7	4
P32	B39	B16	2-7	3
P33	B38	B11	3-7	2
P34	B37	B6	4-7	1
P35	B36	B1	5-7	

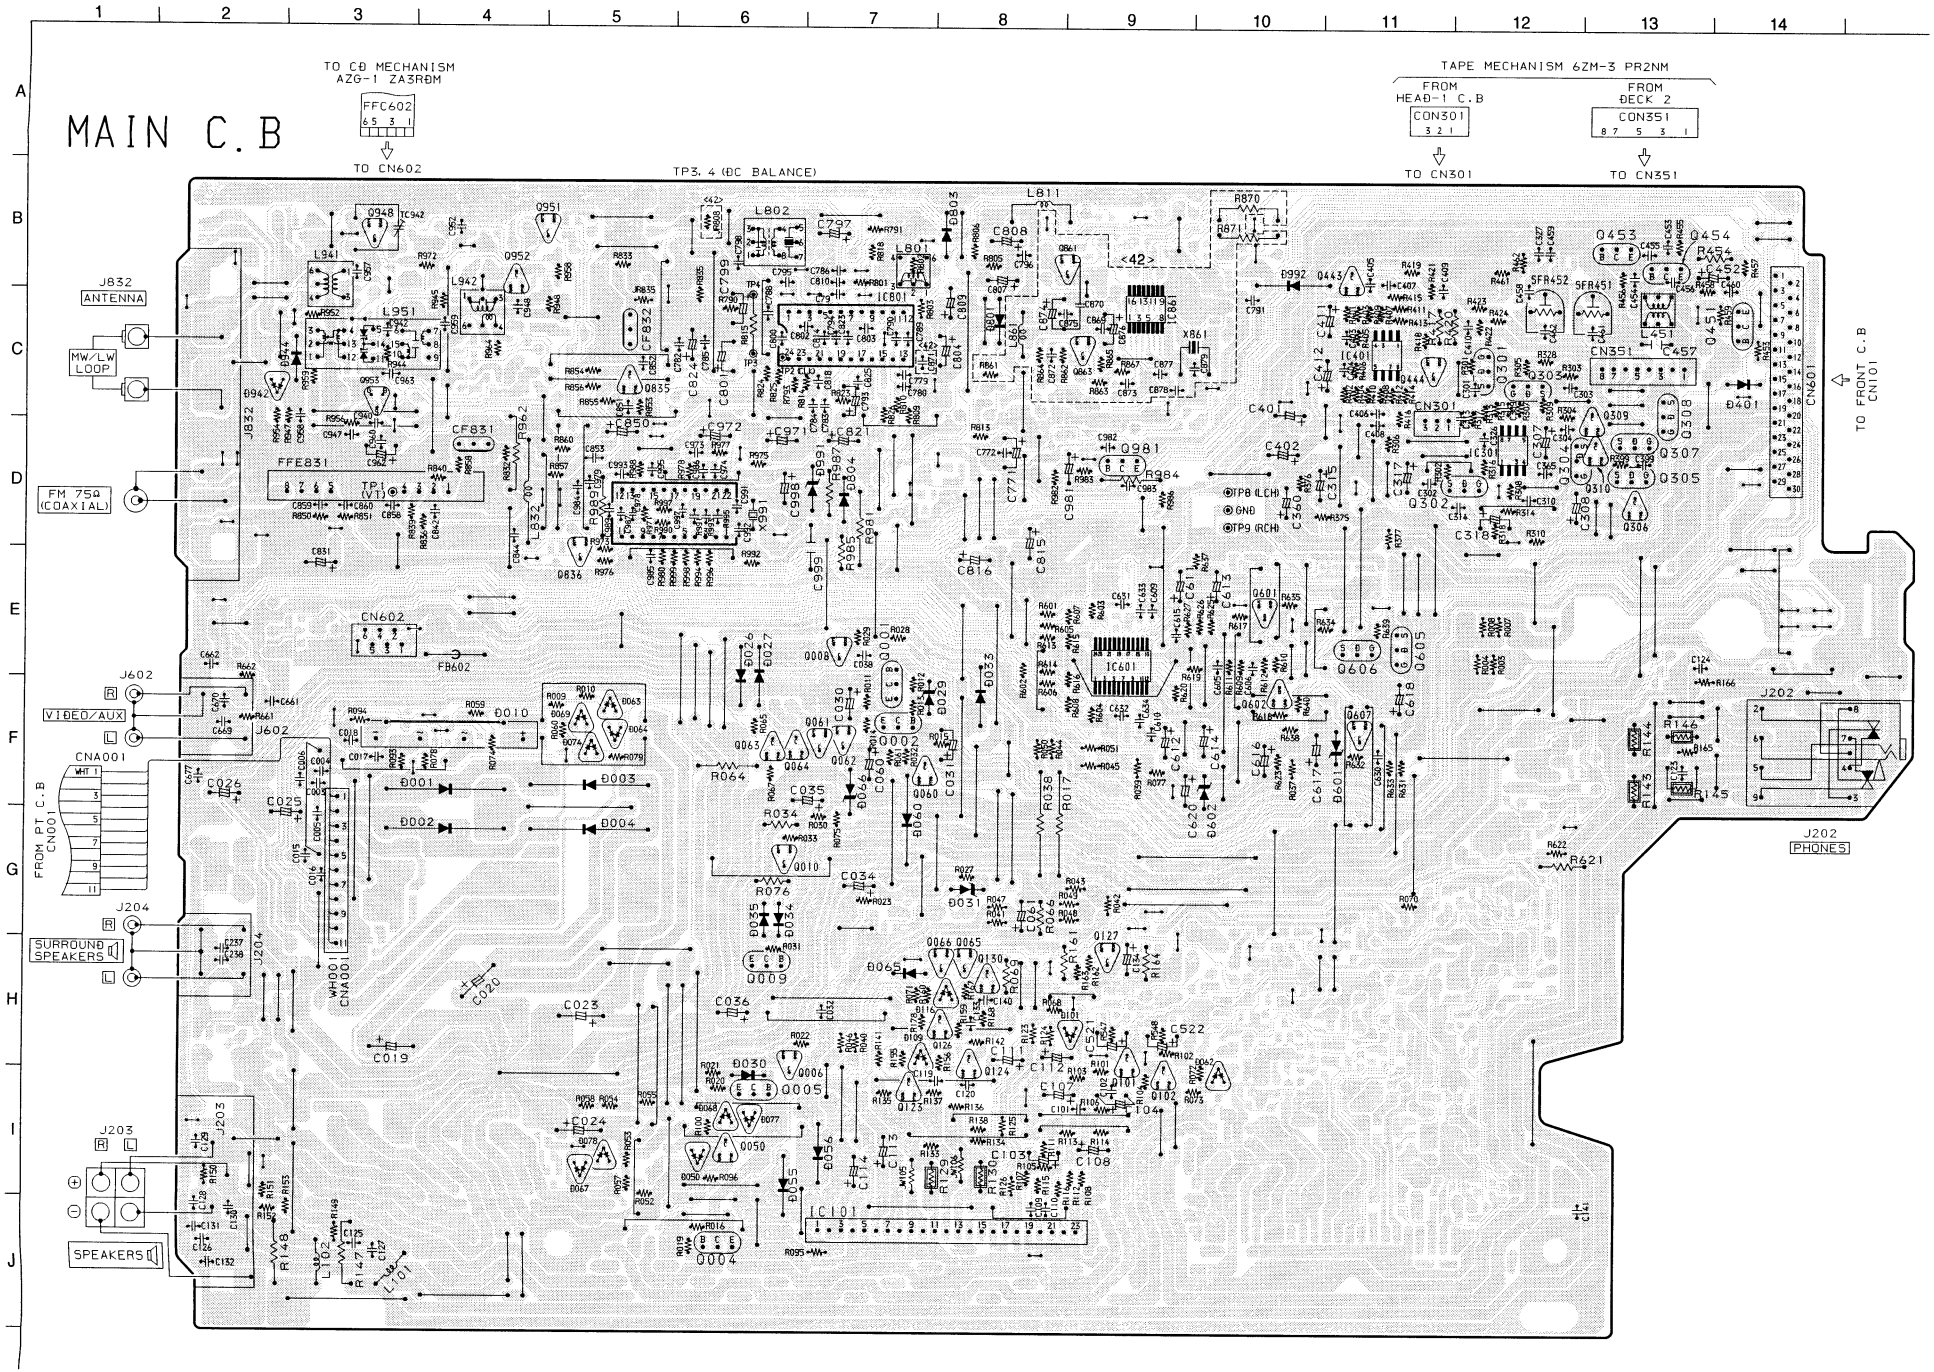
MAIN C.B
TO CD MECHANISM AZG-1 ZA3RDM
FFC602
6 5 3 1
TO CN602
TAPE MECHANISM 6ZM-3 PR2NM
FROM HEAD-1 C.B
CON301
3 2 1
TO CN301
FROM DECK 2
CON351
8 7 5 3 1
TO CN351
TP3, 4 (DC BALANCE)
J832
ANTENNA
MW/LW LOOP
FM 75Ω (COAXIAL)
J602
VIDEO/AUX
J204
SURROUND SPEAKERS
J203
SPEAKERS
CNA001
FROM PT C.B CN001
CN602
FB602
TP8 (LCH)
TP9 (RCH)
GND
TO FRONT C.B CN101
CN601
J202
PHONES
IC101
IC601
IC401
X861
CF831
CF832
FFE831
SFR451
SFR452
<42>
1 2 3 4 5 6 7 8 9 10 11 12 13 14
A B C D E F G H I J

SCHEMATIC DIAGRAM-1 (FUNCTION/AMP SECTION)

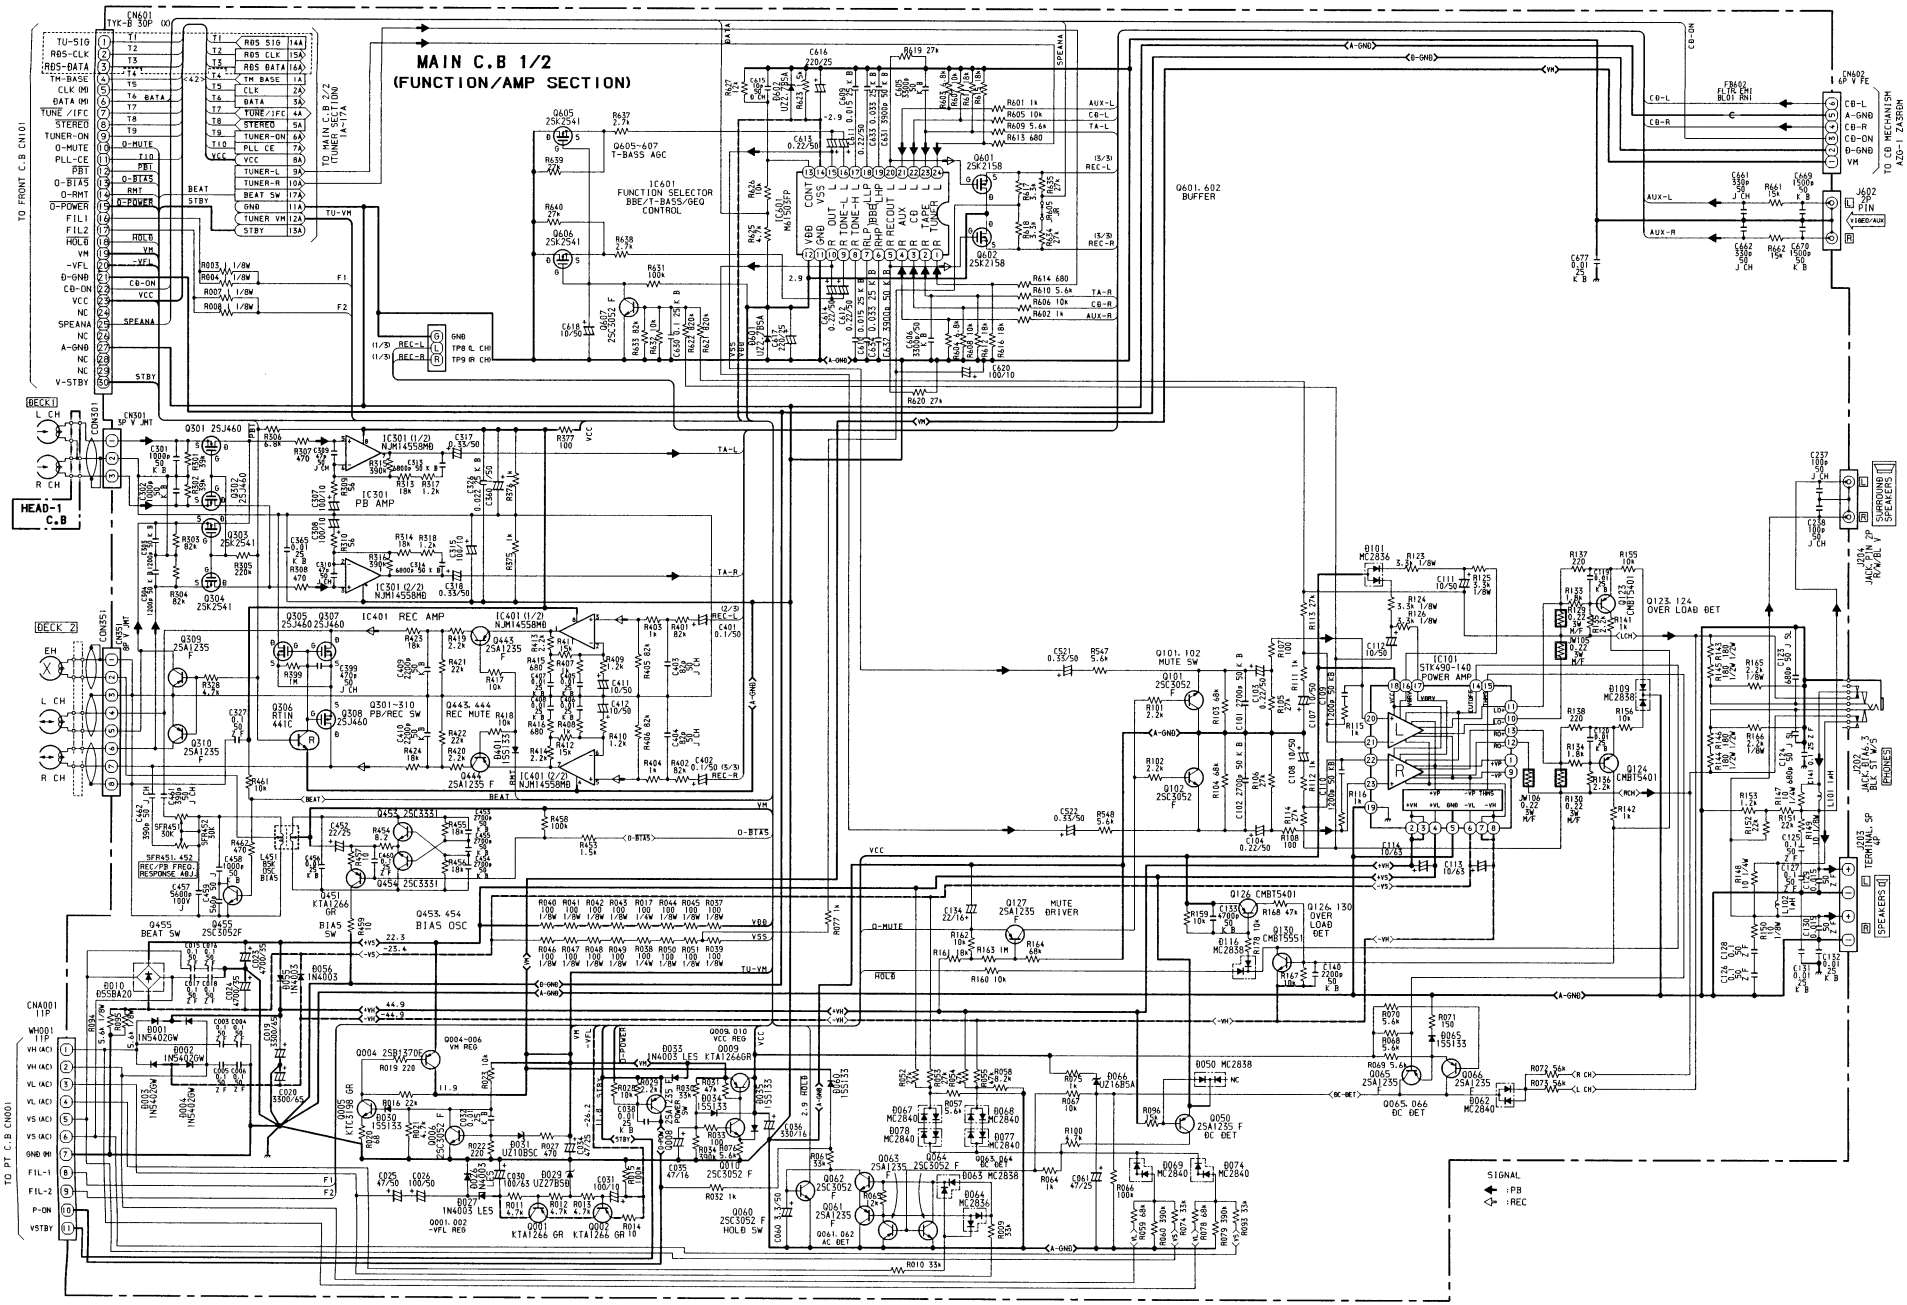

SCHEMATIC DIAGRAM-2 (TUNER SECTION)

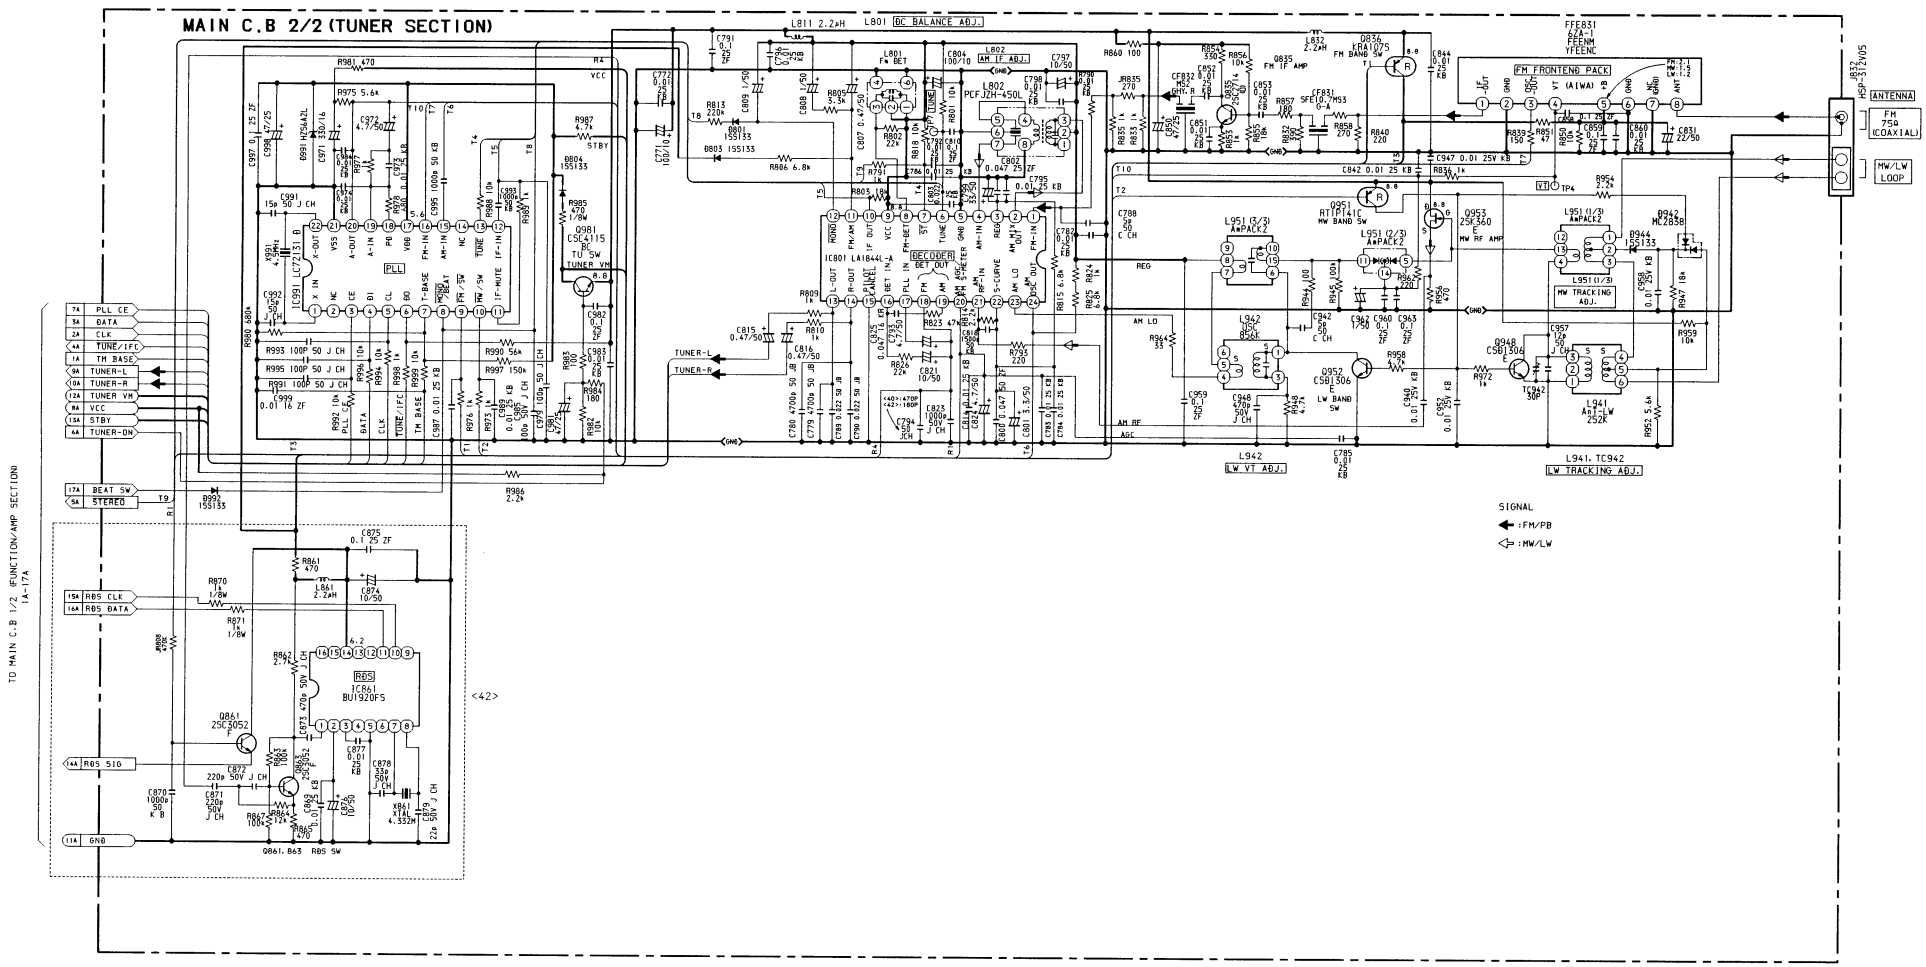

SCHEMATIC DIAGRAM-3 (PT SECTION)

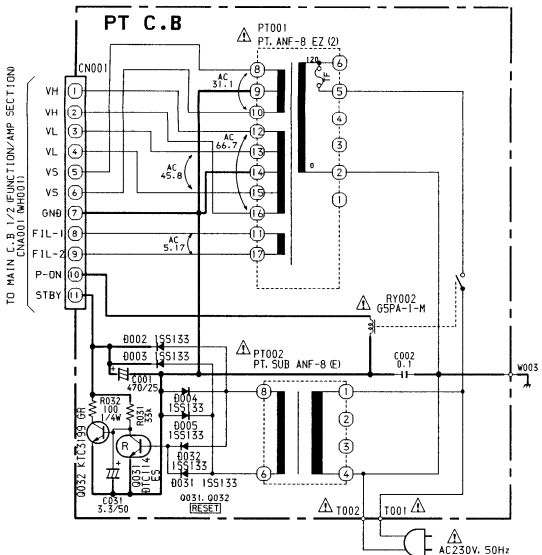

WIRING-2 (PT C.B)

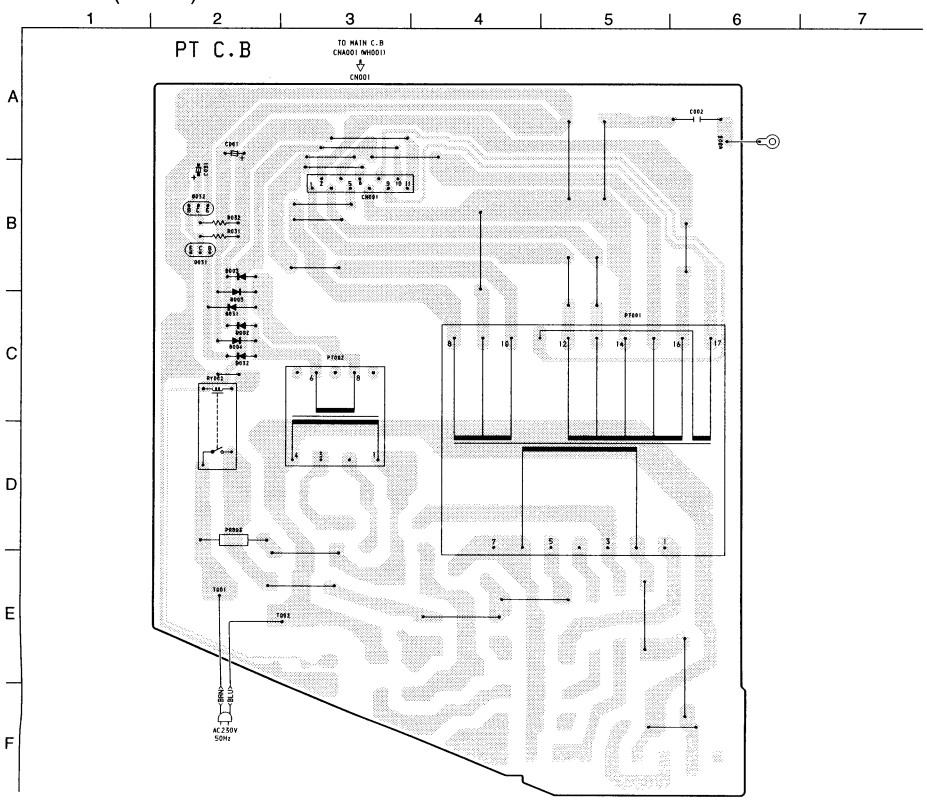

WIRING-3 (DECK C.B)

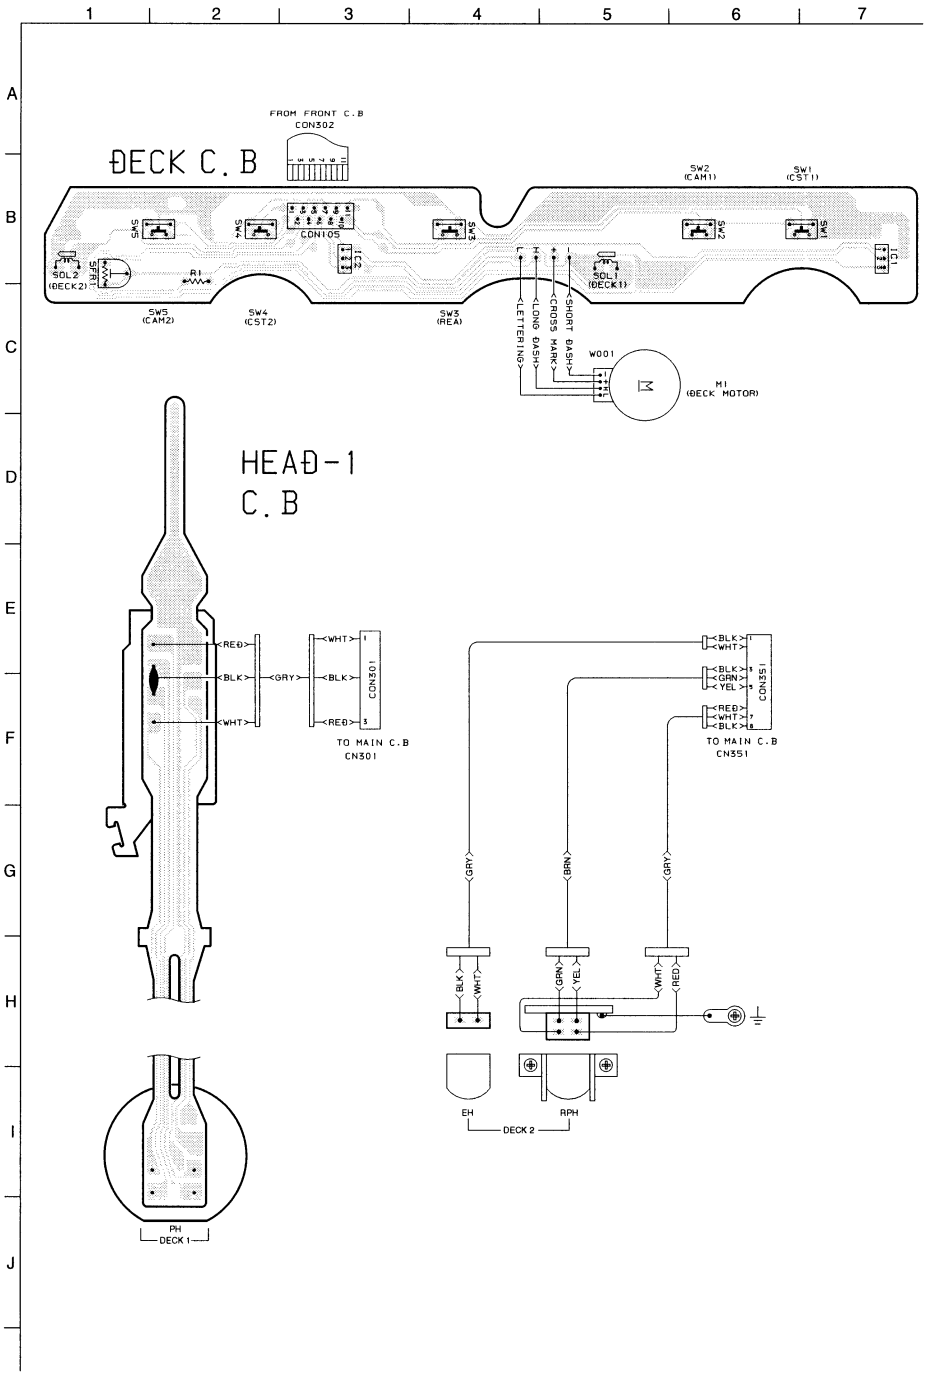

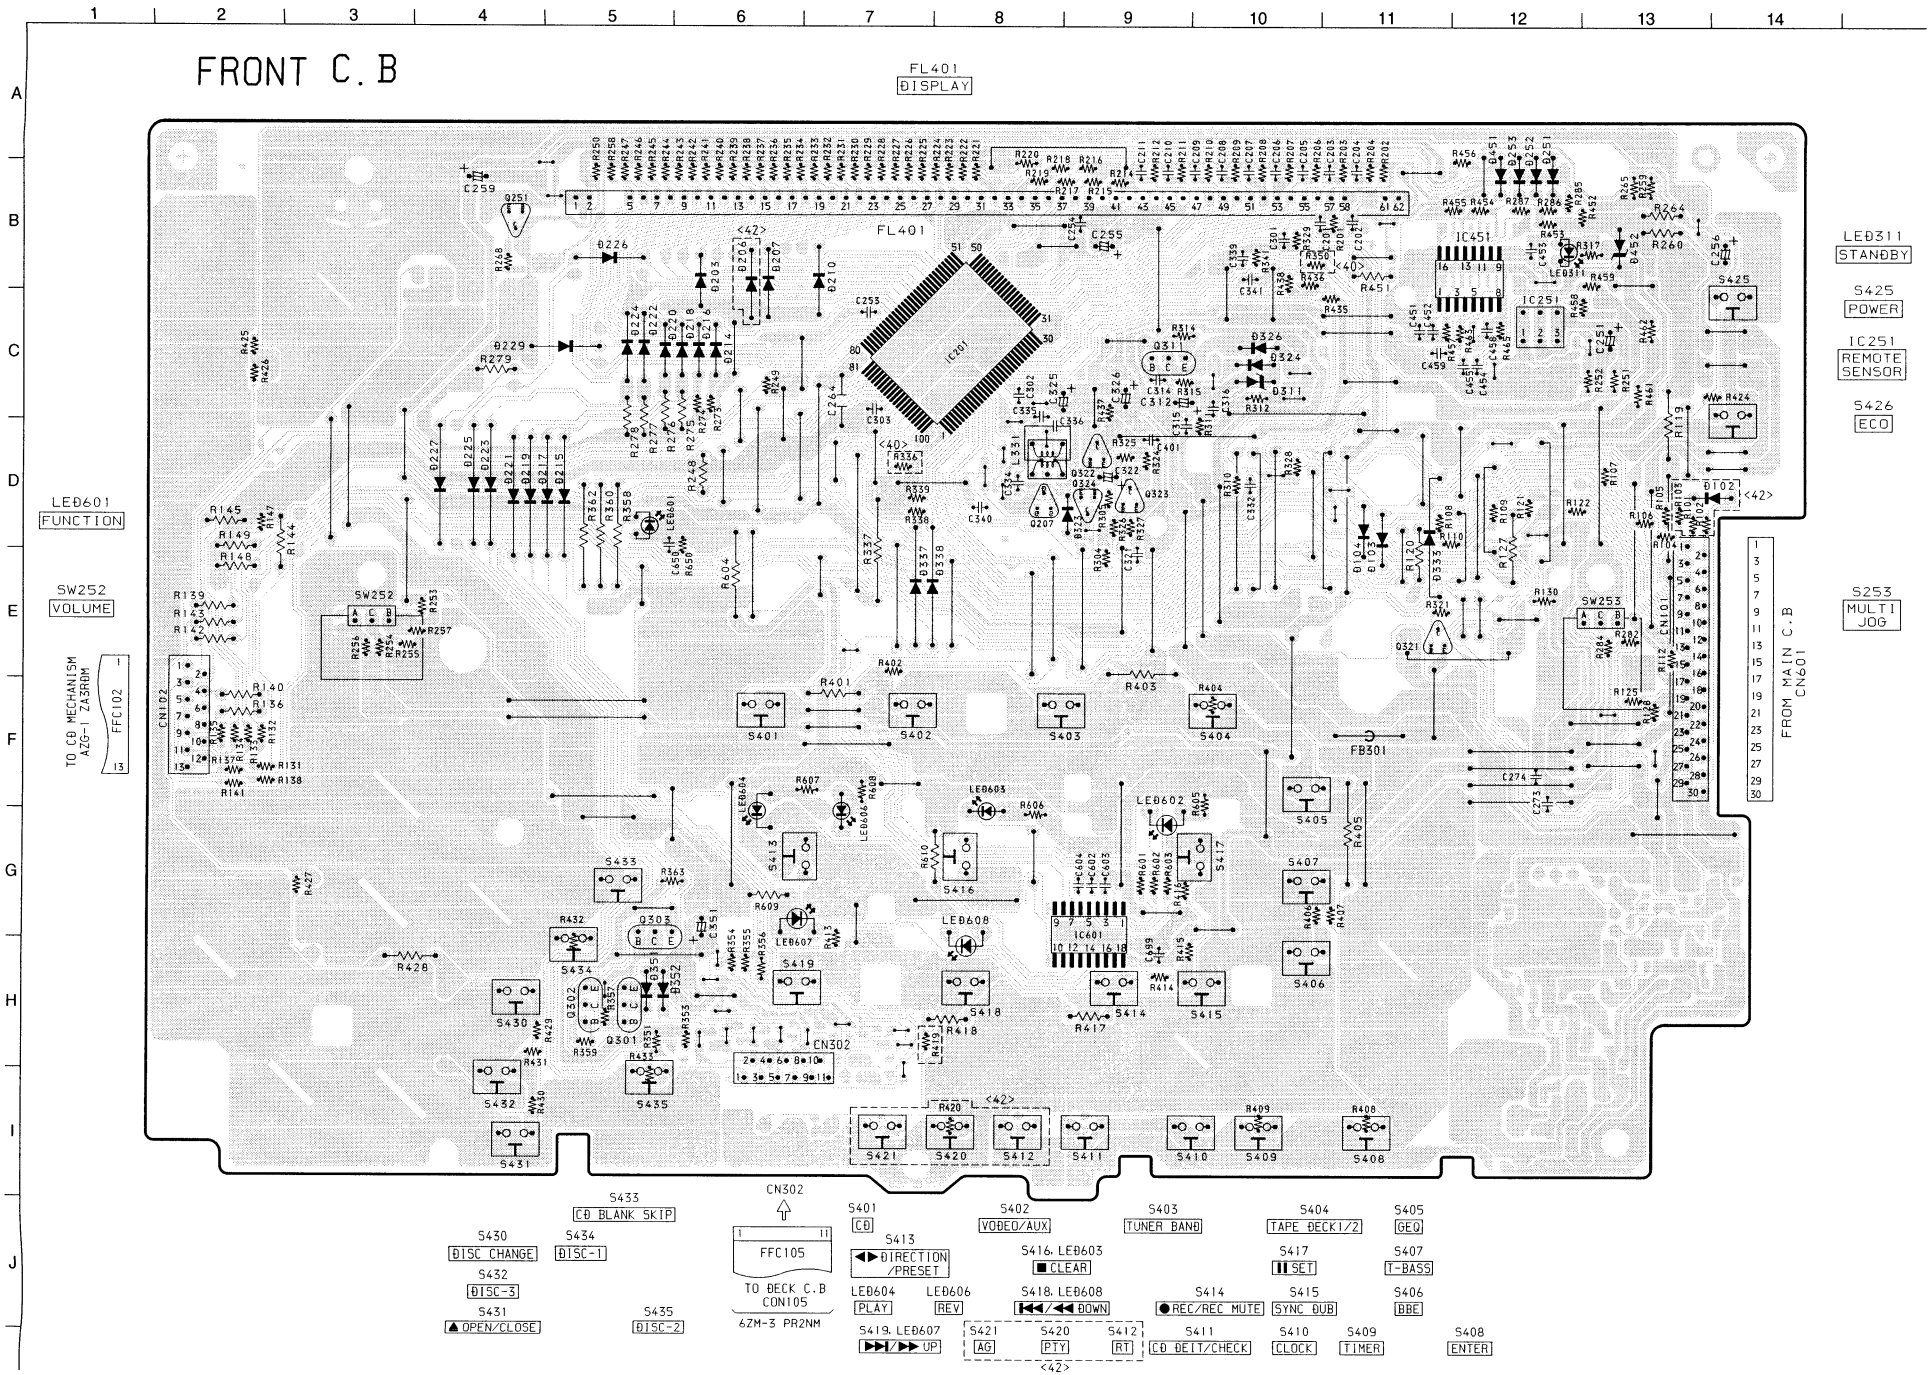
FRONT C.B
FL401
DISPLAY
LED311
STANDBY
S425
POWER
IC251
REMOTE
SENSOR
S426
ECO
LED601
FUNCTION
SW252
VOLUME
S253
MULTI
JOG
TO CD MECHANISM
AZG-1 ZA3RBM
FFC102
CN102
FROM MAIN C.B
CN601
CN101
CN302
FFC105
TO DECK C.B
CON105
6ZM-3 PR2NM
S401 CD
S402 VCD/EO/AUX
S403 TUNER BAND
S404 TAPE DECK1/2
S405 GEQ
S406 BBE
S407 T-BASS
S408 ENTER
S409 TIMER
S410 CLOCK
S411 CD EJECT/CHECK
S412 RT
S413 DIRECTION /PRESET
S414 REC/REC MUTE
S415 SYNC DUB
S416 LED603 CLEAR
S417 SET
S418 LED608 DOWN
S419 LED607 UP
S420 PTY
S421 AG
S430 DISC CHANGE
S431 OPEN/CLOSE
S432 DISC-3
S433 CD BLANK SKIP
S434 DISC-1
S435 DISC-2
LED604 PLAY
LED606 REV
<42>

SCHEMATIC DIAGRAM-4 (FRONT SECTION)

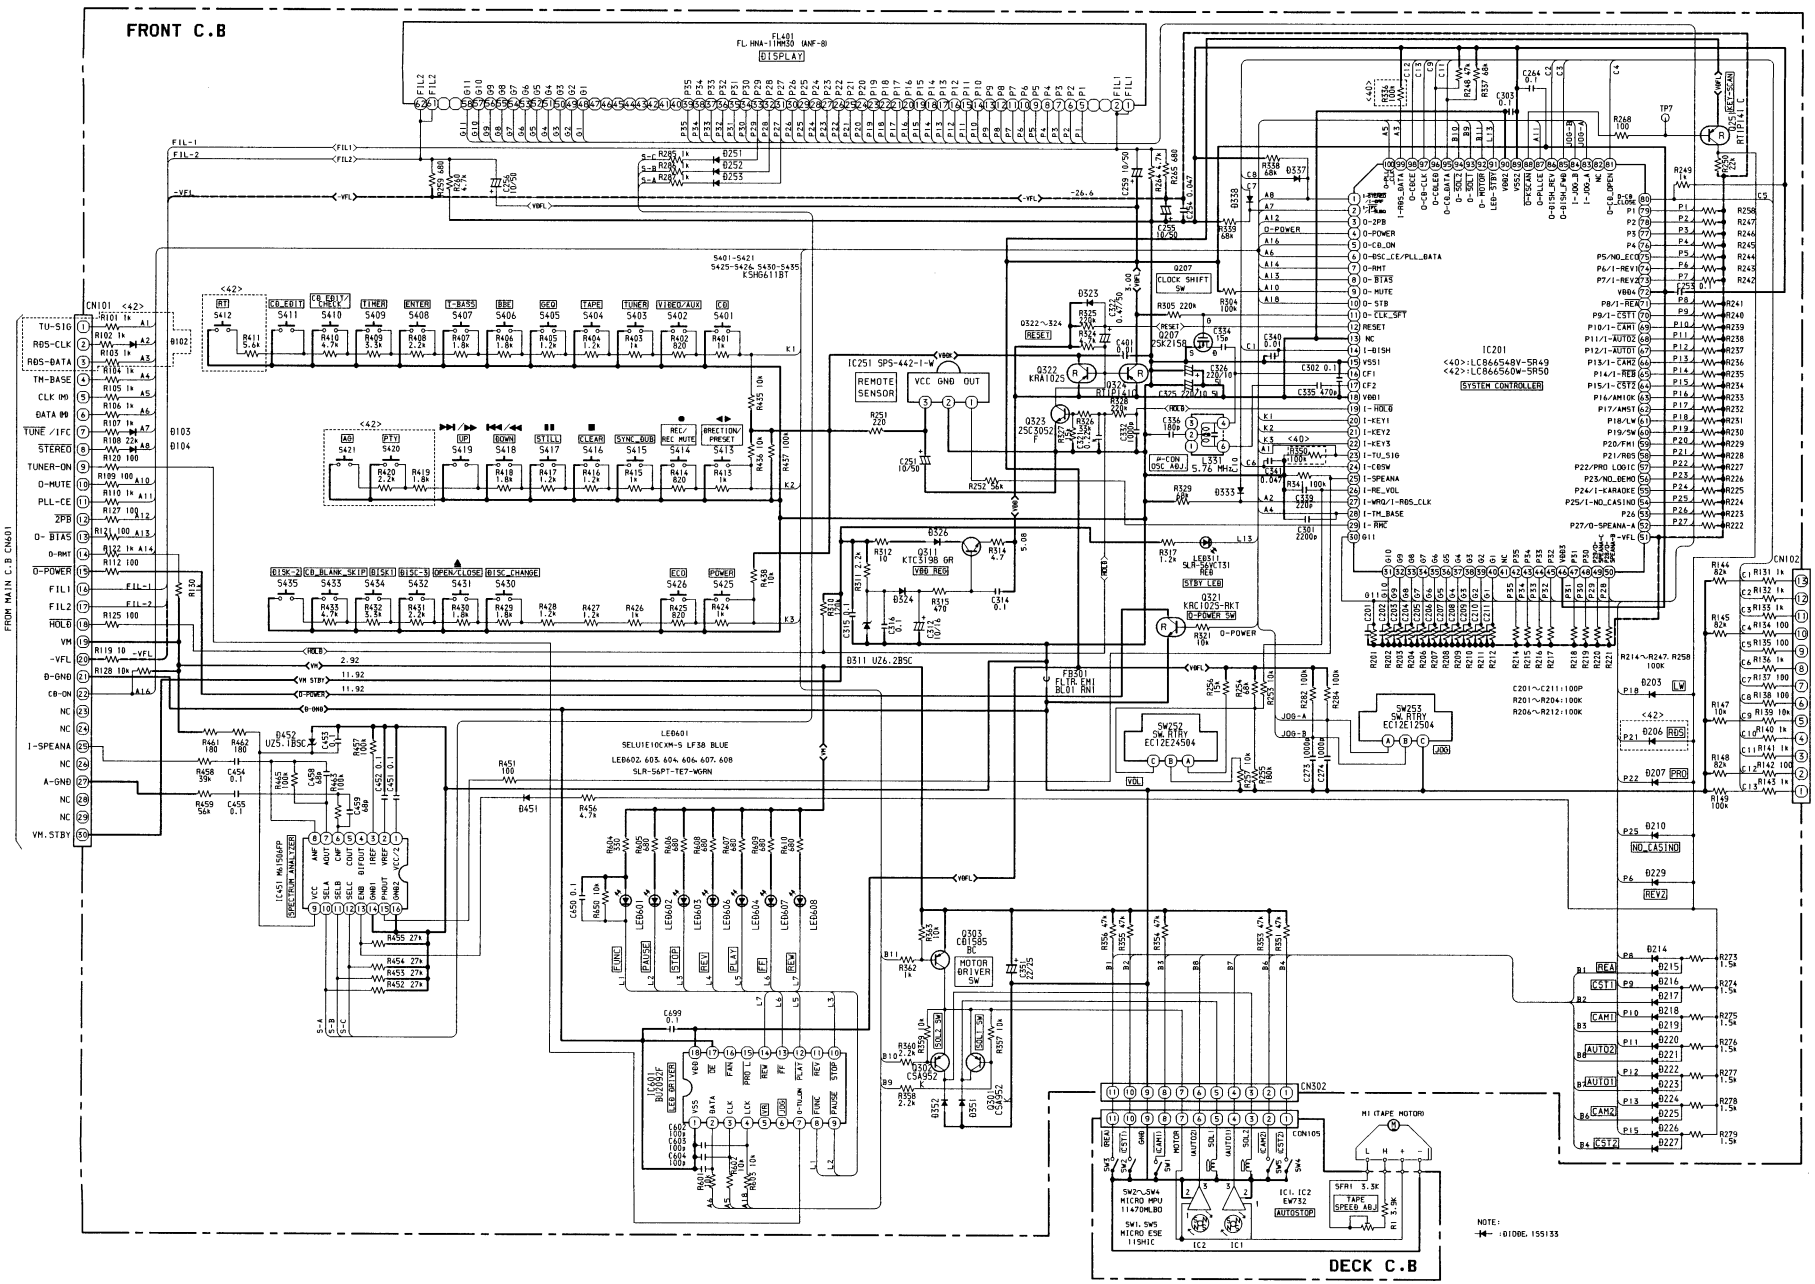

IC BLOCK DIAGRAM

IC, LA1844

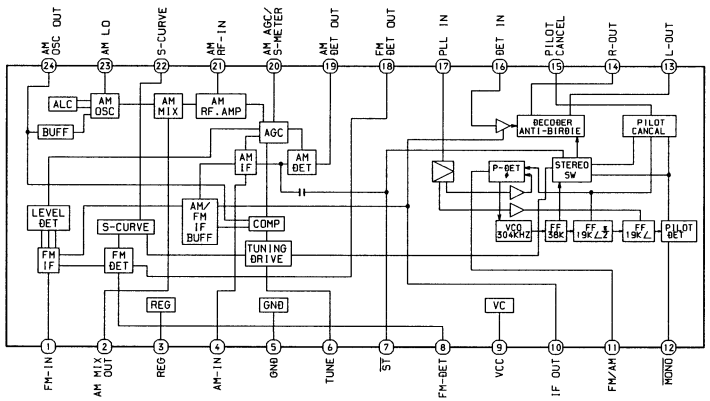

IC, M61506FP

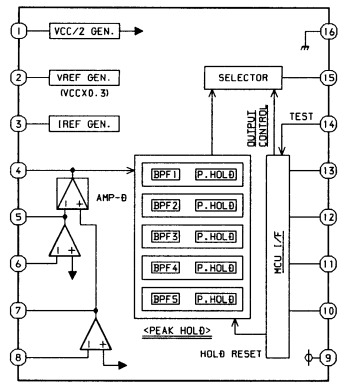

IC, BU2092F

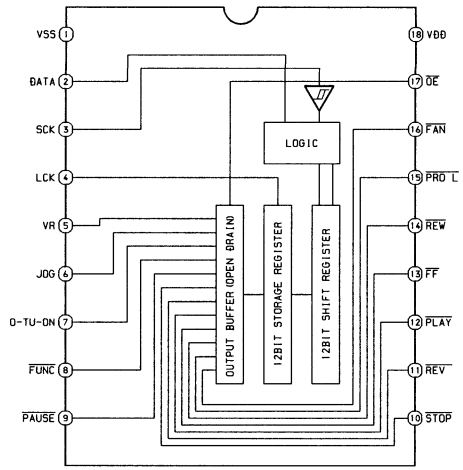

IC, LC72131D

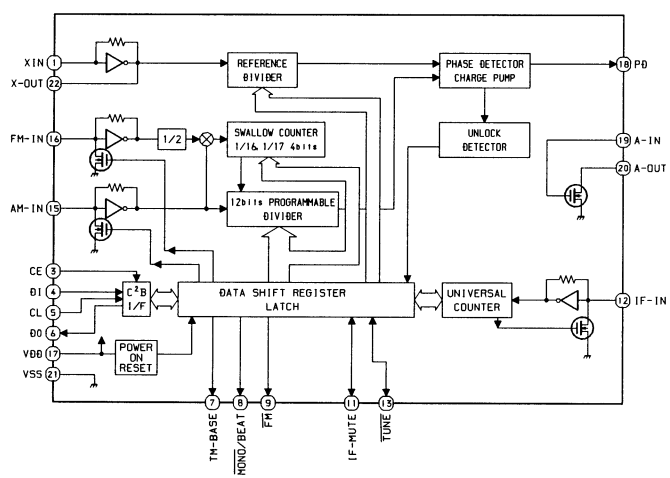

IC, M61503FP

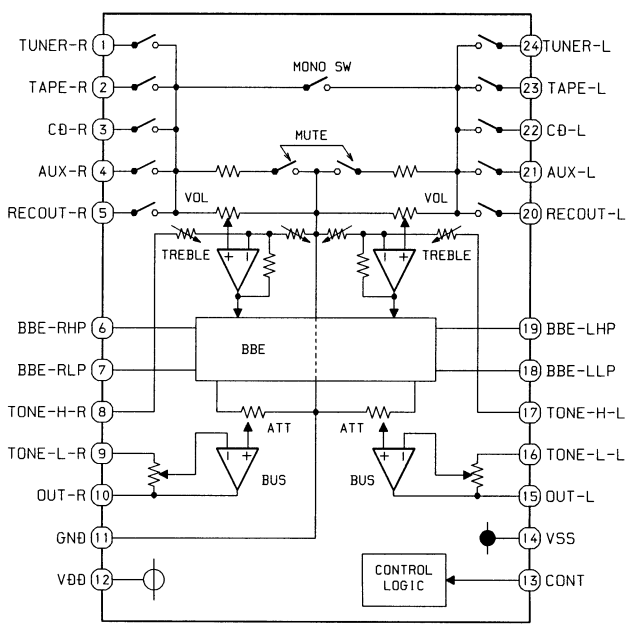

IC DESCRIPTION

IC, LC866548V-5R49 <40>, LC866560V-5R50 <42>

Pin No.	Pin Name	I/O	Description
1	I-STEREO/I-DRF	I	Stereo detected input/CD DRF input
2	I-IFC/I-SUBQ	I	Tune IF count serial data input/CD SUBQ input
3	O-2PB	O	Deck 2 playback switch output
4	O-POWER	O	System power supply ON/OFF output
5	O-CD-ON	O	CD power ON/OFF output
6	O-PLL_DATA	O	LED driver, Tuner IC, Function IC data output
7	O-RMT	O	Deck 2 REC MUTE output
8	O-BIAS	O	Deck 2 bias ON/OFF output
9	O-MUTE	O	System mute ON/OFF output
10	O-STB	O	Latch strobe output for LED driver IC
11	O-CLK_SFT	O	Micon clock shift output
12	RESET	I	System reset
13	NC	–	Not connected
14	I-DISH	I	CD turntable photo sensor A/D converter input
15	VSS1	–	GND
16	CF1	–	5.76 MHz oscillator circuit
17	CF2	–	5.76 MHz oscillator circuit
18	VDD1	–	Power supply input
19	I-HOLD	I	Power failure detected input
20	I-KEY1	I	KEY input (A/D)
21	I-KEY2	I	KEY input (A/D)
22	I-KEY3	I	KEY input (A/D)
23	I-TU_SIG	I	Tuner signal input
24	I-CDSW	I	CD mechanical switch A/D converter input
25	I-SPEANA	I	A/D input for spectrum analyzer display
26	I-RE_VOL	I	Rotary encoder input (VOL)
27	I-WRQ/I-RDS_CLK	I	CD WRQ input/Tuner RDS clock input
28	I-TM_BASE	I	Reference clock input for timer watch
29	I-RMC	I	System remotecontrol signal input
30 ~ 40	G11 ~ G1	O	FL GRID output G11 ~ G1
41	NC	–	Not connected
42 ~ 45	P35 ~ P32	O	FL SEGMENT output P35 ~ P32
46	VDD3	–	Power supply input
47 ~ 48	P31 ~ P30	O	FL SEGMENT output P31 ~ P30
49	P29/O-SPEANA-C	O	FL SEGMENT output P29/Spectrum analyzer band switching output
50	P28/O-SPEANA-B	O	FL SEGMENT output P28/Spectrum analyzer band switching output
51	VFL	–	Power supply input for FL display
52	P27/O-SPEANA-A	O	FL SEGMENT output P27/Spectrum analyzer band switch output
53	P26	O	FL SEGMENT output P26
54	P25/I-NO_CASINO	I/O	FL SEGMENT output P25/NO CASINO DEMO input to diode
55	P24/I-KARAOKE	I/O	FL SEGMENT output P24/KARAOKE input to diode
56	P23/NO_DEMO	I/O	FL SEGMENT output P23/NO DEMO input to diode

Pin No.	Pin Name	I/O	Description
57	P22/PRO LOGIC	I/O	FL SEGMENT output P22/PROLOGIC input to diode (not used)
58	P21/RDS	I/O	FL SEGMENT output P21/RDS input to diode
59	P20/FM1	I/O	FL SEGMENT output P20/FM1 input to diode
60	P19/SW	I/O	FL SEGMENT output P19/SW input to diode
61	P18/LW	I/O	FL SEGMENT output P18/LW input to diode
62	P17/AMST	I/O	FL SEGMENT output P17/AMST input to diode
63	P16/AM10K	I/O	FL SEGMENT output P16/AM10K input to diode
64	P15/I-$\overline{\text{CST2}}$	I/O	FL SEGMENT output P15/DECK2 cassette detect switch data input
65	P14/I-$\overline{\text{REB}}$	I/O	FL SEGMENT output P14/DECK2 side-B record OK switch data input
66	P13/I-$\overline{\text{CAM2}}$	I/O	FL SEGMENT output P13/DECK2 CAM switch signal input
67	P12/I-$\overline{\text{AUTO1}}$	I/O	FL SEGMENT output P12/DECK1 AUTO STOP signal input
68	P11/I-$\overline{\text{AUTO2}}$	I/O	FL SEGMENT output P11/DECK2 AUTO STOP signal input
69	P10/I-$\overline{\text{CAM1}}$	I/O	FL SEGMENT output P10/DECK1 CAM switch data input
70	P9/I-$\overline{\text{CST1}}$	I/O	FL SEGMENT output P9/DECK1 cassette detect switch data input
71	P8/I-$\overline{\text{REA}}$	I/O	FL SEGMENT output P8/DECK2 side A record OK switch data input
72	VDD4	–	Power supply input
73	P7/I-REV2	I/O	FL SEGMENT output P7/DECK2 REVERSE mode input to diode
74	P6/I-REV1	I/O	FL SEGMENT output P6/DECK1 REVERSE mode input to diode
75	P5/NO_ECO	I/O	FL SEGMENT output P5/NO ECO MODE input to diode
76 ~ 79	P4 ~ P1	O	FL SEGMENT output P4 ~ P1
80	O-CD CLOSE	O	CD TRAY CLOSE data output
81	O-CD OPEN	O	CD TRAY OPEN data output
82	NC	–	Not connected
83	I-JOG_A	I	Rotary encoder A input (JOG)
84	I-JOG_B	I	Rotary encoder B input (JOG)
85	O-DISH_FWD	O	CD turntable forward rotation output
86	O-DISH_REV	O	CD turntble reverse rotation output
87	O-PLL_CE	O	PLL IC chip enable output
88	O-$\overline{\text{KSCAN}}$	O	Switch SCAN timing output
89	VSS2	–	GND
90	VDD2	–	Power supply input
91	LED-$\overline{\text{STBY}}$	O	STAND BY LED (Echo mode) ouput
92	O-$\overline{\text{MOTOR}}$	O	DECK MOTOR $\overline{\text{ON}}$/OFF output
93	O-$\overline{\text{SOL1}}$	O	DECK1 soleroid ouput
94	O-$\overline{\text{SOL2}}$	O	DECK2 soleroid ouput
95	O-CD-DATA	O	CD DATA output
96	O-CD-LED	O	CD LED output
97	O-CD CLK	O	CD clock output
98	O-CD CE	O	CD chip enable output
99	I-RDS_DATA	I	RDS data input
100	O-PLL_CLK	O	PLL IC CLOCK output

ADJUSTMENT

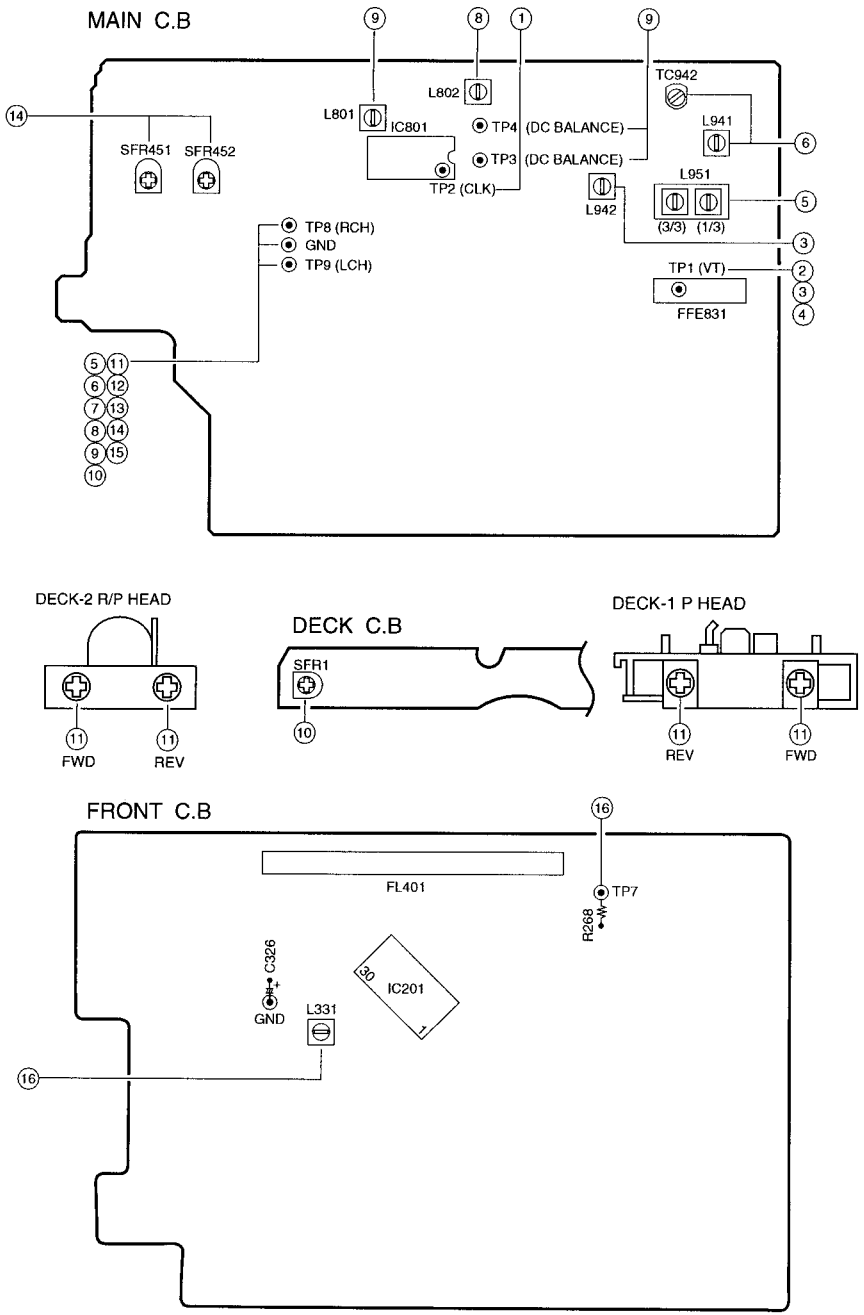

< TUNER SECTION >

1. Clock frequency Check
   Settings : • Test point : TP2
   Method : Set to AM 1602kHz and check that the test point is 2052kHz ± 45Hz.

2. MW VT Check
   Settings : • Test point : TP1 (VT)
   Method : Set to MW 1602kHz, 531kHz and check that the test point is less than 8.0V (1602kHz) and more than 0.6V (531kHz).

3. LW VT Adjustment
   Settings : • Test point : TP1 (VT)
   • Adjustment location: L942
   Method : Set to LW 144kHz and adjust L942 so that the test point is 1.3V ± 0.05V.
   Then set to LW 290kHz and check that the test point is less than 8.0V.

4. FM VT Check
   Settings : • Test point : TP1 (VT)
   Method : Set to FM 87.5MHz, 108.0MHz and check that the test point is more than 0.5V (87.5MHz) and less than 8.0V (108.0MHz).

5. MW Tracking Adjustment
   Settings : • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location :
   L951(1/3) 999kHz
   Method : Set to MW 999kHz and adjust L951(1/3) so that the level at the test point becomes maximum.

6. LW Tracking Adjustment
   Settings : • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location : L941, TC942
   Method : Set up TC943 to center position.
   Set to LW 144kHz and adjust L941 so that the level at test point becomes maximum.
   Then set to LW 290kHz and adjust TC942 so that the level at test point becomes maximum.

7. FM Tracking Check
   Settings : • Test point : TP8(Lch), TP9(Rch)
   Method : Set to FM 98.0MHz and check that the test point is less than 13dBμV.

8. AM IF Adjustment
   Settings : • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location :
   L802 ..... 999kHz

9. DC Balance / Mono Distortion Adjustment
   Settings : • Test point : TP3, TP4 (DC Balance)
   : TP8(Lch), TP9(Rch) (Distortion)
   • Adjustment location : L801
   • Input level : 60dBμV
   Method : Set to FM 98.0MHz and adjust L801 so that the voltage between TP3 and TP4 becomes 0V ± 0.3V. Next, check that the distortion is less than 1.3%.

< DECK SECTION >

10. Tape Speed Adjustment (DECK 2)
    Settings : • Test tape : TTA-100
    • Test point : TP8(Lch), TP9(Rch)
    • Adjustment location : SFR1
    Method : Play back the test tape and adjust SFR1 so that the frequency counter reads 3000Hz ± 5Hz and ±45Hz (REV) with respect to forward speed.

11. Head Azimuth Adjustment (DECK 1, DECK 2)
    Settings : • Test tape : TTA-330
    • Test point : TP8(Lch), TP9(Rch)
    • Adjustment location : Head azimuth adjustment screw
    Method : Play back (FWD) the 8kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on REV PLAY mode.

12. PB Frequency Response Check (DECK 1, DECK 2)
    Settings : • Test tape : TTA-300
    • Test point :TP8(Lch), TP9(Rch)
    Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is within 5dB.

13. PB Sensitivity Check (DECK 1, DECK 2)
    Settings : • Test tape : TTA-200
    • Test point : TP8(Lch), TP9(Rch)
    Method : Play back the test tape and check that the output level of the test point is 140mV ± 3dB.

14. REC/PB Frequency Response Adjustment (DECK 2)
    Settings : • Test tape : TTA-602
    • Test point : TP8(Lch), TP9(Rch)
    • Input signal : 1kHz / 8kHz (LINE IN)
    • Adjustment location : SFR451 (Lch)
    SFR452 (Rch)
    Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP8, TP9 becomes -20VU. Record and play back the 1kHz and 8kHz signals and adjust SFRs so that the output of the 8kHz signals becomes 0dB ± 0.5dB with respect to that of the 1kHz signal.

15. REC/PB Sensitivity Check (DECK 2)
    Settings : • Test tape : TTA-602
    • Test point : TP8(Lch), TP9(Rch)
    • Input signal : 1kHz (LINE IN)
    Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at TP8, TP9 becomes 0VU. Record and play back the 1kHz signals and check that the output is –2dB ± 3.0dB.

< FRONT SECTION >

16. μ-CON OSC Adjustment
    Settings : • Test point : TP7 and GND
    • Adjustment location : L331
    Method : Insert AC plug while pressing POWER and TUNER function keys. Adjust L331 so that the frequency atthe test point is 153.84Hz ± 0.15Hz.

MECHANICAL EXPLODED VIEW 1/1

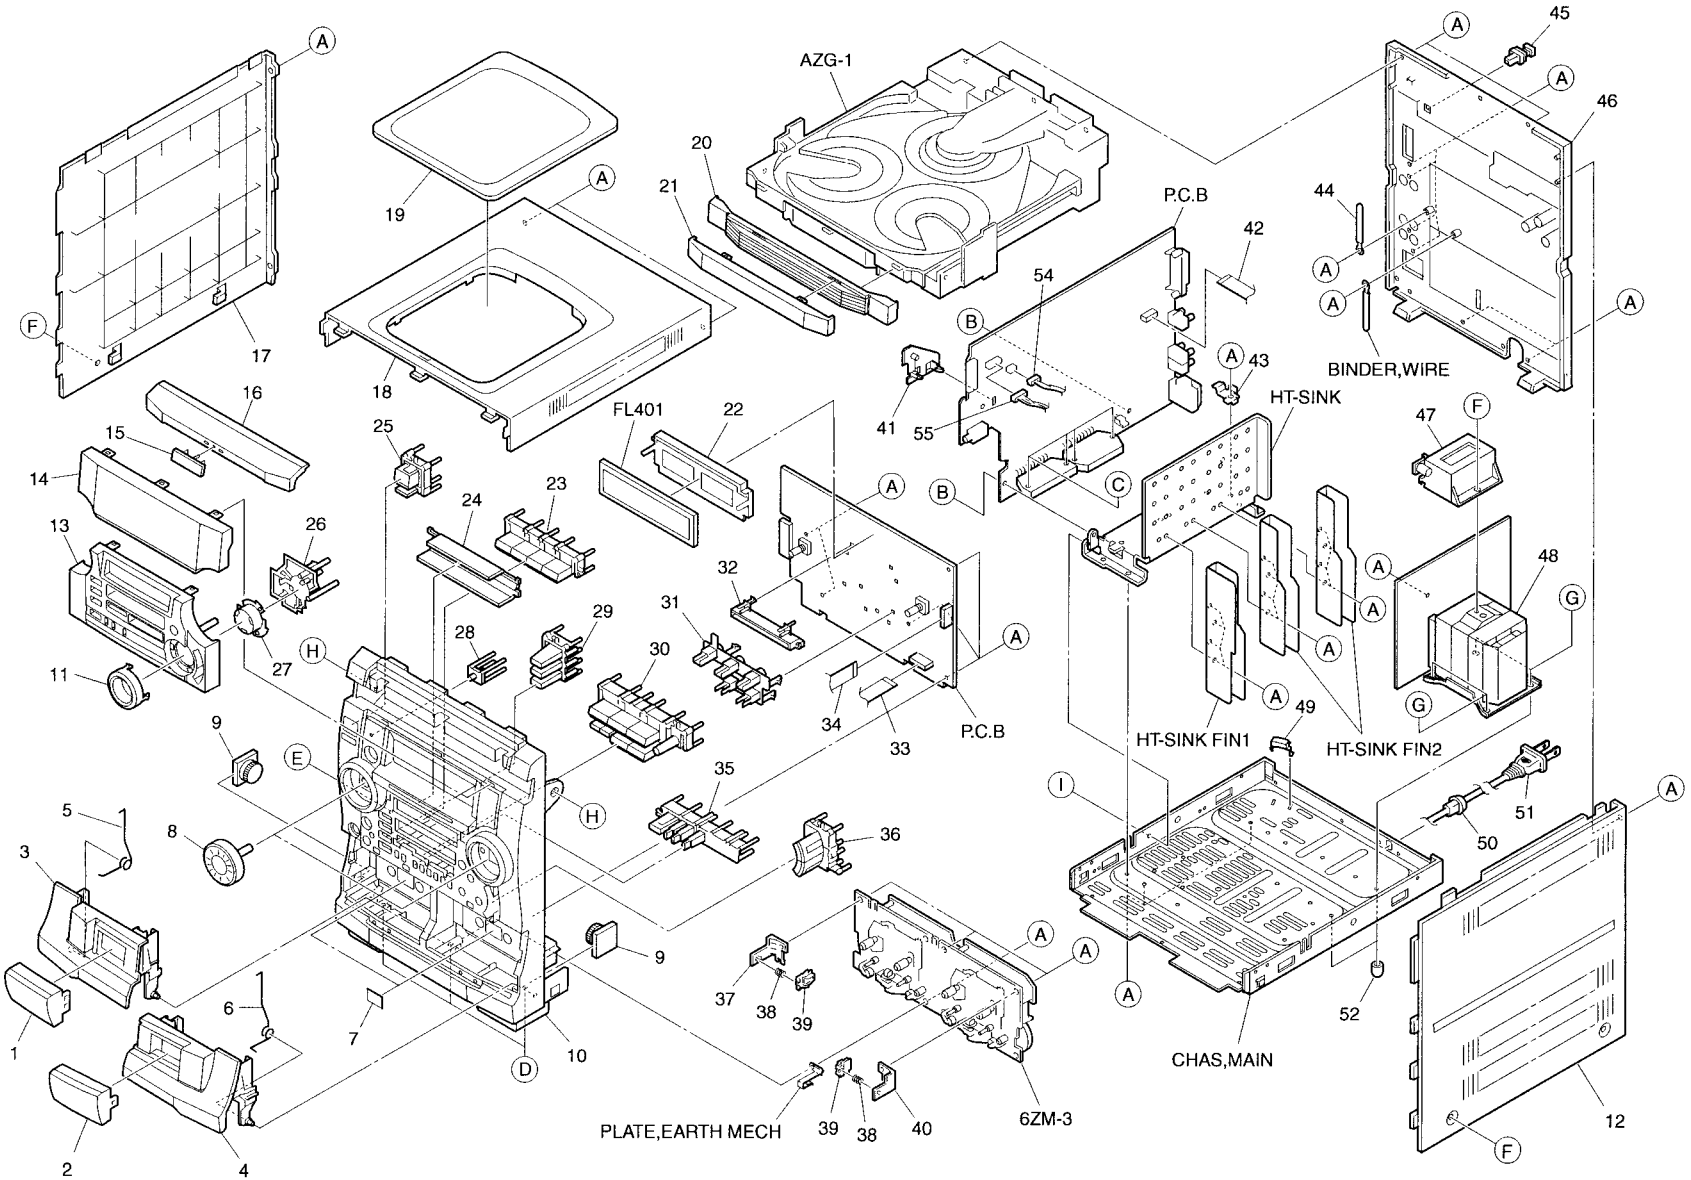

MECHANICAL MAIN PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NF8-014-010		WINDOW,CASS 1
2	8A-NF8-015-010		WINDOW,CASS 2
3	8A-NF8-042-010		BOX,CASS 1H
4	8A-NF8-004-010		BOX,CASS 2 U
5	8A-NF8-207-010		SPR-T,EJECT 1
6	8A-NF8-208-010		SPR-T,EJECT 2
7	81-532-080-010		LBL,CASS-COMPT
8	8A-NF8-019-010		KNOB,RTRY JOG
9	8A-NF8-209-010		OIL-DMPR,120
10	8A-NF8-033-010		CABI,FR E40
11	8A-NF8-034-010		PANEL,DIRECT
12	8A-NF8-008-010		PANEL,RIGHT V-2
13	8A-NF8-045-010		PANEL,FR E<42>
13	8A-NF8-048-010		PANEL,FR K<40>
14	8A-NF8-091-010		WINDOW,DISP E40<40>
14	8A-NF8-092-010		WINDOW,DISP E42<42>
15	87-CE3-023-010		BADGE,AIWA 30N SILV
16	8A-NF8-009-110		PANEL,CD
17	8A-NF8-007-010		PANEL,LEFT V-2
18	8A-NF8-005-010		PANEL,TOP
19	8A-NF8-006-010		WINDOW,TOP
20	8A-NF8-010-010		PANEL,TRAY
21	8A-NF8-011-010		WINDOW,TRAY
22	88-NF8-205-010		GUIDE,FL
23	8A-NF8-020-010		KEY,FUN
24	8A-NF8-018-110		REFLECTOR,FUN
25	8A-NF8-016-010		KEY,POWER
26	8A-NF8-031-110		KEY,DISC
27	8A-NF8-032-010		CAP, DISC
28	8A-NF8-017-010		REFLECTOR,ECO
29	8A-NF8-022-010		KEY,GEQ
30	8A-NF8-036-110		KEY,ASSY OPE REV
31	8A-NF8-203-010		GUIDE,OPE REV
32	8A-NF8-201-010		GUIDE,FUN
33	88-911-101-110		FF-CABLE,11P 1.25
34	88-913-301-110		FF-CABLE,13P-1.25
35	8A-NF8-038-110		KEY,CD EDIT E<42>
35	8A-NF8-028-110		KEY,CD EDIT U<40>
36	8A-NF8-029-110		KEY,OPEN
37	87-NF4-216-010		HLDR,LOCK 1
38	86-NF9-224-010		SPR-C,LOCK
39	82-NF5-229-010		PLATE,LOCK(*)
40	87-NF4-217-110		HLDR,LOCK 2
41	8A-NF8-206-010		HLDR,PWB M
42	88-906-251-110		FF-CABLE,6P 1.25
43	8A-NF8-205-010		HLDR,IC
44	87-064-185-010		HLDR,WIRE PVC 0.5
45	84-ZG1-245-210		CAP,OPTICAL
46	8A-NF8-079-010		CABI,REAR 40 EZSM<40>
46	8A-NF8-080-010		CABI,REAR 42 EZSM R<42>
47	8A-DB8-209-010		HLDR,PWB PT
⚠ 48	8A-NFJ-608-010		PT,ANF-8 EZ(2)
49	87-NF4-221-010		HLDR,CABLE
⚠ 50	87-085-185-010		BUSHING,AC CORD(E) CM-22B
⚠ 51	87-A80-157-010		AC CORD ASSY,E BLK CC
52	8Z-NB8-240-010		COVER, PL
54	87-NF6-615-010		CONN ASSY,3P PB
55	87-A60-625-010		CONN,8P V 2MM JMT
A	87-067-703-010		BVT2+3-10 W/O SLOT
B	87-NF4-224-010		S-SCREW,IT3B+3-8 CU
C	87-067-581-010		BVT2+3-15 W/O SLOT
D	87-067-688-010		BVTT+3-6
E	87-723-096-410		QT2+3-10 W/O SLOT BLK
F	87-067-641-010		UTT2+3-8 W/O SLOT BLK
G	87-078-191-010		S-SCREW,IT+4-10 SWCH12A
H	87-721-097-410		QT2+3-12 W/O SLOT
I	87-721-096-410		QT2+3-10 W/O SLOT

COLOR NAME TABLE

Basic color symbol	Color	Basic color symbol	Color	Basic color symbol	Color
B	Black	C	Cream	D	Orange
G	Green	H	Gray	L	Blue
LT	Transparent Blue	N	Gold	P	Pink
R	Red	S	Silver	ST	Titan Silver
T	Brown	V	Violet	W	White
WT	Transparent White	Y	Yellow	YT	Transparent Yellow
LM	Metallic Blue	LL	Light Blue	GT	Transparent Green
LD	Dark Blue	DT	Transparent Orange	GM	Metallic Green
YM	Metallic Yellow	DM	Metallic Orange	PT	Transparent Pink

MECHANISM MAIN PARTS LIST 1/1 <6ZM-3 PR2NM>

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	86-ZM3-215-110		CHAS ASSY,RS
2	86-ZM3-202-110		BASE,HEAD S
3	86-ZM3-205-010		SPR-C,RPH S
4	82-ZM1-333-210		PLATE,LINK2
5	86-ZM3-206-010		SPR-C,EH S
6	87-A90-403-010		HEAD,RPH MS15R
7	82-ZM1-206-910		CHAS,HEAD (DECK R)
7	86-ZM3-201-010		CHAS,HEAD S (DECK L)
8	87-045-347-010		MOT,SHU2L 70
9	82-ZM1-269-210		SPR-T,BRG
10	82-ZM1-219-110		SPR-T,LINK
11	86-ZM3-219-010		PLATE,SPACER 0.1
12	82-ZM3-339-110		SHAFT,COUPLER N3
13	87-A90-404-010		HEAD,EH LE15B
14	82-ZM3-335-310		PULLEY,COUPLER M3
15	86-ZM3-203-010		HLDR,MOT S
16	82-ZM1-245-210		HLDR,IC
17	82-ZM1-218-010		SPR-E,HB
18	86-ZM3-214-110		BELT,SBU RR
19	82-ZM1-222-210		LVR,PLAY
20	82-ZM1-217-410		REEL TABLE
21	82-ZM1-244-510		SPR-C,BT
22	82-ZM1-285-410		SPR-C,BT L
23	82-ZM1-257-010		SPR-T,CAS
24	82-ZM3-221-210		PULLEY,MOT 2M
25	82-ZM1-242-010		LVR,CAS
26	82-ZM1-243-010		LVR,STOP
27	82-ZM1-344-210		LVR ASSY,PINCH R2
28	86-ZM3-204-010		SPR-T,PINCH S
29	82-ZM1-240-110		LVR,REC(*)
30	86-ZM3-210-010		BELT,PS
31	82-ZM1-234-310		FLY-WHL,L ASSY
32	82-ZM3-305-310		GEAR,CAM M2(*)
33	82-ZM1-227-310		LVR,TRIG
34	82-ZM3-306-110		LVR,FR M2
35	82-ZM1-265-310		SPR-E,TRIG
36	86-ZM1-206-010		BELT,MAIN L
37	82-ZM1-255-310		SPR-E,LVR DIR
38	82-ZM1-322-010		SPR-T,FR 60
39	82-ZM1-220-210		GEAR,IDLER
40	82-ZM3-616-010		RING MAGNET 4
41	82-ZM1-216-510		GEAR,REEL
42	82-ZM1-214-010		SPR-T,DIR
43	82-ZM1-225-210		GEAR,FR
44	82-ZM1-226-010		GEAR,REW
45	82-ZM3-333-310		SLIP DISK ASSY 2
46	82-ZM1-338-110		BELT,FR 4
47	09-001-420-010		FLY-WHL,R ASSY (DECK R)
47	82-ZM1-237-610		FLY-WHL ASSY,RW(DECK L)
48	82-ZM1-259-210		SPR-T,PINCH R
49	82-ZM1-341-210		LVR ASSY,PINCH L2
50	82-ZM1-258-210		SPR-T,PINCH L
51	82-ZM1-314-110		PLATE,HEAD
52	82-ZM1-208-310		HLDR,HEAD
53	87-A90-366-110		HEAD,PH YK50P-BF414 FPC
54	82-ZM1-207-910		GUIDE,TAPE
55	82-ZM1-213-010		SPR-T,HEAD
56	82-ZM1-210-110		GEAR,H T
57	82-ZM1-266-310		LVR,DIR
A	87-251-071-410		U+2.6-4
B	80-ZM6-243-010		SH 1.75-3.6-0.5 SLT
C	82-ZM3-334-010		PW 2.16-6-0.4
D	80-ZM6-207-010		V+1.6-7
E	85-ZM3-202-010		S-SCREW,TG
F	82-ZM1-288-010		SH,1.63-3.2-0.5 SLT
G	87-B10-043-010		W-P,0.99-4-0.25 SLT
H	82-ZM3-222-010		S-SCREW,SHILD PLATE
I	86-ZM3-209-010		S-SCREW,AZIMUTH S
J	86-ZM3-207-010		S-SCREW,RPH
K	86-ZM3-208-110		S-SCREW,EH
L	86-ZM3-218-110		S-SCREW,EH 2
M	86-ZM4-206-010		S-SCREW,AZIMUTH L
N	87-761-073-410		VFT2+2.6-8 W/O SLOT
O	86-ZM3-213-010		S-SCREW,HLDR MOT S

MECHANISM EXPLODED VIEW 1/1 <6ZM-3 PR2NM>

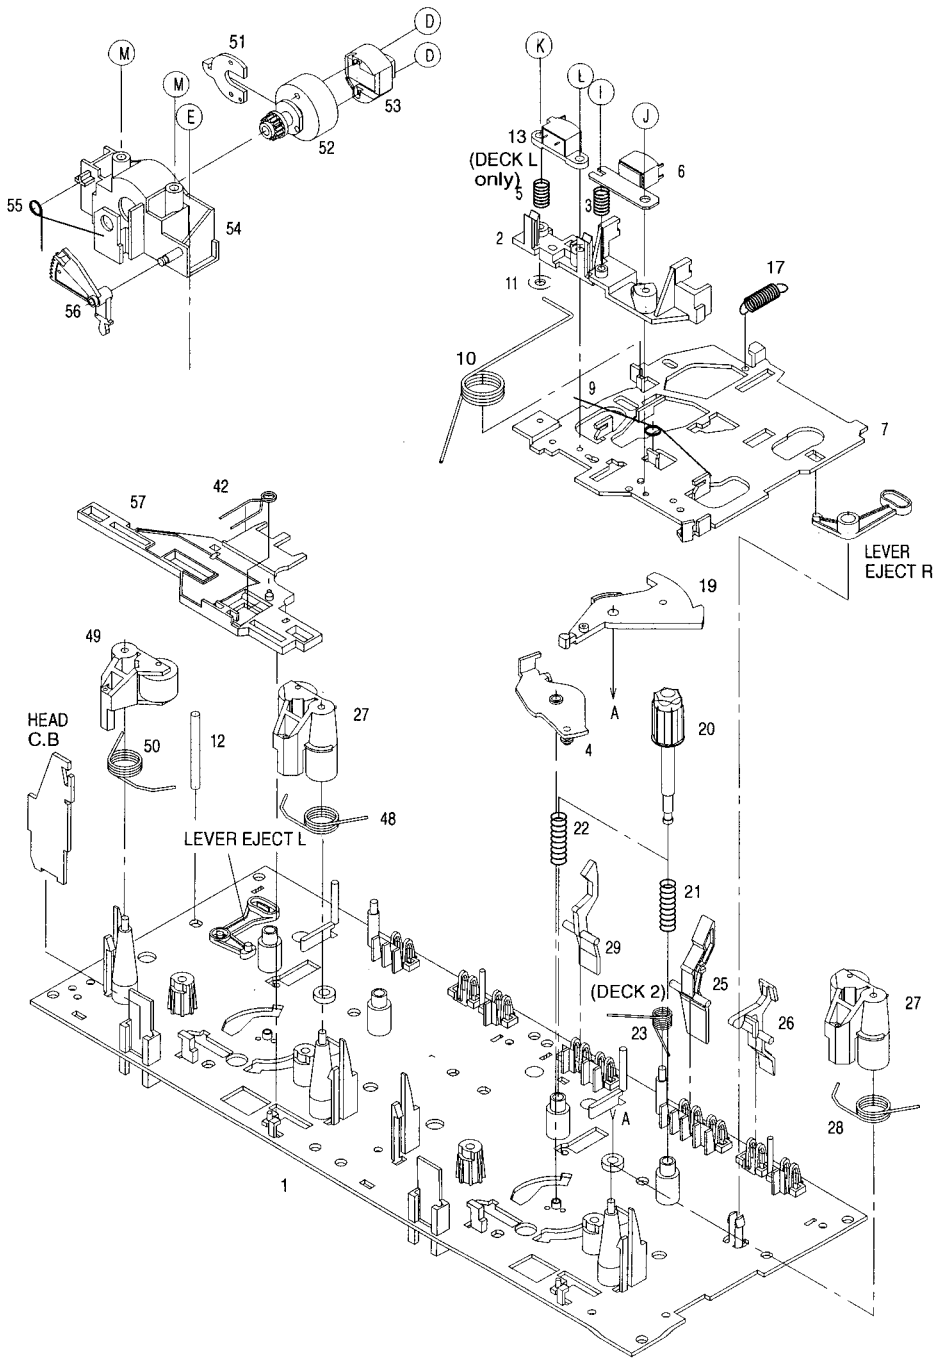

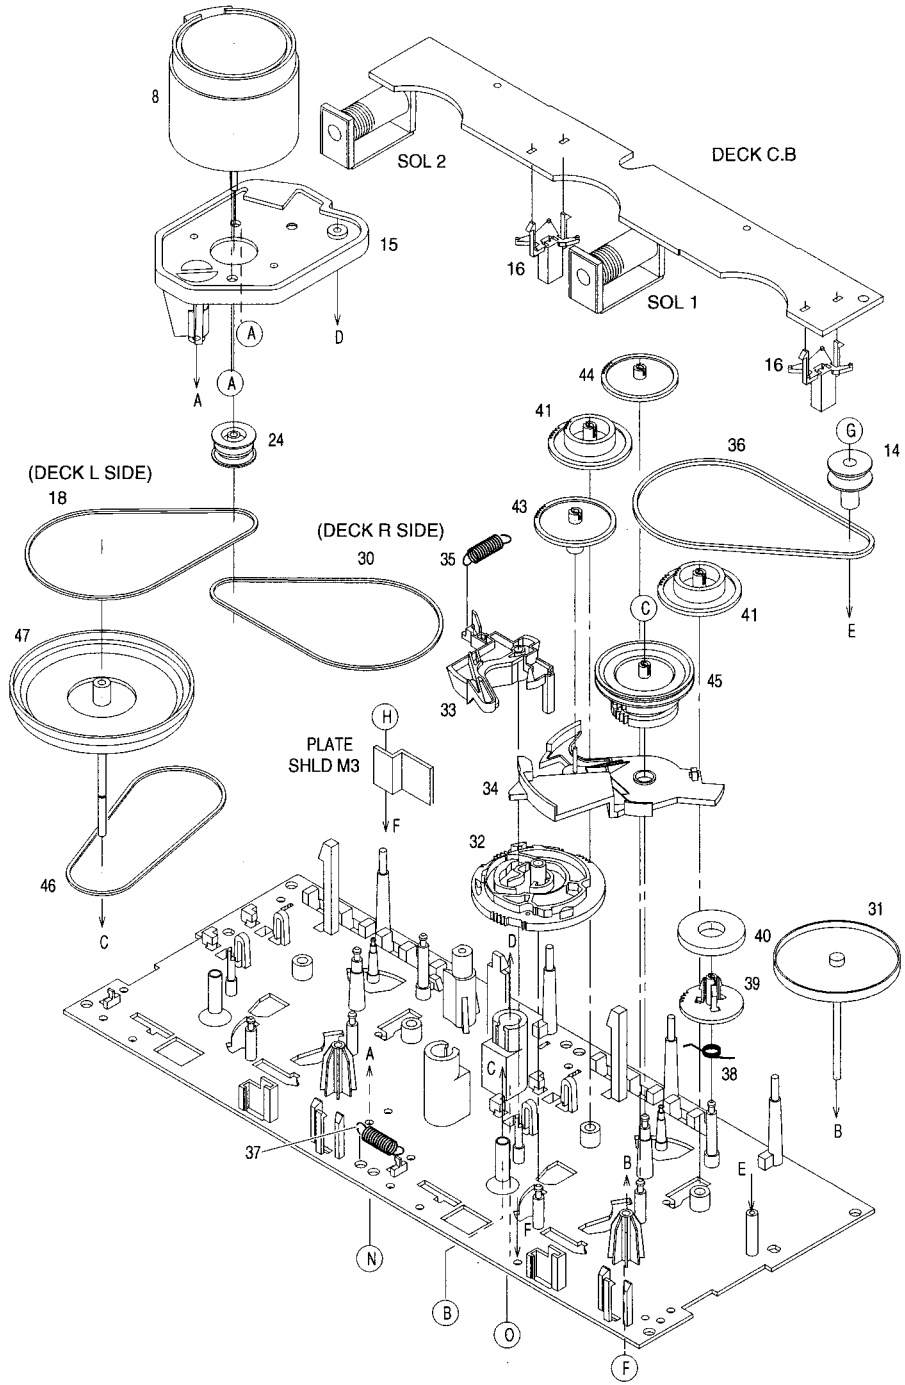

SPEAKER DISASSEMBLY INSTRUCTIONS

Type.1

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

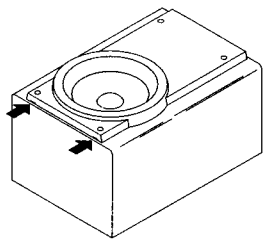

Type.2

Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver. Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

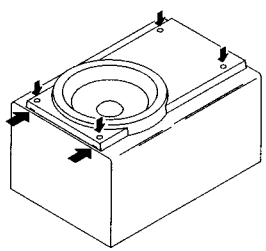

Type.3

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwisedirection while inserting a flat-bladed screwdriver into one of the hollows around speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

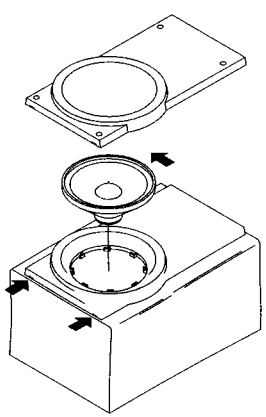

Type.4

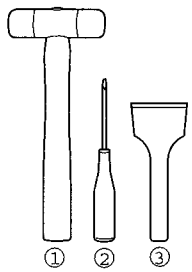

TOOLS

① Plastic head hammer
② (⊖) flat head screwdriver
③ Cut chisel

How to Remove the PANEL, FR

1. Insert the (⊖) flat head screwdriver tip into the gap between the PANEL, FR and the PANEL, SPKR. Tap the head of the (⊖) flat head screwdriver with the plastic hammer head, and create the clearance as shown in Fig-1.

2. Insert the cut chisel in the clearance, and tap the head of the cut chisel with plastic hammer as shown in Fig-2, to remove the PANEL, FR.

3. Place the speaker horizontally. Tap head of the cut chisel with plastic hammer as shown in Fig-3, and remove the PANEL, FR completely.

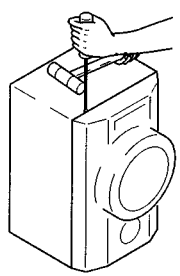

Fig-1

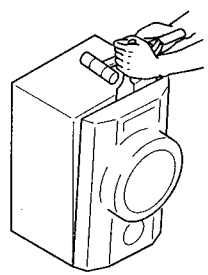

Fig-2

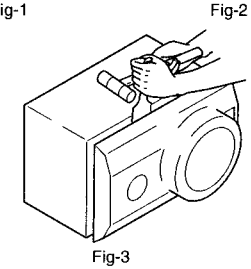

Fig-3

How to Attach the PANEL, FR

Attach the PANEL, FR to the PANEL, SPKR. Tap the four corners of the PANEL, FR with the plastic hammer to fit the PANEL, FR into the PANEL, SPKR completely.

SPEAKER PARTS LIST <SX-NSZ51>

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NSJ-002-010		PANEL,FR L
2	8A-NSJ-001-010		PANEL,FR R
3	8A-NSJ-004-010		GRILLE,FRAME
4	8A-NSJ-003-010		GRILLE,FRAME ASSY
5	8A-NSJ-005-010		NET,
6	8A-NSJ-008-010		PROTECTOR,TWA
7	87-NS7-611-010		CORD,SPKR
8	88-MS1-608-010		SPKR, CERAMIC
9	8A-NSX-602-010		SPKR, W 140
10	8A-NSK-604-010		SPKR,TW 60
11	8A-NSJ-006-010		BADGE,AIWA S35

SPEAKER PARTS LIST <SX-NSZ53>

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NSJ-002-010		PANEL,FR L
2	8A-NSJ-001-010		PANEL,FR R
3	8A-NSJ-004-010		GRILLE,FRAME
4	8A-NSJ-024-010		GRILLE,FRAME ASSY L
5	8A-NSJ-008-010		PROTECTOR,TWA
6	87-NS7-611-010		CORD,SPKR
7	8A-NSX-602-010		SPKR, W 140
8	8A-NSK-604-010		SPKR,TW 60
9	88-MS1-608-010		SPKR, CERAMIC
10	8A-NSJ-006-010		BADGE,AIWA S35

VIDE-V25649

aiwa SERVICE

AZG-1

English

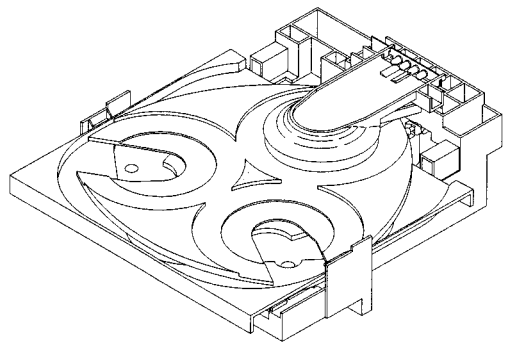

SERVICE MANUAL

CD-R/RW MECHANISM

BASIC CD MECHANISM:KSM-880CAB

TYPE
ZD8RD
YZD8RMDJM
ZD8RMDJM
ZD8RDNDM
YKZD8RDF
ZD8RDM
YZD8RDM
ZD8RN1DM
YZD8RDJM

aiwa

S/M Code No. 09-001-335-3N6

DATA

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

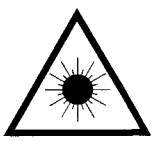

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel:Usynling laserståling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvising, kan användaren utsättas för osynling laserstrålning, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION

L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserståling ved åbning, når sikkerhedsafbrydereer ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.
The CLASS 1 LASER PRODUCT label is located on the rear exterior.

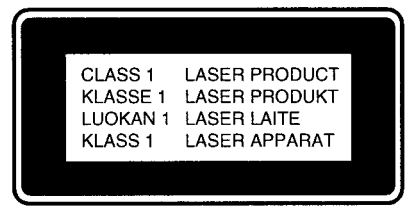

Precaution to replace Optical block

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

1) After the connection, remove solder shown in the figure below.

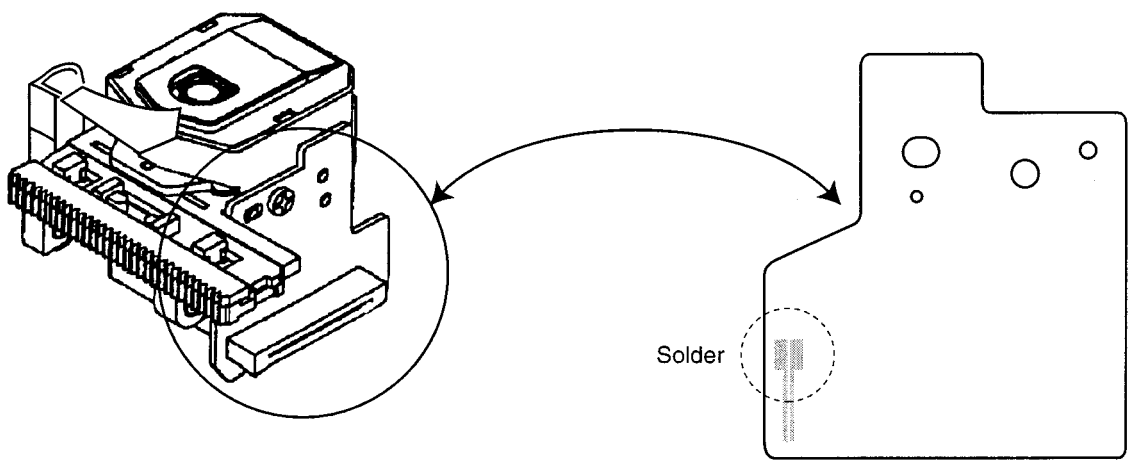

How to Adjust the Rotating Phase of the Gear, Main Cam

1) Push down the hooking catch of the CHAS. MECH, and remove the TRAY.
2) Align the arrow mark of the Gear, Main Cam with the black round mark of the CHAS, MECHA as shown below.
3) Confirm that the Slide, Mech Cam is located in the right position, then insert the TRAY gently.

Caution: If the rotating phase of the Gear, Main Cam is incorrectly adjusted, the chucking operation and tray movement will have malfunction.

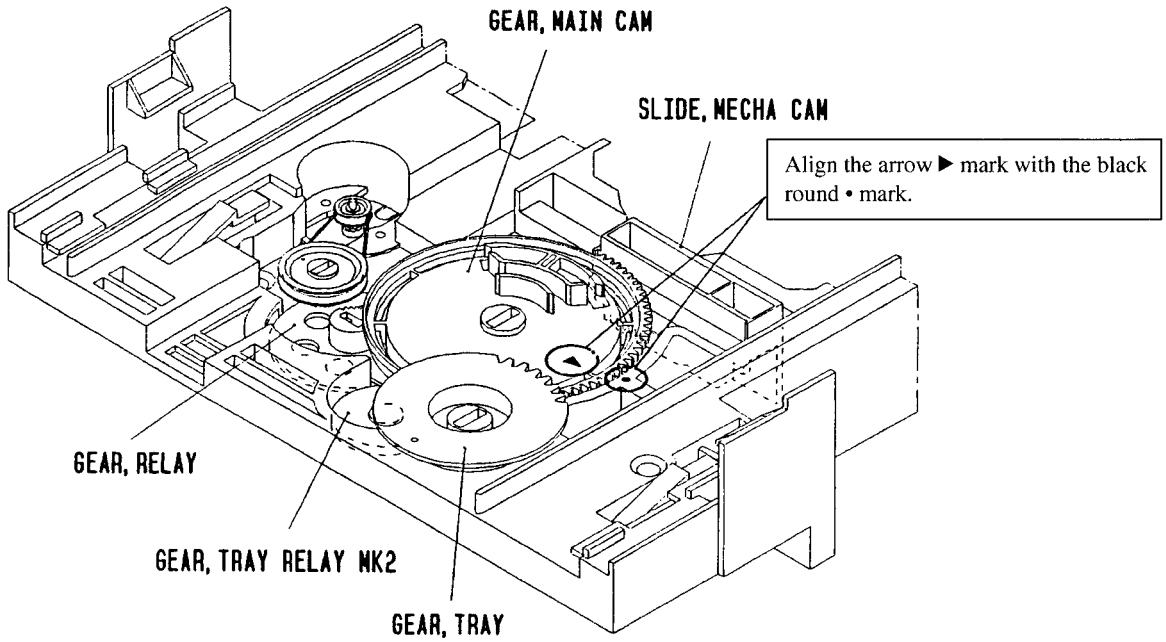

ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
IC			
	87-A21-381-040		C-IC,LA9235M
	87-A21-556-010		C-IC,LC78641E
	87-A21-414-010		IC,BA5927S
TRANSISTOR			
	87-026-609-080		TR,KTA1266GR
	87-A30-076-080		C-TR,2SC3052F
	87-A30-497-080		TR,2SA1980Y/G
	87-A30-087-080		C-FET,2SK2158
	87-026-237-080		CHIP-TR,DTC124XK <EXCEPT ZD8RN1DM,YZD8RDM>
	87-A30-075-080		C-TR,2SA1235F
DIODE			
	87-A40-270-080		C-DIODE,MC2838
	87-070-136-080		ZENER,MTZJ5.1B
	87-A40-003-080		ZENER,MTZJ4.3A
	87-A40-337-080		ZENER,MTZJ6.8B
	87-A40-313-080		C-DIODE,MC2840
3CD C.B			
C1	87-010-374-080		CAP,E 47-10
C2	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
C2	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C3	87-010-260-080		CAP, ELECT 47-25V
C4	87-010-260-080		CAP, ELECT 47-25V
C5	87-010-197-020		CHIP CAPACITOR,0.01-25 <EXCEPT YKZD88RDF,ZD8RD>
C5	87-010-197-080		CHIP CAPACITOR,0.01-25 <YKZD88RDF,ZD8RD>
C6	87-010-405-080		CAP, ELECT 10-50V
C7	87-010-263-080		CAP, ELECT 100-10V
C8	87-012-349-080		C-CAP,S 1000P-50 CH
C10	87-010-546-080		CAP,E 0.33-50
C11	87-010-401-080		CAP, ELECT 1-50V
C13	87-010-321-020		C-CAP,S 82P-50 CH <EXCEPT YKZD88RDF,ZD8RD>
C13	87-010-321-080		C-CAP,S 82P-50 J CH <YKZD88RDF,ZD8RD>
C15	87-010-197-020		CHIP CAPACITOR,0.01-25 <EXCEPT YKZD88RDF,ZD8RD>
C15	87-010-197-080		CHIP CAPACITOR,0.01-25 <YKZD88RDF,ZD8RD>
C16	87-010-260-080		CAP, ELECT 47-25V
C101	87-010-992-080		C-CAP,S 0.047-25 B
C102	87-010-401-080		CAP, ELECT 1-50V
C103	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
C103	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C104	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
C104	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C105	87-010-260-080		CAP, ELECT 47-25V
C106	87-010-322-020		C-CAP,S 100P-50 CH <EXCEPT YKZD88RDF,ZD8RD>
C106	87-010-322-080		C-CAP,S 100P-50 CH <YKZD88RDF,ZD8RD>
C107	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
C107	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C108	87-010-186-080		CAP,CHIP 4700P<YKZD88RDF,ZD8RD>
C108	87-010-186-020		CAP,CHIP 4700P <EXCEPT YKZD88RDF,ZD8RD>
C109	87-010-992-080		C-CAP,S 0.047-25 B
C110	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C110	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
C111	87-010-260-080		CAP, ELECT 47-25V
C112	87-010-197-020		CHIP CAPACITOR,0.01-25 <EXCEPT YKZD88RDF,ZD8RD>
C112	87-010-197-080		CHIP CAPACITOR,0.01-25 <YKZD88RDF,ZD8RD>
C114	87-010-260-080		CAP, ELECT 47-25V
C115	87-010-197-080		CHIP CAPACITOR,0.01-25 <YKZD88RDF,ZD8RD>
C115	87-010-197-020		CHIP CAPACITOR,0.01-25 <EXCEPT YKZD88RDF,ZD8RD>
C116	87-010-260-080		CAP, ELECT 47-25V
C117	87-010-197-080		CHIP CAPACITOR,0.01-25 <YKZD88RDF,ZD8RD>
C117	87-010-197-020		CHIP CAPACITOR,0.01-25 <EXCEPT YKZD88RDF,ZD8RD>
C118	87-010-260-080		CAP, ELECT 47-25V
C119	87-015-819-080		
C120	87-010-312-080		C-CAP,S 15P-50 CH <YKZD88RDF,ZD8RD>
C120	87-010-312-020		C-CAP,S 15P-50 CH <EXCEPT YKZD88RDF,ZD8RD>
C121	87-010-312-020		C-CAP,S 15P-50 CH <EXCEPT YKZD88RDF,ZD8RD>
C121	87-010-312-080		C-CAP,S 15P-50 CH <YKZD88RDF,ZD8RD>
C122	87-010-404-080		CAP, ELECT 4.7-50V
C123	87-010-197-020		CHIP CAPACITOR,0.01-25 <EXCEPT YKZD88RDF,ZD8RD>
C123	87-010-197-080		CHIP CAPACITOR,0.01-25 <YKZD88RDF,ZD8RD>
C124	87-010-401-080		CAP, ELECT 1-50V
C126	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
C126	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C128	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
C128	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C130	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C130	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
C132	87-010-405-080		CAP, ELECT 10-50V
C133	87-010-314-020		C-CAP,S 22P-50V <EXCEPT YKZD88RDF,ZD8RD>
C133	87-010-314-080		C-CAP,S 22P-50V<YKZD88RDF,ZD8RD>
C135	87-A11-088-080		CAP,TC U 100P-50 J CH
C151	87-010-405-080		CAP, ELECT 10-50V
C152	87-010-405-080		CAP, ELECT 10-50V
C192	87-012-349-080		C-CAP,S 1000P-50 CH
C193	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C193	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
C201	87-A10-730-080		CAP,E 1000-16 SMG
C202	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C202	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
C204	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
C204	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C205	87-010-405-080		CAP, ELECT 10-50V
C206	87-010-405-080		CAP, ELECT 10-50V
C207	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
C207	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C301	87-010-382-080		CAP, ELECT 22-25V
C302	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
C302	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C303	87-010-260-080		CAP, ELECT 47-25V
C401	87-010-322-020		C-CAP,S 100P-50 CH <EXCEPT YKZD88RDF,ZD8RD>
C401	87-010-322-080		C-CAP,S 100P-50 CH <YKZD88RDF,ZD8RD>
C402	87-010-322-020		C-CAP,S 100P-50 CH <EXCEPT YKZD88RDF,ZD8RD>
C402	87-010-322-080		C-CAP,S 100P-50 CH <YKZD88RDF,ZD8RD>
C403	87-010-322-020		C-CAP,S 100P-50 CH <EXCEPT YKZD88RDF,ZD8RD>
C403	87-010-322-080		C-CAP,S 100P-50 CH <YKZD88RDF,ZD8RD>
C404	87-010-322-080		C-CAP,S 100P-50 CH <YKZD88RDF,ZD8RD>
C404	87-010-322-020		C-CAP,S 100P-50 CH <EXCEPT YKZD88RDF,ZD8RD>
C405	87-010-322-020		C-CAP,S 100P-50 CH <EXCEPT YKZD88RDF,ZD8RD>
C405	87-010-322-080		C-CAP,S 100P-50 CH <YKZD88RDF,ZD8RD>
C406	87-010-322-020		C-CAP,S 100P-50 CH <EXCEPT YKZD88RDF,ZD8RD>
C406	87-010-322-080		C-CAP,S 100P-50 CH <YKZD88RDF,ZD8RD>
C407	87-010-405-080		CAP, ELECT 10-50V
C454	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
C454	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C601	87-010-260-080		CAP, ELECT 47-25V
C602	87-010-196-080		CHIP CAPACITOR,0.1-25 <YKZD88RDF,ZD8RD>
C602	87-010-196-020		CHIP CAPACITOR,0.1-25 <EXCEPT YKZD88RDF,ZD8RD>
CN1	87-A60-429-010		CONN,16P H TOC-A
CN201	84-ZG1-648-010		CONN ASSY,6P
CN202	87-A60-130-010		CONN,5P V
CN501	84-ZG1-647-010		CONN ASSY,2P <EXCEPT ZD8RN1DM,ZD8RNDM>
CN601	87-009-345-010		CONN,2P PH V <EXCEPT ZD8RN1DM,ZD8RDM,YZD8RDM,ZD8RNDM>
CON401	87-099-030-010		CONN,13P 6216H
FB601	87-008-372-080		FLTR,EMI BL01 RN1 <EXCEPT ZD8RN1DM,ZD8RDM,YZD8RDM,ZD8RNDM>
FB602	87-008-372-080		FLTR,EMI BL01 RN1
LED601	87-A40-558-010		LED,SLZ-8128A-01-A
M201	87-045-305-010		MOTOR, RF-500TB DC-5V (2MA)
SW201	87-036-109-010		SW,MICRO SPPB61
SW202	87-036-109-010		SW,MICRO SPPB61
X101	87-A70-046-010		VIB,XTAL 16.934MHZ
LED. C.B			
LED501	87-A40-263-080		LED,SLH-56PCT31 GRN <EXCEPT ZD8RN1DM,ZD8RNDM>
LED502	87-A40-263-080		LED,SLH-56PCT31 GRN <EXCEPT ZD8RN1DM,ZD8RNDM>
LED503	87-A40-268-080		LED,SLH-56DCT31 ORN <EXCEPT ZD8RN1DM,ZD8RNDM>
LED504	87-A40-268-080		LED,SLH-56DCT31 ORN <EXCEPT ZD8RN1DM,ZD8RNDM>
T-T C.B			
C401	87-018-214-080		CAP TC U 0.1-50F
CON401	86-NFZ-675-010		CONN,5P H 6216-11H
M401	87-045-364-010		MOTOR(BCH3B14)
PS401	87-026-573-010		SNSR,PHOTO GP1S53V
MOTOR C.B			
PIN3	91-564-722-110		CONN,PIN 6P
SW1	91-572-085-110		LEAF SWITCH

- Regarding connectors, they are not stocked as they are not the initial order items.
  The connectors are available after they are supplied from connector manufacturers upon the order is received.

Oチップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

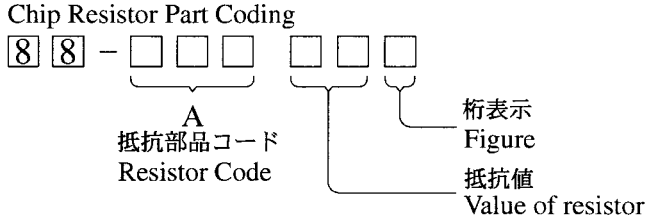

チップ抵抗
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm) 外形／Form	L	W	t	抵抗コード : A Resistor Code : A
1/16W	1005	±5%	CJ		1.0	0.5	0.35	104
1/16W	1608	±5%	CJ		1.6	0.8	0.45	108
1/10W	2125	±5%	CJ		2	1.25	0.45	118
1/8W	3216	±5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION

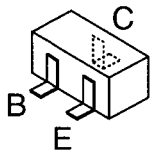

2SA1235F
2SC3052F
DTC124XK



2SA1980Y/G
KTA1266GR

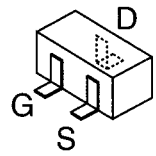

2SK2158

BLOCK DIAGRAM

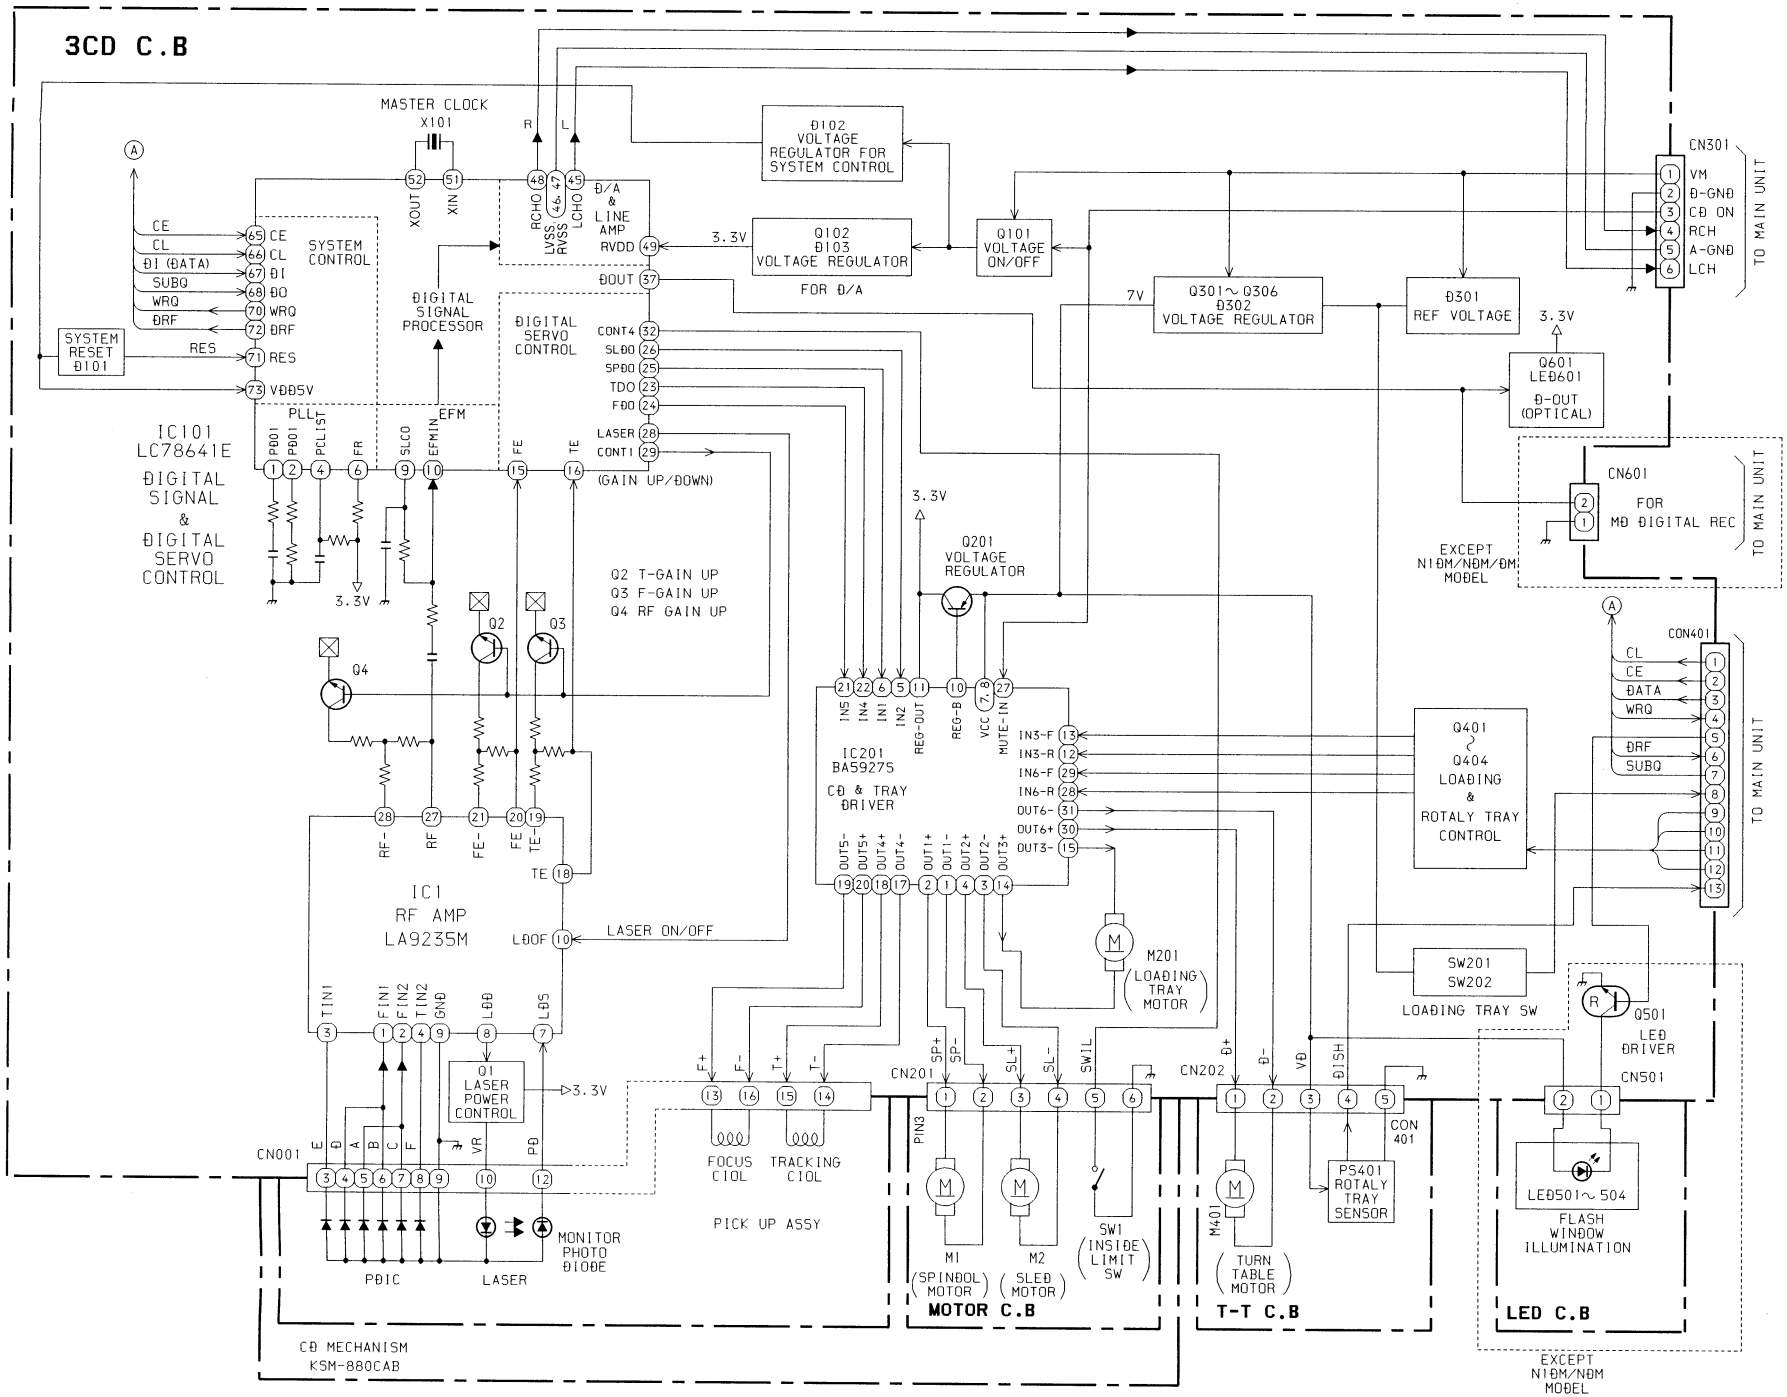

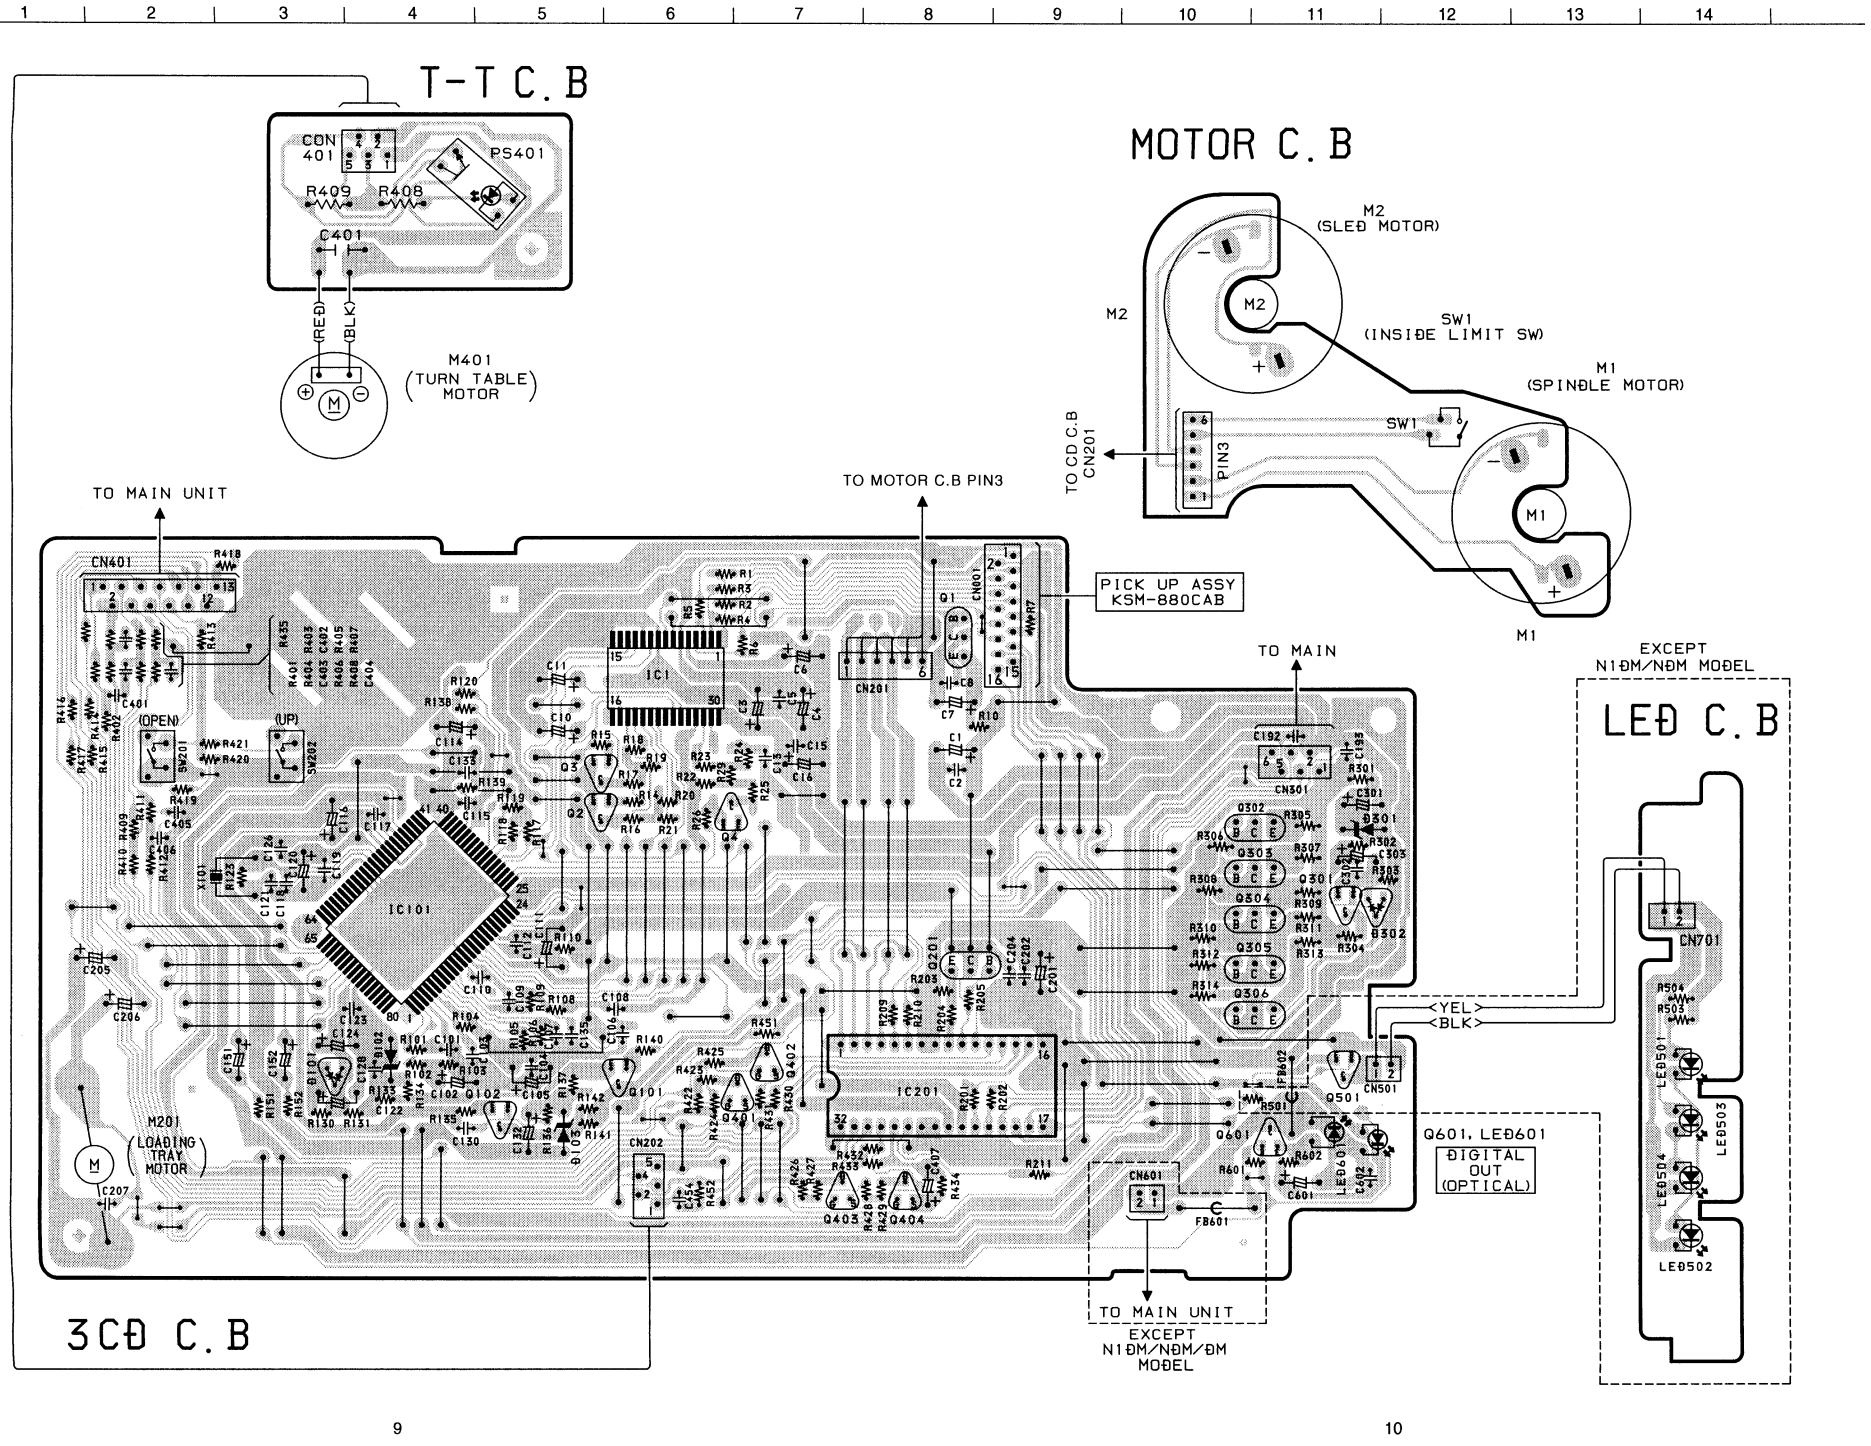
T-T C.B
CON 401
PS401
R409
R408
C401
(RED)
(BLK)
M401 (TURN TABLE MOTOR)
MOTOR C.B
M2 (SLED MOTOR)
M2
SW1 (INSIDE LIMIT SW)
M1 (SPINDLE MOTOR)
SW1
M1
PIN3
TO CD C.B CN201
TO MAIN UNIT
TO MOTOR C.B PIN3
PICK UP ASSY KSM-880CAB
TO MAIN
EXCEPT N1DM/NDM MODEL
LED C.B
CN401
(OPEN)
(UP)
SW201
SW202
IC1
IC101
IC201
CN001
CN201
CN301
CN501
CN601
CN701
Q1
Q101
Q102
Q201
Q301
Q302
Q303
Q304
Q305
Q306
Q401
Q402
Q403
Q404
Q501
Q601
M201 (LOADING TRAY MOTOR)
<YEL
<BLK
Q601, LED601
DIGITAL OUT (OPTICAL)
TO MAIN UNIT
EXCEPT N1DM/NDM/DM MODEL
LED501
LED502
LED503
LED504
3CD C.B

SCHEMATIC DIAGRAM

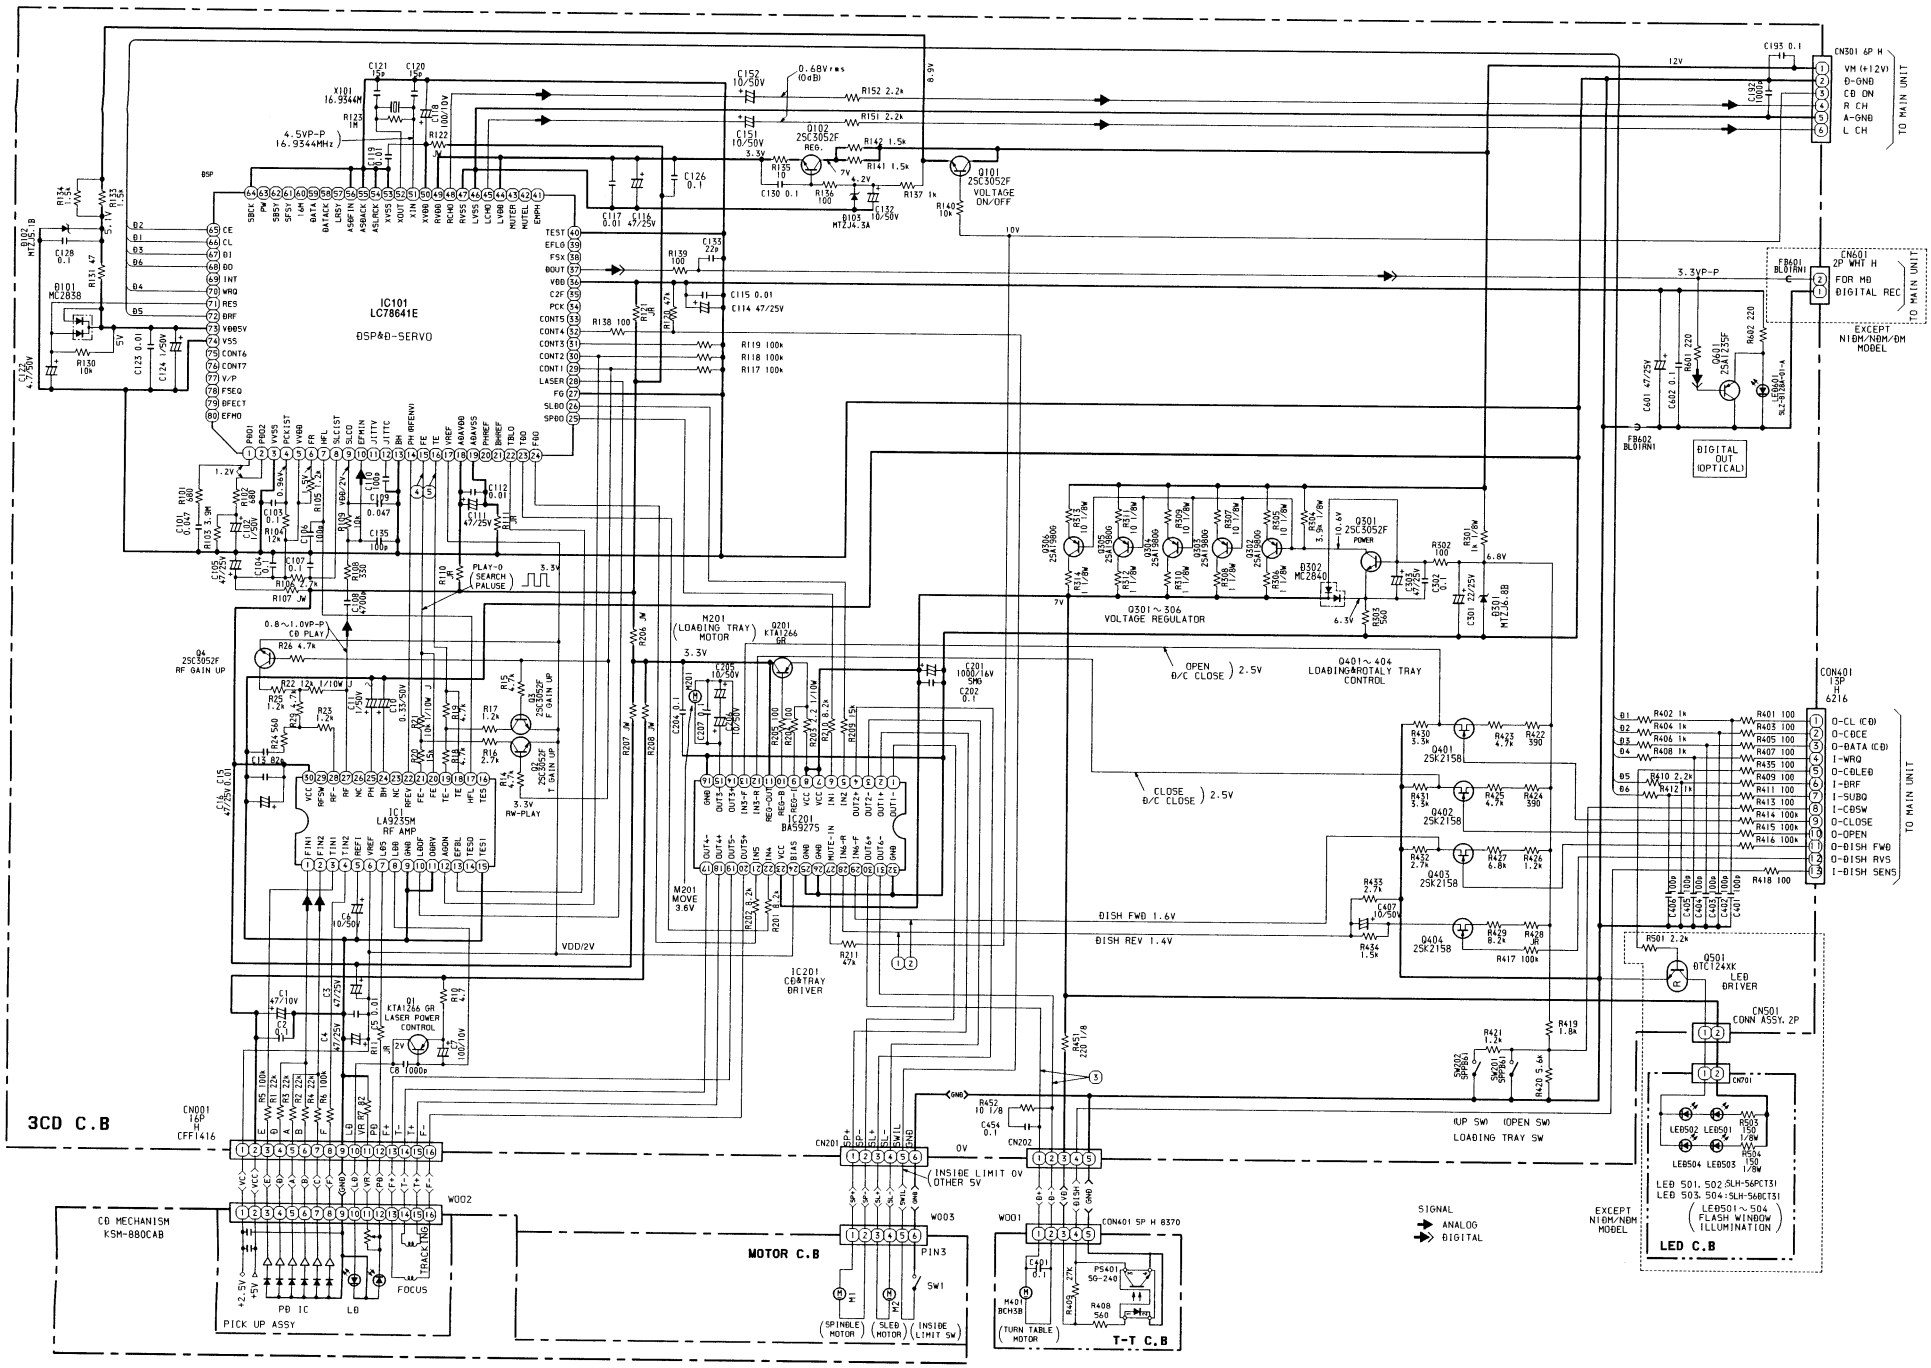

TEST MODE

1. How to Start the CD Test Mode

While pressing the CD function key, connect the AC power plug to wall outlet.
The test mode starts up and "CD TEST" appears on the display.

2. How to Exit the CD Test Mode

Press the POWER button or disconnect the AC power plug from wall outlet.
* When any function key other than PLAY is pressed during playback, the test mode is canceled.

3. Function and Use of the CD Test Mode

NO	MODE	How to enter the mode	Display	Operation	Check item
1	Start mode		All indicators turn on	• All FL all ndicators turn on	• FL check • Microprocessor check
2	Search mode	STOP button	CD	• LD turns on all the time • Focus search continuos operation *1 • Spindle motor continuos kick	• APC circuit check • Laser current measurement • Focus search waveform check • Focus error waveform check (Ignores DRF during search mode)
3	Play mode	PLAY button	Normal	• Normal playback • Focus search is continued if failed in TOC READ.	• Each servo circuit is checked • DRF check
4	Traverse mode	PAUSE button	Normal	• Tracking servo OFF/ON Repeats OFF/ON every time the PAUSE button is pressed	• Tracking balance check
5	Sled mode	FF button	CD TEST	• Moves PU to inner circumference *2 Kicks the lens to inner circumference at the same time	• Sled circuit check • Tracking circuit check • Mechanism operation check • PU check
		RWD button	CD TEST	• Moves PU to outer circumference *2 Kicks the lens to outer circumference at the same time	
6	Spindle mode	TAPE REC button	All indicators turn on	• Pressing the button once rotates the spindle motor in the normal direction (rough speed). Pressing the button again rotates it in the reverse direction. Pressing it again stops the motor	• Spindle circuit check • Spindle motor check
7	RF AGC mode	TUNER button	AGC ON/OFF	• Repeats ON/OFF every time the TUNER button is pressed	• PU good or defective check • RF AMP circuit check

*1 ..... When the focus search keeps running for 10 minutes or longer continuously, the driver IC heats up, and the protective circuit works so that the machine may stops operating.
In this case, turn off the main power, wait for a while and restart the machine.

*2 ..... Do not keep pressing the FF or RWD button while the pickup is located at the innermost or outermost circumference because the gear can be damaged as the sled motor keeps rotating.

4. Automatic Adjustment Result Display

The automatic adjustment values of the focus and the tracking can be displayed.

4-1. Automatic Adjustment Result Display of Focus Offset Cancel/Gain

1) Enter the start mode (all indicators turn on).
2) Press the TAPE button to display "F**" and set each of the adjustment item to either ON or OFF. (Refer to the following table.)
3) Press the PLAY button to play back the CD.
4) Press the CD button.
5) The automatic adjustment value "F** **" is displayed. (Refer to the following table.)
6) Upon completion of check, press the CD button twice to return to the play mode.

Adjustment item (ON = 1, OFF = 0)			Automatic adjustment value display (Asterisk * means hexadecimal display.)			
F	OFFSET	GAIN	F	OFFSET	—	GAIN
F	0	0	F	Not displayed	Not displayed	Not displayed
F	1	1	F	**	Not displayed	**
F	1	0	F	**	Not displayed	Not displayed
F	0	1	F	Not displayed	Not displayed	**

4-2. Automatic Adjustment Result Display of Tracking Offset Cancel/Balance/Gain

1) Enter the start mode (all indicators turn on).
2) Press the AUX button to display "T***" and set each adjustment item to either ON or OFF. (Refer to the following table.)
3) Press the PLAY button to play back the CD.
4) Press the CD button twice.
5) The automatic adjustment value "F******" is displayed. (Refer to the following table.)
6) Upon completion of check, press the CD button to return to the play mode.

Adjustment item (ON = 1, OFF = 0)				Automatic adjustment value display (Asterisk * means hexadecimal display.)			
T	OFFSET	BALANCE	GAIN	T	OFFSET	BALANCE	GAIN
T	0	0	0	T	Not displayed	Not displayed	Not displayed
T	1	1	1	T	**	**	**
T	1	1	0	T	**	**	Not displayed
T	1	0	1	T	**	Not displayed	**
T	1	0	0	T	**	Not displayed	Not displayed
T	0	1	1	T	Not displayed	**	**
T	0	1	0	T	Not displayed	**	Not displayed
T	0	0	1	T	Not displayed	Not displayed	**

WAVE FORM

① IC201 ㉘ (IN6-R) VOLT/DIV: 500mV
② IC201 ㉙ (IN6-F) TIME/DIV: 200mS

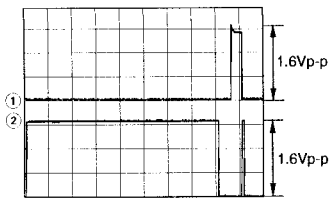

③ Between CN202 ① and ② VOLT/DIV: 1V
(② Pin: 0 Level) TIME/DIV: 200mS

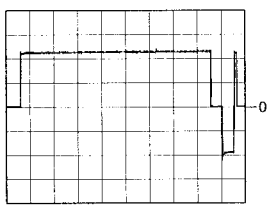

④ IC101 ⑮ (FE) VOLT/DIV: 500mV
TIME/DIV: 2mS

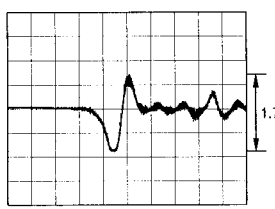

⑤ IC101 ⑯ (TE) VOLT/DIV: 200mV
TIME/DIV: 200μS

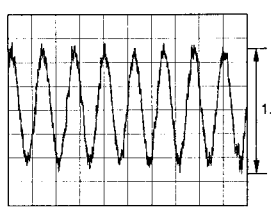

IC BLOCK DIAGRAM

IC, BA5927S

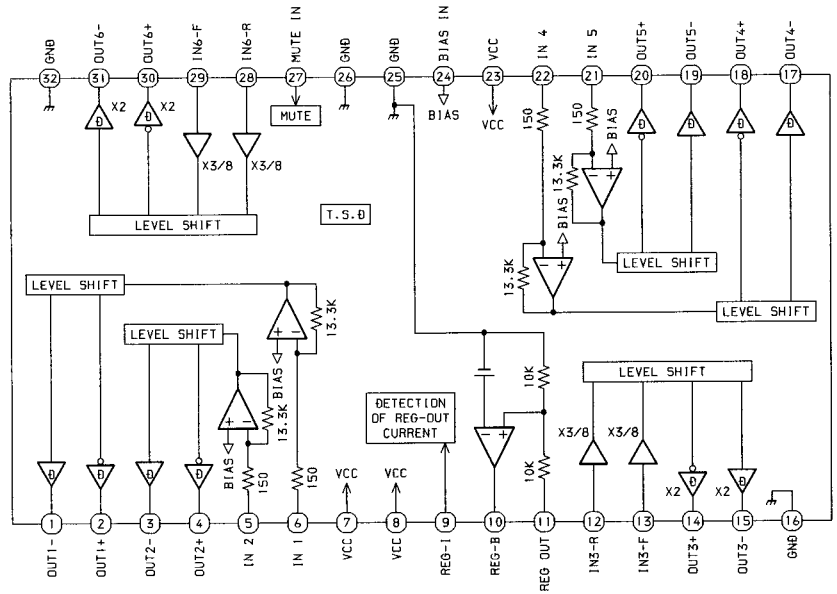

IC, LA9235M

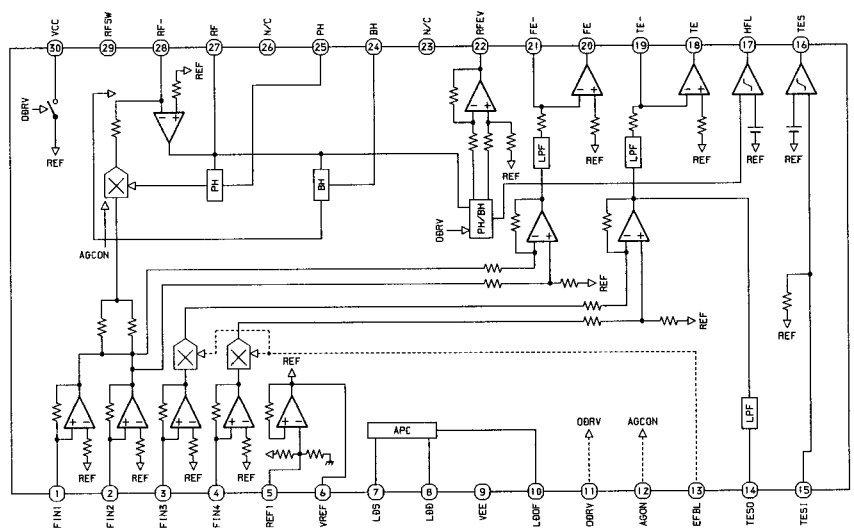

IC DESCRIPTION

IC, LC78641E

Pin No.	Pin Name	I/O	Description
1	PDO1	O	Internal VCO control phase comparator output pin. (Pull down)
2	PDO2	O	Internal VCO control phase comparator output pin. OFF for rough servo, ON for phase servo. (Pull down)
3	VVSS	—	Internal VCO ground pin.
4	PCKIST	—	PDO output current adjustment resistor connection pin.
5	VVDD	—	Internal VCO power supply pin.
6	FR	—	VCO frequency range adjustment resistor connection pin. (Pull up)
7	HFL	I	Mirror detection signal input pin.
8	SLCIST	—	SLCO output current adjustment resistor connection pin.
9	SLCO	O	Control output.
10	EFMIN	I	EFM signal input pin.
11	JITTV	O	Jitter detection monitor pin.
12	JITTC	O	Jitter detection adjustment pin. (Pull down)
13	BH	I	BH signal input pin. (Connected to GND)
14	PH (RFENV)	I	PH signal or RFENV signal input pin.
15	FE	I	FE signal input pin.
16	TE	I	TE signal input pin.
17	VREF	I	VREF input pin.
18	ADAVDD	—	Servo A/D, D/A power supply pin.
19	ADAVSS	—	Servo A/D, D/A ground pin.
20	PHREF	O	PH reference output pin. (Not connected)
21	BHREF	O	BH reference output pin. (Not connected)
22	TBLO	O	Tracking balance output pin.
23	TDO	O	Tracking control output pin.
24	FDO	O	Focus control output pin.
25	SPDO	O	Spindle control output pin.
26	SLDO	O	Thread control output pin.
27	DVREF/FG	I/O	Output driver VREF output pin. FG signal input pin. (Connected to GND)
28	LASER	O	Laser ON/OFF control pin.
29	CONT1	I/O	General-purpose input/output pin 1. (Connected to GND)
30	CONT2	I/O	General-purpose input/output pin 2. (Connected to GND)
31	CONT3	I/O	General-purpose input/output pin 3. (Connected to GND)
32	CONT4	I/O	General-purpose input/output pin 4.
33	CONT5	I/O	General-purpose input/output pin 5. (Not connected)
34	PCK	O	EFM data playback clock monitor pin. Average 4.3218MHz when the phase is locked. (Not connected)
35	C2F	O	C2 flag output pin. (Not connected)
36	VDD	—	Digital power supply pin.
37	DOUT	O	Digital out output pin. (EIAJ format)
38	FSX	O	Output pin for the 7.35kHz synchronization signal divided from the crystal oscillator. (Not connected)

Pin No.	Pin Name	I/O	Description
39	EFLG	O	C1, C2 error correction monitor pin. (Not connected)
40	TEST	I	Test input pin. (Connected to GND)
41	EMPH	I/O	Emphasis pin. Which becomes an input pin after reset and can be controlled externally. This becomes an emphasis monitor pin under control by command. (Not connected)
42	MUTEL	O	L channel mute output pin. (Not connected)
43	MUTER	O	R channel mute output pin. (Not connected)
44	LVDD	—	L channel power supply pin.
45	LCHO	O	L channel output pin.
46	LVSS	—	L channel ground pin.
47	RVSS	—	R channel ground pin.
48	RCHO	O	R channel output pin.
49	RVDD	—	R channel power supply pin.
50	XVDD	—	Crystal oscillator power supply pin.
51	XIN	I	Connections for a 16.9344MHz crystal oscillator pin.
52	XOUT	O	
53	XVSS	—	Crystal oscillator ground pin.
54	ASLRCK	I	L/R clock input pin. (Connected to GND)
55	ASDACK	I	Bit clock input pin. (Connected to GND)
56	ASDFIN	I	L/R channel data input pin. (Connected to GND)
57	LRSY	O	L/R clock output pin. (Not connected)
58	DATACK	O	Bit clock output pin. (Not connected)
59	DATA	O	L/R channel data output pin. (Not connected)
60	16M	O	16.9344MHz output pin. (Not connected)
61	SFSY	O	Subcode frame synchronization signal output pin. This signal falls when the subcode is in the standby state. (Not connected)
62	SBSY	O	Subcode clock synchronization signal output pin. (Not connected)
63	PW	O	Subcode P, Q, R, S, T, U and W output pin. (Not connected)
64	SBCK	I	Subcode readout clock input pin. (Connected to GND)
65	CE	I	Chip enable signal input pin.
66	CL	I	Data transfer clock input pin.
67	DI	I	Data input pin.
68	DO	O	Data output pin.
69	INT	O	Interruption signal output pin. (Not connected)
70	WRQ	O	Interruption signal output pin.
71	RES	I	Reset input pin. This pin must be set low briefly after power is first applied.
72	DRF	O	Focus ON detect pin.
73	VDD5V	—	Microprocessor interface power supply.
74	VSS	—	Digital ground pin.
75	CONT6	I/O	General-purpose input/output pin 6.
76	CONT7	I/O	General-purpose input/output pin 7.
77	V/P	O	Rough servo/phase control automatic switching monitor output pin. "H" for rough servo and "L" for phase servo. (Not connected)

Pin No.	Pin Name	I/O	Description
78	FSEQ	O	Synchronization signal detection output pin. Outputs a high level when the synchronization signal detected from the EFM signal and the internally generated synchronization signal agree. (Not connected)
79	DEFECT	I/O	Defect pin. Which becomes an input pin after reset and can be controlled externally. This becomes the defect monitor pin under control by command. (Not connected)
80	EFMO	O	EFM signal output pin. (Not connected)

MECHANICAL EXPLODED VIEW 1/1

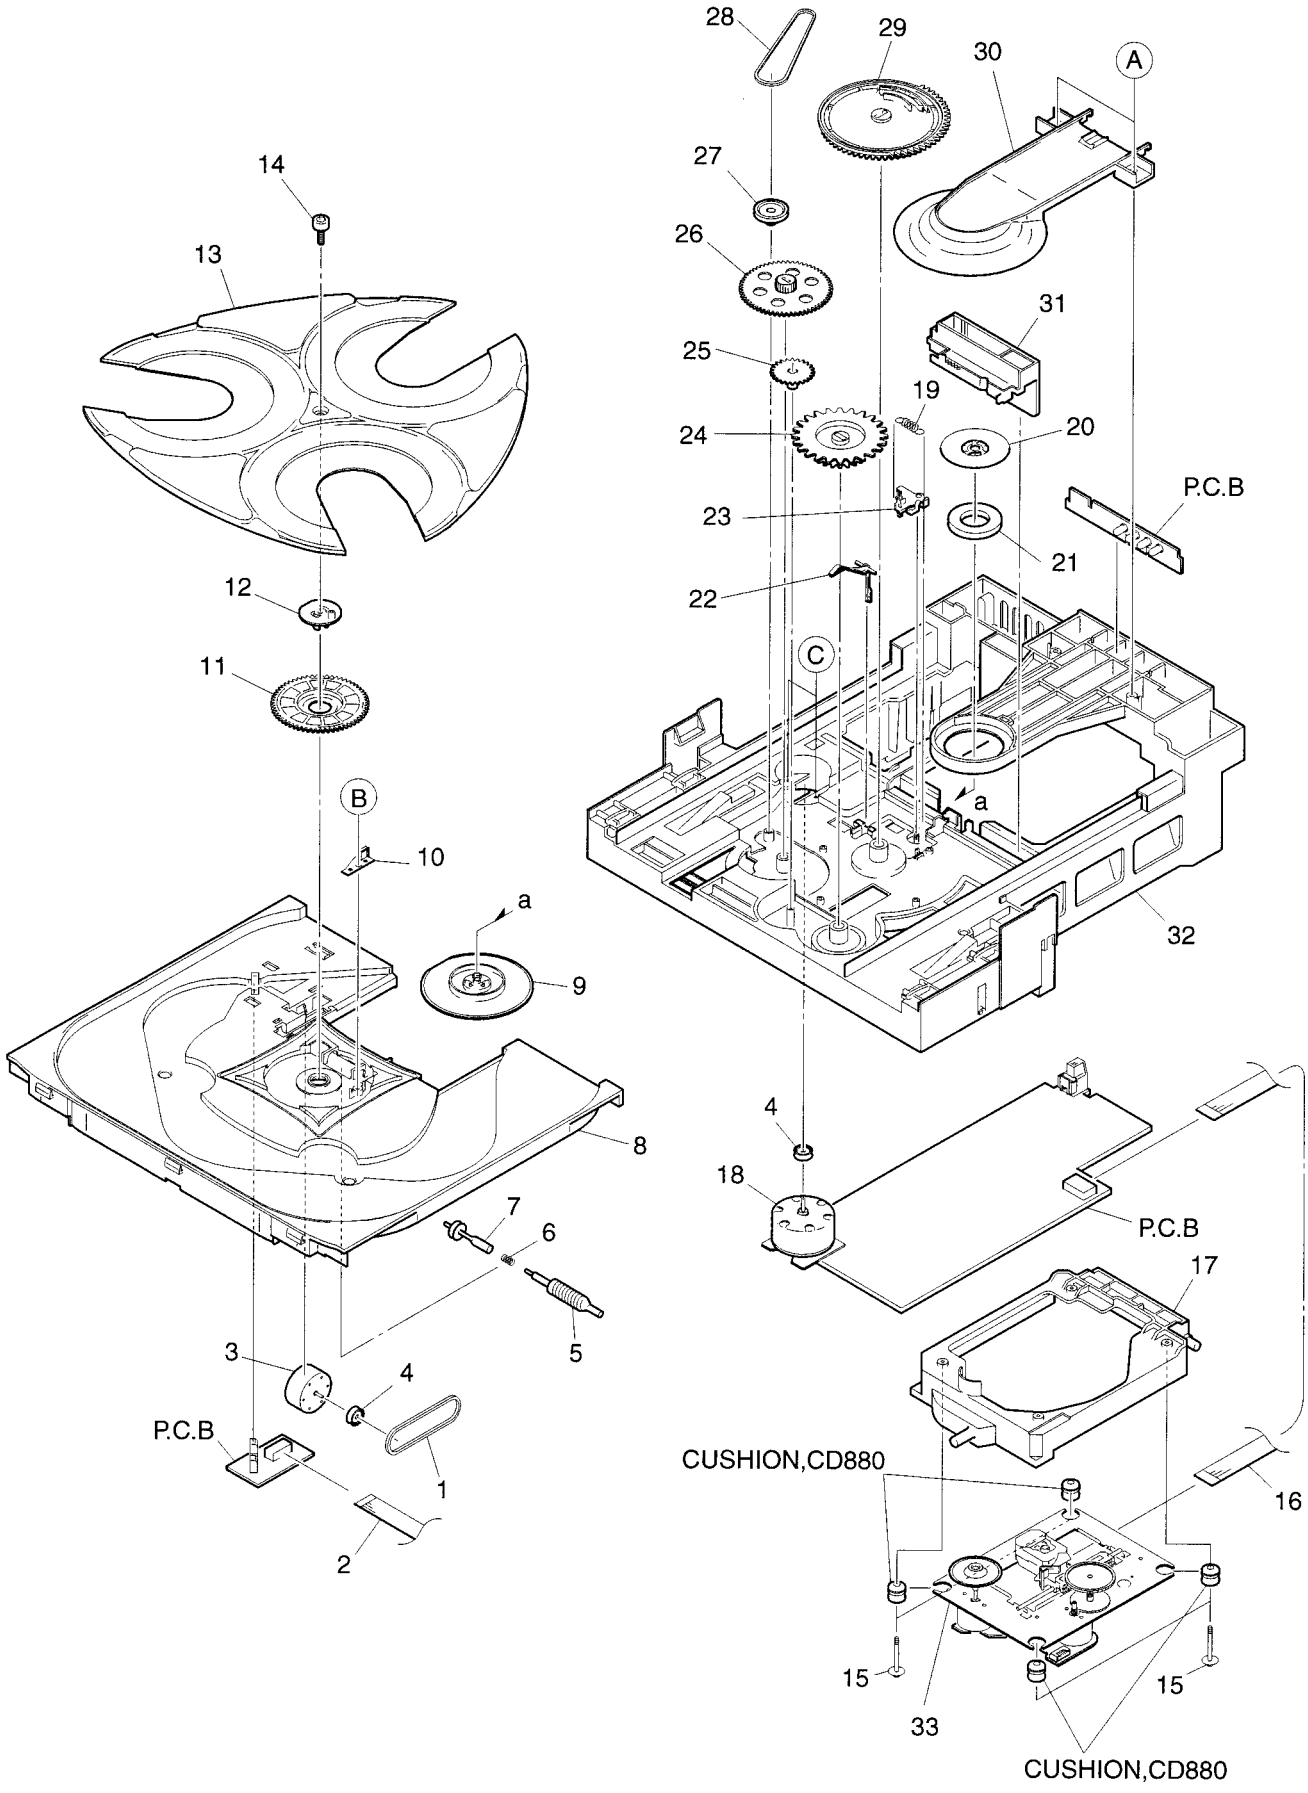

MECHANICAL PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	84-ZG1-225-010		BELT,SQ1.0-63.3
2	84-ZG1-673-010		F-CABLE,5P 1.25 210MM BLACK N <EXCEPT ZD8RN1DM,ZD8RNDM>
2	84-ZG1-672-010		F-CABLE,5P 1.25 210MM WHITE N <ZD8RN1DM,ZD8RNDM>
3	87-045-364-010		MOTOR(BCH3B14)
4	84-ZG1-267-010		PULLEY,LOAD MO 8 <EXCEPT YKZD8RDF,ZD8RD>
4	81-ZG1-212-010		PULLY,LOAD MO<YKZD8RDF,ZD8RD>
5	84-ZG1-238-010		GEAR,WORM N
6	84-ZG1-248-010		SPR-C,WORM
7	84-ZG1-239-210		PULLY,WORM N
8	84-ZG1-008-210		TRAY,NO3<ZD8RD>
8	8A-ZG1-001-010		TRAY,NO3 BLU<EXCEPT ZD8RD>
9	8A-ZG1-210-010		HLDR,MAGNET 23<YKZD8RDF>
9	84-ZG1-243-210		HLDR,MAGNET N(J) <YZD8RDJM,ZD8RMDJM,YZD8RMDJM>
9	84-ZG1-289-010		HLDR,MAGNET NAT<ZD8RNDM>
9	81-ZG1-277-310		HLDR,MAGNET N <ZD8RN1DM,ZD8RDM,YZD8RDM,ZD8RD>
10	84-ZG1-259-010		SPR-P,WORM
11	84-ZG1-221-010		GEAR,MAIN TT<YKZD8RDF>
11	84-ZG1-269-010		GEAR,MAIN TT 4<EXCEPT YKZD8RDF>
12	84-ZG1-224-010		LEVER,TT<EXCEPT ZD8RNDM>
12	84-ZG1-288-010		LEVER,TT NAT<ZD8RNDM>
13	8A-ZG1-002-010		TURN TABLE,NO1 BLU<EXCEPT ZD8RD>
13	84-ZG1-005-210		TURNTABLE,NO1(*)<ZD8RD>
14	81-ZG1-239-010		S-SCREW,TT
15	8A-ZG1-201-010		S-SCREW,MECH 880
16	85-NFT-611-110		FF-CABLE 16P-1.0
17	84-ZG1-299-210		HLDR,MECHA NO3<EXCEPT ZD8RNDM>
17	8A-ZG1-203-010		HLDR,MECHA NO3 NAT<ZD8RNDM>
18	87-045-305-010		MOTOR, RF-500TB DC-5V (2MA)
19	84-ZG1-211-010		SPR-E CAM S
20	84-ZG1-285-010		PLATE,MAGNET BLK<ZD8RN1DM>
20	81-ZG1-255-110		PLATE,MAGNET MK2<EXCEPT ZD8RN1DM>
21	83-ZG3-604-010		RING,MAG 2
22	83-ZG3-213-010		LVR,SW
23	84-ZG1-208-210		LEVER,CAM<YKZD8RDF>
23	84-ZG1-266-010		LEVER,CAN 8<EXCEPT YKZD8RDF>
24	84-ZG1-205-210		GEAR,TRAY (*)
25	81-ZG1-291-110		GEAR,TRAY RELAY NO3
26	84-ZG1-206-110		GEAR,RELAY<YKZD8RDF>
26	84-ZG1-274-010		GEAR,RELAY 8<EXCEPT YKZD8RDF>
27	84-ZG1-207-010		PULLEY,RELAY
28	84-ZG1-209-010		BELT,SQ1.8-117.7
29	84-ZG1-203-410		GEAR,MAIN CAM<ZD8RNDM>
29	84-ZG1-215-410		GEAR,MAIN CAM BLU<EXCEPT ZD8RNDM>
30	84-ZG1-011-010		REFLECTOR,CD <EXCEPT ZD8RN1DM,ZD8RNDM>
31	84-ZG1-216-310		SLIDE,MECHA CAM YEL <EXCEPT ZD8RNDM>
31	84-ZG1-204-310		SLIDER,MECHA CAM<ZD8RNDM>
32	84-ZG1-286-010		CHAS,MECHA NAT<ZD8RNDM>
32	84-ZG1-201-410		CHAS,MECHA<EXCEPT ZD8RNDM>
33	M8-ZZK-C90-070		KSM-880CAB
A	87-067-703-010		TAPPING SCREW, BVT2+3-10 <EXCEPT ZD8RN1DM,ZD8RNDM>
B	87-067-981-010		BVT2+3-6 BLK
C	87-251-070-410		U+2.6-3

COLOR NAME TABLE

Basic color symbol	Color	Basic color symbol	Color	Basic color symbol	Color
B	Black	C	Cream	D	Orange
G	Green	H	Gray	L	Blue
LT	Transparent Blue	N	Gold	P	Pink
R	Red	S	Silver	ST	Titan Silver
T	Brown	V	Violet	W	White
WT	Transparent White	Y	Yellow	YT	Transparent Yellow
LM	Metallic Blue	LL	Light Blue	GT	Transparent Green
LD	Dark Blue	DT	Transparent Orange		

CD MECHANISM EXPLODED VIEW 1/1

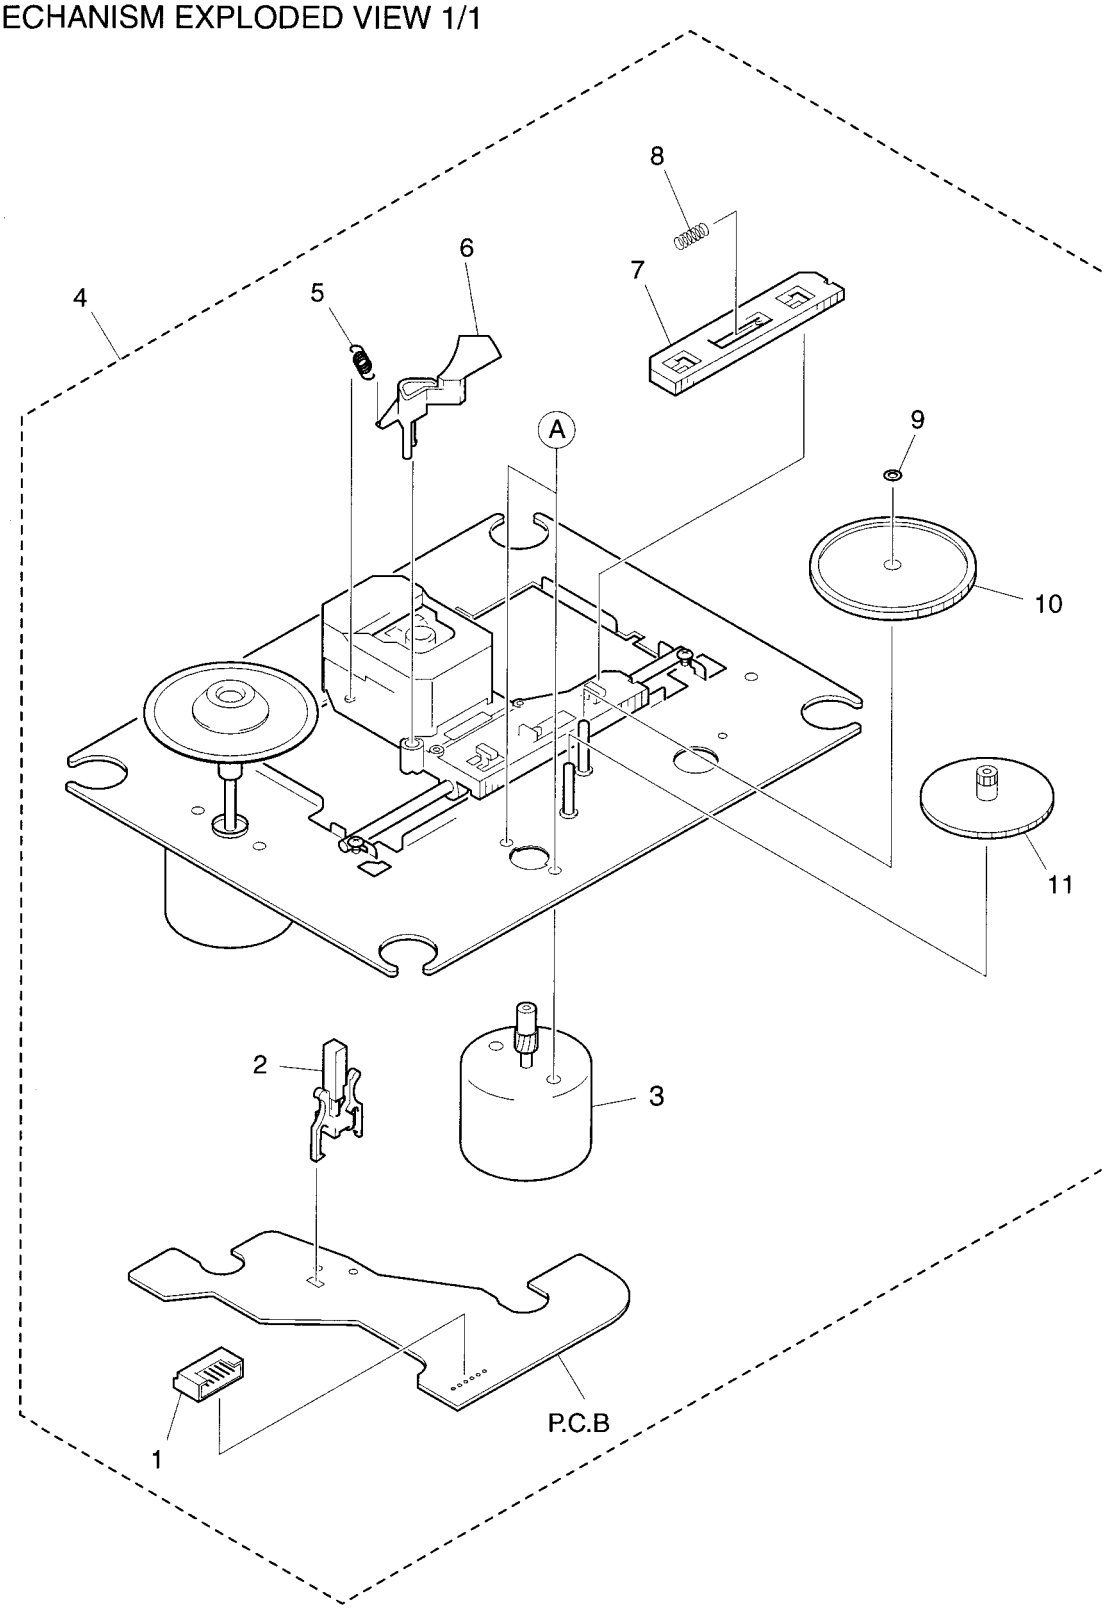

CD MECHANISM PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	91-564-722-110		CONN,PIN 6P
2	91-572-085-110		LEAF SWITCH
3	9X-264-655-010		SL MOTORR ASSY
4	M8-ZZK-C90-070		KSM-880CAB
5	92-647-416-020		SPRING EXTENSION
6	92-647-595-020		SHUTTER B
7	92-647-732-010		NS SLIDE RACK
8	92-647-742-010		SPRING COMPRESSION
9	93-321-813-110		POLI WASHER
10	92-647-407-010		GEAR A
11	92-647-408-020		GEAR B
A	93-713-786-510		SCREW,+P2-3

REFERENCE NAME LIST

ELECTRICAL SECTION

DESCRIPTION	REFERENCE NAME
ANT	ANTENNAS
C-	CHIP
C-CAP	CAP, CHIP
C-CAP TN	CAP, CHIP TANTALUM
C-COIL	COIL, CHIP
C-DI	DIODE, CHIP
C-DIODE	DIODE, CHIP
C-FET	FET, CHIP
C-FOTR	FILTER, CHIP
C-JACK	JACK, CHIP
C-LED	LED, CHIP
C-RES	RES, CHIP
C-SFR	SFR, CHIP
C-SLIDE SW	SLIDE SWITCH, CHIP
C-SW	SWITCH, CHIP
C-TR	TRANSISTOR, CHIP
C-VR	VOLUME, CHIP
C-ZENER	ZENER, CHIP
CAP, CER	CAP, CERA-SOL
CAP, E	CAP, ELECT
CAP, M/F	CAP, FILM
CAP, TC	CAP, CERA-SOL
CAP, TC-U	CAP, CERA-SOL SS
CAP, TN	CAP, TANTALUM
CERA FIL	FILTER, CERAMIC
CF	FILTER, CERAMIC
DL	DELAY LINE
E/CAP	CAP, ELECT
FILT	FILTER
FLTR	FILTER
FUSE RES	RES, FUSE
MOT	MOTOR
P-DIODE	PHOTO DIODE
P-SNSR	PHOTO SENSER
P-TR	PHOTO TRANSISTOR
POLY VARI	VARIABLE CAPACITOR
PPCAP	CAP, PP
PT	POWER TRANSFORMER
PTR, RES	PTR, MELF
RC	REMOTE CONTROLLER
RES NF	RES, NON-FLAMMABLE
RESO	RESONATOR
SHLD	SHIELD
SOL	SOLENOID
SPKR	SPEAKER
SW, LVR	SWITCH, LEVER
SW, RTRY	SWITCH, ROTARY
SW, SL	SWITCH, SLIDE
TC CAP	CAP, CERA-SOL
THMS	THERMISTOR
TR	TRANSISTOR
TRIMMER	CAP, TRIMMER
TUN-CAP	VARIABLE CAPACITOR
VIB, CER	RESONATOR, CERAMIC
VIB, XTAL	RESONATOR, CRYSTAL
VR	VOLUME
ZENER	DIODE, ZENER

MECHANICAL SECTION

DESCRIPTION	REFERENCE NAME
ADHESHIVE	SHEET ADHESHIVE
AZ	AZIMUTH
BAR-ANT	BAR-ANTENNA
BAT	BATTERY
BATT	BATTERY
BRG	BEARING
BTN	BUTTON
CAB	CABINET
CASS	CASSETTE
CHAS	CHASSIS
CLR	COLLAR
CONT	CONTROL
CRSR	CURSOR
CU	CUSHION
CUSH	CUSHION
DIR	DIRECTION
DUBB	DUBBING
FL	FRONT LOADING
FLY-WHL	FLYWHEEL
FR	FRONT
FUN	FUNCTION
G-CU	G-CUSHION
HDL	HANDOL
HIMERON	CLOTH
HINGE, BAT	HINGE, BATTERY
HLDR	HOLDER
HT-SINK	HEAT SINK
IB	INSTRUCTION BOOKLET
IDLE	IDLER
IND, L-R	INDICATOR, L-R
KEY, CONT	KEY, CONTROL
KEY, PRGM	KEY, PROGRAM
KNOB, SL	KNOB, SLIDE
LBL	LABEL
LID, BATT	LID, BATTERY
LID, CASS	LID, CASSETTE
LVR	LEVER
P-SP	P-SPRING
PANEL, CONT	PANEL, CONTROL
PANEL, FR	PANEL, FRONT
PRGM	PROGRAM
PULLY, LOAD MO	PULLY, LOAD MOTOR
RBN	RIBBON
S-	SPECIAL
SEG	SEGMENT
SH	SHEET
SHLD-SH	SHIELD-SHEET
SL	SLIDE
SP	SPRING
SP-SCREW	SPECIAL-SCREW
SPACER, BAT	SPACER, BATTERY
SPR	SPRING
SPR-P	P-SPRING
SPR-PC-PUSH	P-SPRING, C-PUSH
T-SP	T-SPRING
TERM	TERMINAL
TRIG	TRIGGER
TUN	TUNING
VOL	VOLUME
W	WASHER
WHL	WHEEL
WORM-WHL	WORM-WHEEL